

APPLICATION GUIDE

CONDITION MONITORING

XM-120 & XM-121 MACHINE VIBRATION MONITOR



The XM-120 (Standard) and the XM-121 (Low Frequency) Dynamic Measurement Modules are intelligent 2-channel general-purpose monitors that support the measurement of dynamic inputs such as vibration, pressure and strain. The modules also have a third channel for tachometer inputs. They are well suited for monitoring shaft, casing and pedestal vibration in almost all rotating equipment applications. The two modules are identical except for their high pass filter selections. The XM-120 supports shaft eccentricity monitoring when its alternate XM-120E firmware is loaded, and the XM-121 supports absolute shaft measurements when its alternate XM-121A firmware is loaded.


Like the XM-120, the XM-122 provides onboard processing of critical vibration parameters, advanced alarm and relay logic, easy installation and superior serviceability. However, unlike the XM-120, the XM-122 is not a real-time protection monitor.

INDUSTRIES

- Automotive
- Discrete Manufacturing
- Food Processing
- Metals
- Mining
- Marine
- Oil & Gas
- Paper
- Power
- Water/ Waste Water

VERTICAL PUMP & MOTOR

LOW VOLTAGE (440 VOLT)
ELECTRIC INDUCTION MOTOR

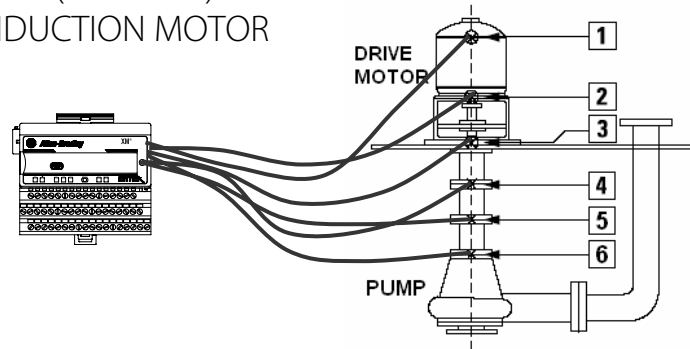

Accelerometers: 1 per bearing location. 1, 2, 3, & 6 installed perpendicular to the discharge, 4 & 5 are optional.

This document provides a general guidance in how to apply an XM Series condition monitoring system to the specified class of equipment. The objective is to implement a monitoring solution that will identify the majority of faults common to this class of machinery at the earliest indication of the fault and to do this for the lowest possible total cost. Contact your local authorized Allen-Bradley distributor or Rockwell Automation sales office to customize a system more specific to your application.

VIBRATION CHARACTERISTICS				
	Fault	Amplitude	Frequency	Remarks
1	Unbalance	Proportional to unbalance (in radial direction).	1 x RPM	Most Common cause of vibration.
2	Misalignment of couplings or bearings. Bent Shaft.	Large in axial direction, 50% or more of radial vibration.	1 x RPM usual, 2 & 3 x RPM sometimes.	Best found by appearance of large axial vibration. Use dial indicators or other method for positive diagnosis.
3	Bad bearings anti-friction type	Unsteady – use velocity measurement if possible	Very high several times RPM	Bearing responsible most likely the one nearest the point of largest high frequency vibration.
4	Bad bearings fluid film type	radial	Many times RPM harmonics	Advanced bearing wear results in multiple harmonics of running speed.
5	Mechanical Loosenes	Large in radial direction. 1 x rpm usually largest peak	1 x RPM and sometimes multiples	Looseness between machine and plates or foundation and poor grouting. Look for loose pillow block bolts or cracks. Distortion of the frame or base referred to as soft foot.
6	Shaft looseness		Many RPM harmonics	Usually accompanied by unbalance and/or misalignment.
7	Electrical	Disappears when power is turned off	1 x RPM or 1 or 2 x synchronous frequency	If vibration amplitude drops of instantly when power is turned off cause is electrical

LISTEN.
THINK.
SOLVE.™

TYPICAL OPERATING SPEEDS 48-600 RPM

YOU WILL NEED: *		
Catalog #	Description	QTY
1440-VLF02-01RA	XM-121 Low Frequency Vibration Module	2
1440-TB-A	Terminal Base for XM-120 / XM-121 / XM-122	2
EK-43784**	Model 9100 General Purpose Accelerometer	4
EK-468011	32' Accelerometer Cable (splash proof)	4
1440-SCDB9-FXM2	XM Serial Communications Cable	1

* Additional requirements may include power supply, enclosure, power or DeviceNet cables, junction boxes, sensor adhesives / mounting tools, etc.

** For measurements taken below grade, use Model 9000B Integral Cable General Purpose Accelerometer (P/N EK-437821)

STANDARD CHANNEL SETTINGS			
Parameter	Setting	Parameter	Setting
Input Unit	g's	HP Filter	0.8 Hz
Fault Low	4	Sampling Mode	Asynchronous
Fault High	16	FMAX	30,000 CPM [500 Hz]
Full Scale*	2 [0.5]	Sensitivity	500 mV/g
Output Unit	lps [mm/s]	Num Lines	400
Signal Detection	Calc. Peak [RMS]	Num Averages	4

* Start with default value - use Auto Scale Function to set once machinery is operating.

STANDARD BAND SETTINGS				LIMITS*	
Fault	Parameter	Min. Freq (CPM)	Max. Freq (CPM)	Alert** (lps) [mm/s]	Danger** (lps) [mm/s]
MOTOR					
1, 2, 4, 6	Band 1	0.3 x RPM	1.2 x RPM	0.180 [4.6]	0.270 [6.9]
2, 4	Band 2	1.2 x RPM	3.2 x RPM	0.070 [1.8]	0.105 [2.7]
3	Band 3	3.2 x RPM	12.2 x RPM	0.050 [1.3]	0.075 [1.9]
3	Band 4	12.2 x RPM	FMAX	0.030 [0.8]	0.045 [1.1]
	Overall			0.200 [5.1]	0.300 [7.6]
PUMP					
1, 2, 4, 6	Band 1	0.3 x RPM	1.2 x RPM	0.180 [4.6]	0.270 [6.9]
2, 4	Band 2	1.2 x RPM	3.2 x RPM	0.070 [1.8]	0.105 [2.7]
3, 5	Band 3***	VPF**** - (1 x RPM)	VPF + (1 x RPM)	0.120 [1.3]	0.180 [1.9]
3	Band 4	10.8 x RPM	FMAX*****	0.056 [0.8]	0.084 [1.1]
	Overall			0.200 [5.1]	0.300 [7.6]

* Raise Overall Alarm Limits by 0.05 lps [1.3 mm/s] for every 5 feet above grade.

** For accurate alarm limits, divide RPM by 600 and multiply by standard alarm value (value shown).

*** If VPF is unknown use: Min Freq = 3.2 x RPM, Max Freq = 10.8 x RPM

**** Vane Pass Frequency (VPF) = Running Speed x Number of vanes

***** See Standard Channel Settings for correct setting of FMAX.

Note: Square brackets ([]) indicate the International System of Units.

Note: Spike Energy is a measure of energy generated by the repetitive impacts of rolling elements against small cracks or defects in a bearing. Spike Energy is a high frequency vibration measurement that is sensitive to machinery dynamics, accelerometer designs, mounting conditions and measurement locations. The most meaningful use of Spike Energy is a trended overall measurement. When Spike Energy readings are taken, one or more velocity parameters should also be trended so that the correlation between them can be established over time. When the trends of Spike Energy increase, it usually indicates that a problem with bearings, gears or other components may start to develop. Establish a baseline value for your machinery. Spike Energy increases of 50% or greater are usually considered significant although this may vary depending upon the type of machine and process in which it is part.

Important: When determining frequencies that should be monitored and alarm levels, the recommendations provided should only be used as general guidelines. Measurement parameters and alarm levels should be determined by the equipment OEM, industry standards such as ISO, and the actual operating characteristics of your equipment.

TYPICAL OPERATING SPEEDS 600-1200 RPM

YOU WILL NEED: *		
Catalog #	Description	QTY
1440-VSE02-01RA**	XM-122 gSE Vibration Module	2
1440-TB-A	Terminal Base for XM-120 / XM-121 / XM-122	2
EK-43784***	Model 9100 General Purpose Accelerometer	4
EK-468011	32' Accelerometer Cable (splash proof)	4
1440-SCDB9-FXM2	XM Serial Communications Cable	1

* Additional requirements may include power supply, enclosure, power or DeviceNet cables, junction boxes, sensor adhesives / mounting tools, etc.

** The XM-122 should not be used for real time protection. Use XM-120/XM121 when real time protection is required.

*** For measurements taken below grade use Model 9000B Integral Cable General Purpose Accelerometer (P/N EK-43782I).

STANDARD CHANNEL SETTINGS				g'SE Channel Settings	
Parameter	Setting	Parameter	Setting	Parameter	Setting
Input Unit	g's	HP Filter	5 Hz	g'SE Full Scale*	2 [0.5]
Fault Low	4	Sampling Mode	Asynchronous	High Pass Filter	5000 Hz
Fault High	16	FMAX	60,000 CPM	FMAX	30,000 CPM
Full Scale*	2 [0.5]	Sensitivity	100 mV/g	Num Lines	400
Output Unit	ips [mm/s]	Num Lines	400	Window Type	Hanning
Signal Detection	Calc. Peak [RMS]	Num Averages	4	Num Averages	4

* Start with default value - use Auto Scale Function to set once machinery is operating.

STANDARD BAND SETTINGS				LIMITS*	
Fault	Parameter	Min. Freq (CPM)	Max. Freq (CPM)	Alert (ips) [mm/s]	Danger (ips) [mm/s]
MOTOR					
1, 2, 4, 6	Band 1	0.3 x RPM	1.2 x RPM	0.180 [4.6]	0.270 [6.9]
2, 4	Band 2	1.2 x RPM	3.2 x RPM	0.070 [1.8]	0.105 [2.7]
3	Band 3	3.2 x RPM	12.2 x RPM	0.050 [1.3]	0.075 [1.9]
3	Band 4	12.2 x RPM	FMAX	0.030 [0.8]	0.045 [1.1]
	Overall			0.200 [5.1]	0.300 [7.6]
PUMP					
1, 2, 4, 6	Band 1	0.3 x RPM	1.2 x RPM	0.180 [4.6]	0.270 [6.9]
2, 4	Band 2	1.2 x RPM	3.2 x RPM	0.070 [1.8]	0.105 [2.7]
3, 5	Band 3**	VPF*** - (1 x RPM)	VPF + (1 x RPM)	0.120 [1.3]	0.180 [1.9]
3	Band 4	10.8 x RPM	FMAX	0.056 [0.8]	0.084 [1.1]
	Overall			0.200 [5.1]	0.300 [7.6]

* Raise Overall Alarm Limits by 0.05 ips [1.3 mm/s] for every 5 feet above grade.

** If VPF is unknown use: Min Freq = 3.2 x RPM, Max Freq = 10.8 x RPM

*** Vane Pass Frequency (VPF) = Running Speed x Number of vanes

Note: Square brackets ([]) indicate the International System of Units.

Note: Spike Energy is a measure of energy generated by the repetitive impacts of rolling elements against small cracks or defects in a bearing. Spike Energy is a high frequency vibration measurement that is sensitive to machinery dynamics, accelerometer designs, mounting conditions and measurement locations. The most meaningful use of Spike Energy is a trended overall measurement. When Spike Energy readings are taken, one or more velocity parameters should also be trended so that the correlation between them can be established over time. When the trends of Spike Energy increase, it usually indicates that a problem with bearings, gears or other components may start to develop.

Establish a baseline value for your machinery. Spike Energy increases of 50% or greater are usually considered significant although this may vary depending upon the type of machine and process in which it is part.

Important: When determining frequencies that should be monitored and alarm levels, the recommendations provided should only be used as general guidelines. Measurement parameters and alarm levels should be determined by the equipment OEM, industry standards such as ISO, and the actual operating characteristics of your equipment.

TYPICAL OPERATING SPEEDS 1200 - 3600 RPM

YOU WILL NEED: *		
Catalog #	Description	QTY
1440-VSE02-01RA**	XM-122 gSE Vibration Module	2
1440-TB-A	Terminal Base for XM-120 / XM-121 / XM-122	2
EK-43784***	Model 9100 General Purpose Accelerometer	4
EK-468011	32' Accelerometer Cable (splash proof)	4
1440-SCDB9-FXM2	XM Serial Communications Cable	1

* Additional requirements may include power supply, enclosure, power or DeviceNet cables, junction boxes, sensor adhesives / mounting tools, etc.

** The XM-122 should not be used for real time protection. Use XM-120/XM-121 when real time protection is required.

*** For measurements taken below grade use Model 9000B Integral Cable General Purpose Accelerometer (P/N EK-437821).

STANDARD CHANNEL SETTINGS				g'SE Channel Settings	
Parameter	Setting	Parameter	Setting	Parameter	Setting
Input Unit	g's	HP Filter	5 Hz	g'SE Full Scale*	2 [0.5]
Fault Low	4	Sampling Mode	Asynchronous	High Pass Filter	5000 Hz
Fault High	16	FMAX > 1700 RPM < 1700 RPM	120,000 CPM 90,000 CPM	FMAX > 1700 RPM < 1700 RPM	120,000 CPM 90,000 CPM
Full Scale*	2 [0.5]			Num Lines	800
Output Unit	Ips [mm/s]	Num Lines	400	Window Type	Hanning
Signal Detection	Calc. Peak [RMS]	Num Averages	4	Num Averages	4

* Start with default value - use Auto Scale Function to set once machinery is operating.

STANDARD BAND SETTINGS				LIMITS*	
Fault	Parameter	Min. Freq (CPM)	Max. Freq (CPM)	Alert	Danger
MOTOR					
1, 2, 4, 6	Band 1	0.3 x RPM	1.2 x RPM	0.180 [4.6]	0.270 [6.9]
2, 4	Band 2	1.2 x RPM	3.2 x RPM	0.070 [1.8]	0.105 [2.7]
3	Band 3	3.2 x RPM	12.2 x RPM	0.050 [1.3]	0.075 [1.9]
3	Band 4	12.2 x RPM	FMAX	0.030 [0.8]	0.045 [1.1]
	Overall			0.200 [5.1]	0.300 [7.6]
PUMP					
1, 2, 4, 6	Band 1	0.3 x RPM	1.2 x RPM	0.180 [4.6]	0.270 [6.9]
2, 4	Band 2	1.2 x RPM	3.2 x RPM	0.070 [1.8]	0.105 [2.7]
3, 5	Band 3**	VPF*** - (1 x RPM)	VPF + (1 x RPM)	0.120 [1.3]	0.180 [1.9]
3	Band 4	10.8 x RPM	FMAX	0.056 [0.8]	0.084 [1.1]
	Overall			0.200 [5.1]	0.300 [7.6]

* Raise Overall Alarm Limits by 0.05 ips [1.3 mm/s] for every 5 feet above grade.

** If VPF is unknown use: Min Freq = 3.2 x RPM, Max Freq = 10.8 x RPM

*** Vane Pass Frequency (VPF) = Running Speed x Number of vanes

Note: Square brackets ([]) indicate the International System of Units.

Note: Spike Energy is a measure of energy generated by the repetitive impacts of rolling elements against small cracks or defects in a bearing. Spike Energy is a high frequency vibration measurement that is sensitive to machinery dynamics, accelerometer designs, mounting conditions and measurement locations. The most meaningful use of Spike Energy is a trended overall measurement. When Spike Energy readings are taken, one or more velocity parameters should also be trended so that the correlation between them can be established over time. When the trends of Spike Energy increase, it usually indicates that a problem with bearings, gears or other components may start to develop.

Establish a baseline value for your machinery. Spike Energy increases of 50% or greater are usually considered significant although this may vary depending upon the type of machine and process in which it is part.

Important: When determining frequencies that should be monitored and alarm levels, the recommendations provided should only be used as general guidelines. Measurement parameters and alarm levels should be determined by the equipment OEM, industry standards such as ISO, and the actual operating characteristics of your equipment.

www.rockwellautomation.com

Power, Control and Information Solutions

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation SA/NV, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846