

## *Installation Instructions*

# MicroLogix™ 1500 Programmable Controller Base Units

(Catalog Numbers 1764-24AWA, 1764-24BWA, and  
1764-28BWB)

---

[http://literature.rockwellautomation.com/idc/groups/literature/documents/in/1764-in001\\_-mu-p.pdf](http://literature.rockwellautomation.com/idc/groups/literature/documents/in/1764-in001_-mu-p.pdf)

---

**FR**

Cette publication est disponible en français sous forme électronique (fichier PDF). Pour la télécharger, rendez-vous sur la page Internet indiquée ci-dessus.

**IT**

Questa pubblicazione è disponibile in Italiano in formato PDF. Per scaricarla collegarsi al sito Web indicato sopra.

**DE**

Diese Publikation ist als PDF auf Deutsch verfügbar. Gehen Sie auf die oben genannte Web-Adresse, um nach der Publikation zu suchen und sie herunterzuladen.

**ES**

Esta publicación está disponible en español como PDF. Diríjase a la dirección web indicada arriba para buscar y descarga esta publicación.

**PT**

Esta publicação está disponível em português como PDF. Vá ao endereço web que aparece acima para encontrar e fazer download da publicação.

---





## *Installation Instructions*

# MicroLogix™ 1500 Programmable Controller Base Units

(Catalog Numbers 1764-24AWA, 1764-24BWA, and  
1764-28BXB)

Inside...	
For More Information .....	4
Overview .....	5
Base Unit Description .....	6
Hazardous Location Considerations .....	7
Mounting the Controller .....	9
Wiring the Controller .....	13
Specifications .....	17

## For More Information

**Table 1 Related Publications**

<b>For</b>	<b>Refer to this Document</b>	<b>Pub. No.</b>
A more detailed description of how to install and use your MicroLogix 1500 programmable controller.	MicroLogix 1500 Programmable Controllers User Manual	1764-UM001A-US-P
A reference manual that contains data and function files, instruction set, and troubleshooting information for MicroLogix 1200 and MicroLogix 1500.	MicroLogix 1200 and MicroLogix 1500 Instruction Set Reference Manual	1762-RM001B-US-P
More information on proper wiring and grounding techniques.	Industrial Automation Wiring and Grounding Guidelines	1770-4.1

If you would like a manual, you can:

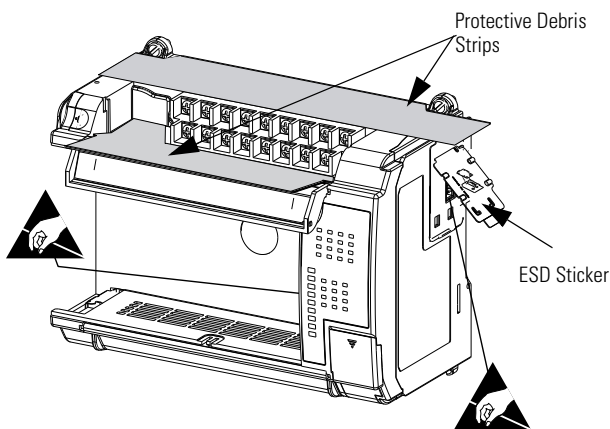
- download a free electronic version from the internet:  
<http://literature.rockwellautomation.com>
- purchase a printed manual by contacting your local Allen-Bradley distributor or Rockwell Automation representative

## Overview

Install your controller using these installation instructions.

**ATTENTION**

Do not remove protective debris strips until after the base and all other equipment in the panel near the base is mounted and wiring is complete. Once wiring is complete, remove protective debris strips and install processor unit. Failure to remove strips before operating can cause overheating.

**ATTENTION**

Be careful of metal chips when drilling mounting holes for your controller or other equipment within the enclosure or panel. Drilled fragments that fall into the controller could cause damage. Do not drill holes above a mounted controller if the protective debris strips have been removed.

**ATTENTION**

Electrostatic discharge can damage semiconductor devices inside the base unit. Do not touch the connector pins or other sensitive areas.





































