

# Kinetix 6000 Firmware Label Kit



These instructions illustrate the application of the firmware label to the following modules after the drive firmware has been updated.


Catalog Number				
2094-AC05-MP5	2094-BC01-MP5	2094-AMP5	2094-BMP5	2094-BSP2
2094-AC05-M01	2094-BC01-M01	2094-AM01	2094-BM01	
2094-AC09-M02	2094-BC02-M02	2094-AM02	2094-BM02	
2094-AC16-M03	2094-BC04-M03	2094-AM03	2094-BM03	
2094-AC32-M05	2094-BC07-M05	2094-AM05	2094-BM05	

## ATTENTION



To avoid personal injury or damage to the equipment, remove all power to the Kinetix 6000 system before applying the firmware label. Apply the label to the module where the label will not interfere with module operation.

Record the firmware version on the label. Remove the backing from the label and apply to the module. As an example, place the label as shown below.

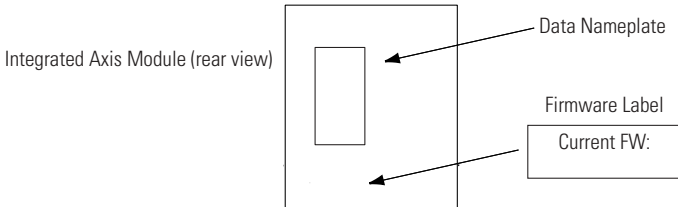

Publication 2094-IN010A-EN-P - July 2005

Copyright 2005 Rockwell Automation, Inc. All rights reserved. Printed in the USA