



Installation Instructions

System Requirements

Ultraware is designed to run on Windows[®] 98 or 2000, Windows XP[®] or Windows NT[®] 4.0, Service Pack 6. To ensure that Ultraware works correctly, we recommend, at minimum, the following hardware and software:

- IBM compatible PC with Pentium[®] or higher microprocessor
- Windows98, 2000 or Windows NT 4.0, Service Pack 6 operating system (or higher)
- Internet Explorer (IE) browser version 5.01 or higher
- 24 MB RAM (or higher)
- 50 MB hard disk space
- VGA monitor running in standard 640 x 480 resolution (SVGA 600 x 800 resolution recommended)
- One CD ROM drive
- Windows-compatible mouse with mouse driver
- One serial port (com1, com2, com3 or com4) to communicate with the drive
- A second serial port if using a serial mouse

Installing Ultraware

Your Ultraware software comes on a single CD ROM disc. The software is a self-installing executable file that you load on your computer's hard disk. When you insert the Ultraware CD ROM disc in your computer's CD ROM drive, the installation process automatically begins if your computer is configured for CD ROM autorun. If the installation does not run automatically, you will need to follow the procedures for manual installation.

Automatic Installation

To automatically install Ultraware from the CD ROM:

1. Start Windows.
2. Insert the Ultraware CD ROM disc in the CD ROM drive. The installation process automatically runs.
3. Follow the instructions shown on the installation program windows to complete the installation process.

Unless you change the default path, Ultraware files are placed in the following path:

C:\Program Files\Rockwell Automation\Ultraware

Manual Installation

To manually install Ultraware from CD ROM:

1. From the Windows Taskbar, select the **Start** button. The Start menu appears.
2. Select **Run**. The Run dialog box appears.
3. In the *Open* field, type the name of the CD ROM drive, followed by a backslash, and then **setup.exe**. for example, type: **d:\setup.exe**.
4. Select **OK**. A window containing installation instructions appears.
5. Follow the instructions shown on the installation program to complete the installation process.

Unless you change the default path, Ultraware files are placed in the following path:

C:\Program Files\Rockwell Automation\Ultraware

For more information refer to our web site at www.ab.com/motion.

Windows, Windows XP, and Windows NT are registered trademarks of Microsoft Corporation.
Pentium is a registered trademark of Intel Corporation.

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 2098-IN002B-EN-P — April 2004

Supersedes Publication 2098-IN002A-EN-P — June 2000

PN 0013-1081-002

© 2004 Rockwell International Corporation. Printed in the U.S.A.