



PowerFlex[®] DC Drive - Frame A Switching Power Supply Circuit Board Fuse Replacement




ATTENTION: To avoid an electric shock hazard, ensure that all power to the drive has been removed before performing the following.

What This Kit Includes

- One Replacement Fuse:
 - Frame A drives with Switching Power Supply circuit board, SW1-31, rev. H & below - One 5x20mm, 1A 250V Fuse
 - Frame A drives with Switching Power Supply circuit board, SW1-31, rev. I & above - One 5x20mm, 2.5A 250V Fuse
- Fuse holder cap


What You Need to Do

1. Remove and lock-out all incoming power to the drive.

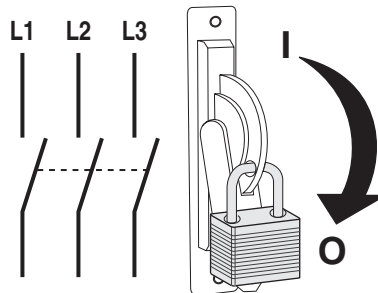

2. On the top of the drive, remove the fuse by inserting a screwdriver in the slot on the top of the fuse holder, carefully pushing down and turning the fuse counterclockwise. When the fuse holder releases, remove the holder and fuse.
3. Insert the new fuse into the holder and replace the fuse holder cap.

Top View of Drive

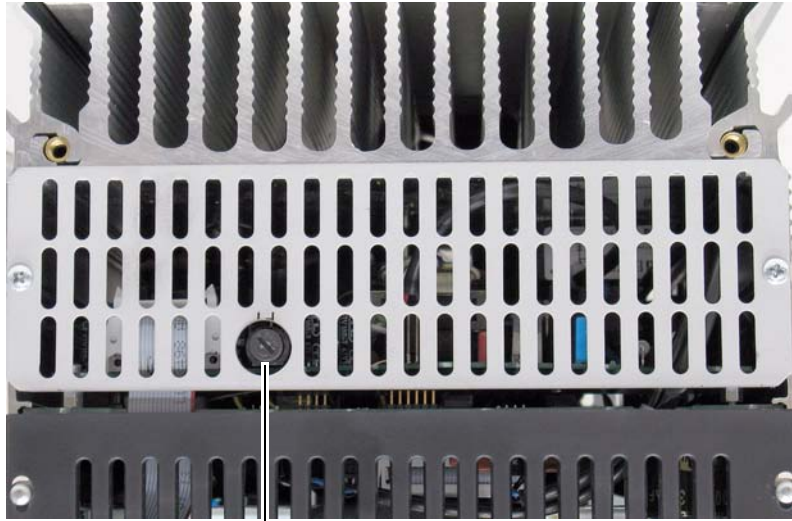

Remove fuse holder to replace fuse



www.rockwellautomation.com

Power, Control and Information Solutions

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
Europe/Middle East/Africa: Rockwell Automation SA/NV, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 20P-IN035B-EN-P - December 2009
Supersedes 20P-IN035A-EN-P - March 2009

Copyright © 2009 Rockwell Automation. All rights reserved. Printed in USA.