



PowerFlex[®] DC Drive - Frame B Field Circuit Fuse Replacement




ATTENTION: To avoid an electric shock hazard, ensure that all power to the drive has been removed before performing the following.

What This Kit Includes

- Two 10x38mm, 25A 600V fuses
- Two fuse holder caps


What You Need to Do

1. Remove and lock-out all incoming power to the drive.

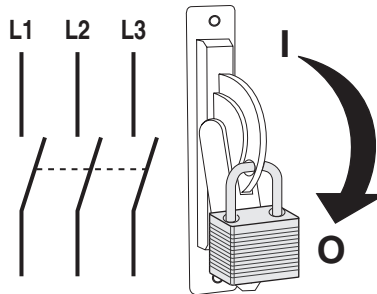

2. On the top of the drive, unscrew the fuse holders and remove the existing fuses from the holders.

Top view of Drive

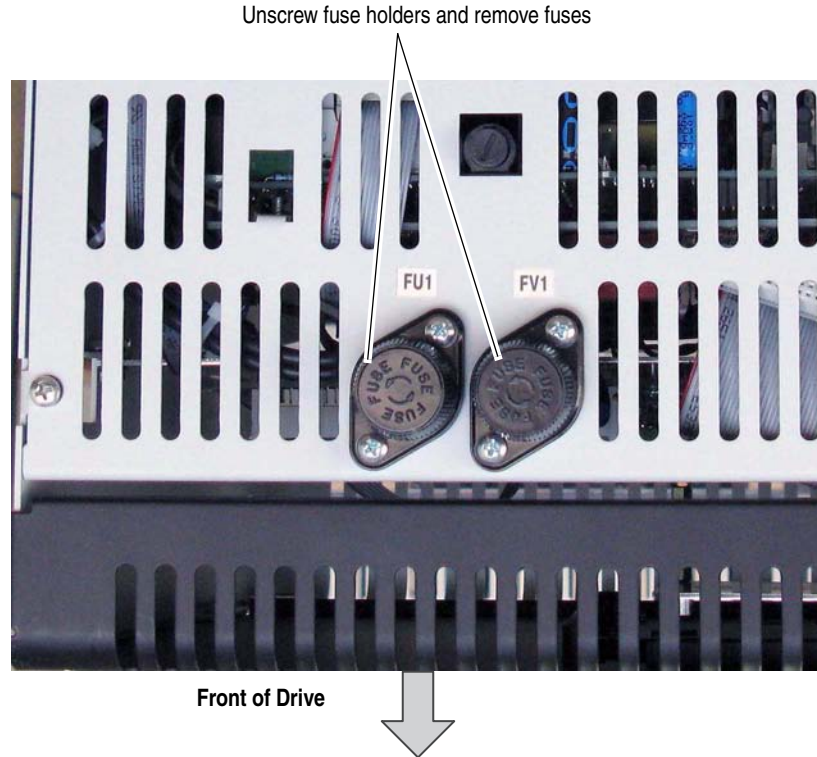

3. Insert the new fuses into the holders and replace the fuse holder caps.



www.rockwellautomation.com

Power, Control and Information Solutions

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation SA/NV, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 20P-IN039A-EN-P - March 2009

Copyright © 2008 Rockwell Automation. All rights reserved. Printed in USA.