



# Antiglare Overlay

Catalog Numbers 2711-NVxx, 2711P-RGxx, 2711C-RGxx

<b>Topic</b>	<b>Page</b>
Important User Information	2
Precautions	3
Install the Overlay	3
Clean the Overlay	4
Remove the Overlay	4

## About This Publication

This publication provides instructions on how to install and clean antiglare overlays for PanelView devices. The *xx* catalog number varies depending on the terminal size and whether the operator input is keypad or touch.

<b>Use this Antiglare Overlay Cat. No.</b>	<b>For This Device</b>
2711-NVxx	PanelView Standard Terminals
2711P-RGxx	PanelView Plus and PanelView Plus CE Terminals
2711C-RGxx	PanelView Component HMI Terminals

You can view or download publications, and translated versions of this publication at <http://literature.rockwellautomation.com>. To order paper copies of technical documentation, contact your local Rockwell Automation distributor or sales representative.

## Important User Information

Solid state equipment has operational characteristics differing from those of electromechanical equipment. Safety Guidelines for the Application, Installation and Maintenance of Solid State Controls (publication SGI-1.1 available from your local Rockwell Automation sales office or online at <http://literature.rockwellautomation.com>) describes some important differences between solid state equipment and hard-wired electromechanical devices. Because of this difference, and also because of the wide variety of uses for solid state equipment, all persons responsible for applying this equipment must satisfy themselves that each intended application of this equipment is acceptable.





In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.

<p><b>WARNING</b></p> 	<p>Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.</p>
<p><b>IMPORTANT</b></p>	<p>Identifies information that is critical for successful application and understanding of the product.</p>
<p><b>ATTENTION</b></p> 	<p>Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you to identify a hazard, avoid a hazard, and recognize the consequences.</p>
<p><b>SHOCK HAZARD</b></p> 	<p>Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.</p>
<p><b>BURN HAZARD</b></p> 	<p>Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.</p>


## Precautions

Follow these precautions when installing the overlays on a terminal screen.

- Make sure your hands are clean, free of grease, and dry.
- Handle the overlay by the edges to prevent marking it with fingerprints or lint. If you get lint or marks on the overlay, remove them before proceeding.
- Do not touch the adhesive ring.

## About the Antiglare Overlay

The protective antiglare overlay covers the entire face of the bezel including the keypad. The antiglare overlay has a protective layer which can be removed by pulling back on the tab. Do not remove the protective layer until you are ready to install the overlay.

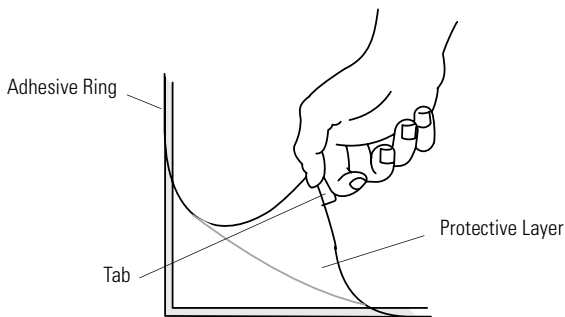


## Install the Overlay

Remove all grease, fingerprints, streaks and lint from the terminal screen by using a clean, lint-free cloth, and Windex or a similar glass cleaner. Any marks will be trapped underneath the overlay. Grease also affects the adhesion of the overlay.

Follow these steps to install the antiglare overlay.

1. Grasp the tab and partially peel back the protective layer covering the overlay from one of the short sides.

Hold the peeled-back portion of the protective layer out of the way as you perform the next step.

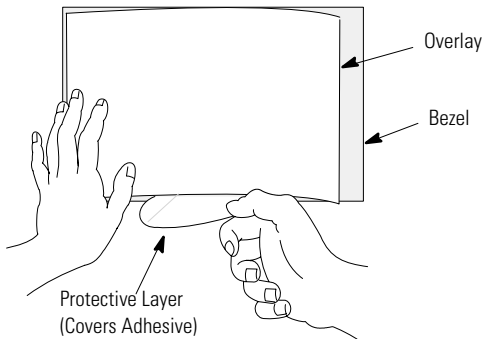

2. Center the ant glare overlay on the terminal and carefully position the exposed adhesive surface on the terminal.

While the protective layer is still covering the rest of the overlay, verify that the overlay is properly centered.

3. Slowly peel off the rest of the protective layer, while using a soft cloth to press the ant glare overlay on the screen.

Make sure that the overlay lies flat with no bubbles or warps.

4. With a soft cloth or the flat surface of a fingernail, press around the edges of the overlay to completely seal it, and remove any air bubbles trapped in the adhesive.

## Clean the Overlay

Clean the overlay by using a clean, lint-free cloth and Windex or a mild glass cleaner that leaves no streaks. Avoid cleaners containing abrasives. Eyeglass cleaner is recommended when possible.

## Remove the Overlay

If it is necessary to remove the overlay, lift up a corner and slowly pull the overlay off. Use isopropyl alcohol to remove any residual adhesive.

Removing the overlay reduces the effectiveness of the adhesive. We recommend that you do not reuse the overlay.

[www.rockwellautomation.com](http://www.rockwellautomation.com)

---

### Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 2711-IN054A-EN-P - March 2007

PN 40061-337-01(8)

Supersedes Publication 2711-IN004G-MU-P - December 2002

Copyright © 2007 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.