



# MobileView E-Stop Bypass Connector

Catalog Number 2727-MREB1


The MobileView E-Stop Bypass Connector maintains the E-stop connections when the MobileView Guard is disconnected from the system.

### IMPORTANT


Use a secondary E-stop in the system to provide a safety shutdown when the E-stop bypass connector is used.

## Connecting the MobileView E-Stop Bypass Connector

*Configuration with Control Cabinet*

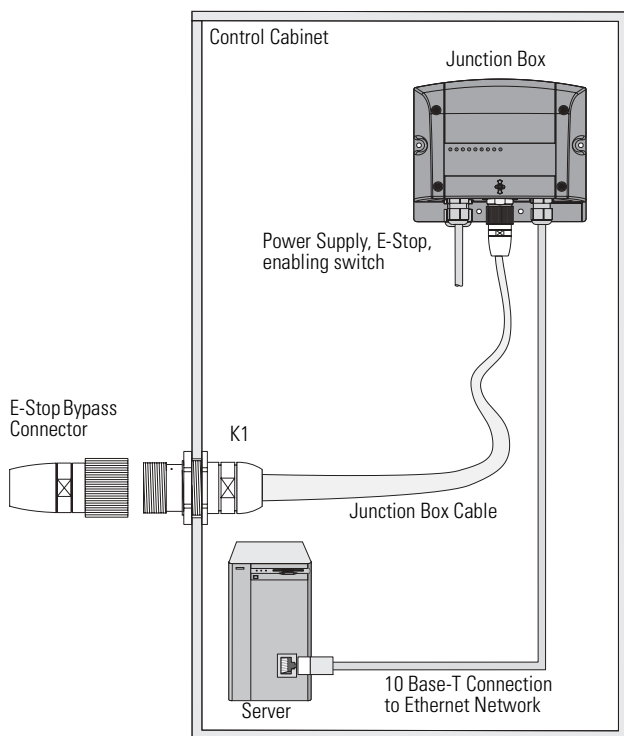

## Configuration without Control Cabinet

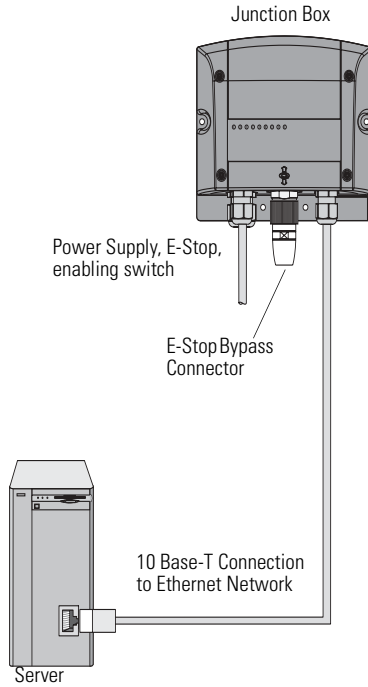

[www.rockwellautomation.com](http://www.rockwellautomation.com)

### Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444  
Europe/Middle East/Africa: Rockwell Automation, Vorstaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640  
Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846