

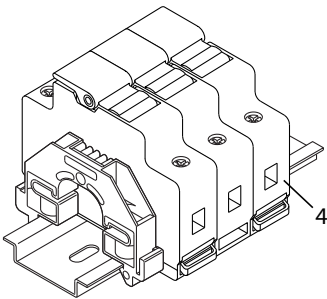
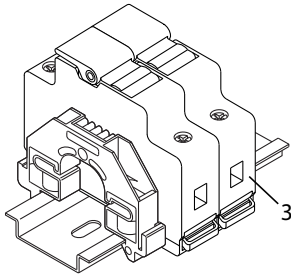


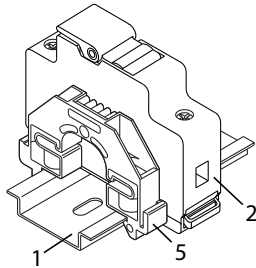

Instructions
Instructions
Gebrauchsanweisung
Istruzioni
Instrucciones

Class CC Fuse Holder
Porte-fusible Classe CC
Klasse CC Sicherungsklemme
Porta Fusibili Tipo CC
Bloque de fusible Clase CC

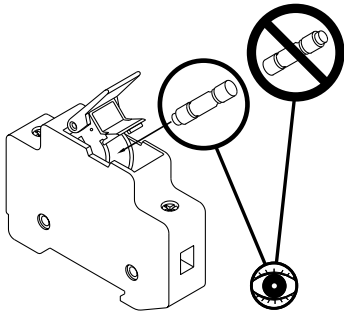

- 1: 199-DR1
1492-DR5
1492-DR6
- 2: 1492-FB1C30
1492-FB1C30-L
- 3: 1492-FB2C30
1492-FB2C30-L
- 4: 1492-FB3C30
1492-FB3C30-L
- 5: 1492-EA35



ATTENTION: To prevent electrical shock, disconnect from power source before installing or servicing.

ATTENTION: Avant le montage et la mise en service, couper l'alimentation secteur pour éviter toutes décharges.

ACHTUNG: Vor Installations- oder Servicearbeiten Stromversorgung unterbrechen, um Elektroschocks zu vermeiden.

ATTENZIONE: Per prevenire infortuni, togliere tensione prima dell'installazione o manutenzione.

ATENCION: Desconéctese de la corriente eléctrica, antes de la instalación o del servicio, a fin de impedir sacudidas eléctricas.

Use Class CC fuse only
 N'utiliser qu'un fusible de Classe CC
 Nur Sicherung der Klasse CC verwenden
 Utilizzare solo fusibili di Tipo CC
 Use solamente un fusible de Classe CC



Gould ATQR 1-1/4
 I=0.42 A MAX
 Gould ATQR 1-4/10
 I=0.47 A MAX

Use 75C copper wire
 Utiliser un fil de cuivre 75C
 Kupferdraht 75C verwenden
 Utilizzare fili di rame di 75C
 Use un cable de cobre 75C

1492-FB____-L
 Ne
 95-600 VAC
 110-600 VDC
 0.8mA max. @ 600V

Indicator Circuit
 Circuit du voyant
 Anzeige für den Stromkreis
 Indicatore del circuito
 Indicador del circuito

