



Installation Instructions

Instructions pour l'Installation


Installationsbeschreibung

Procedura di Installazione

Instrucciones de Instalación


(Bulletin 1492-ASPА, -ASPU)

SHUNT TRIP
DÉCLENCHEUR SHUNT
ARBEITSSTROMAUSLÖSER
SGANCIATORE DI APERTURA
CONMUTADOR REMOTO

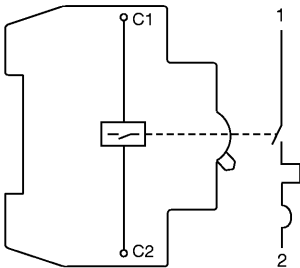
 




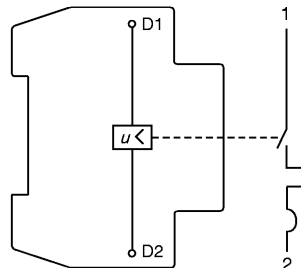

1492-ASPА ...

UNDervOLTAGE RELEASE
DÉCLENCHEMENT À MINIMUM
UNTERSpannungSAUSLÖSER
SGANCIATORE DI MINIMA TENSIONE
INTERRUPTOR DE SUBTENSION



1492-ASPU ...

	Cu 			  		
	mm ²	AWG				
1492-ASPА ...	1 x 1 - 25	1 x #18 - 8	13 mm (.52")	Z2	1.0 x 6.5mm (.040 x .25 in)	2.4 Nm (21 lb-in)
	2 x 1 - 2 x 4	2 x #18 - 2 x #12				
1492-ASPU ...	1 x 0.5 - 4	1 x #18 - 14	12 mm (.47")	Z2	0.8 x 5.0mm (.030 x .200 in)	1.1 Nm (10 lb-in)
	2 x 0.5 - 2 x 2.5	2 x #18 - 2 x #14				



ATTENTION: To prevent electrical shock, disconnect from power source before installing or servicing.


ATTENTION: Avant le montage et la mise en service, couper l'alimentation secteur pour éviter toutes décharges.

ACHTUNG: Vor Installations- oder Servicearbeiten Stromversorgung unterbrechen, um Elektroschocks zu vermeiden.

ATTENZIONE: Per prevenire infortuni, togliere tensione prima dell'installazione o manutenzione.

ATENCIÓN: Desconéctese de la corriente eléctrica, antes de la instalación o del servicio, a fin de impedir sacudidas eléctricas.


Allowable Combinations and Positions
Combinaisons et Positions Possible
Zulaessige Kombinationen und Positionen
Combinazioni e Posizioni Accettabili
Combinaciones y Posiciones Válidas

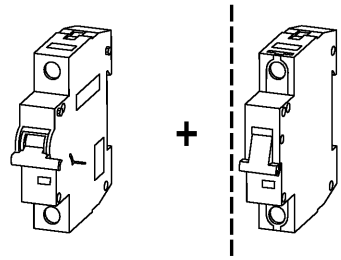

Maximum
 Massimo
 Máximo

1492- ASPH3	1492- ASPHH3	1492- ASPHS3	1492- ASPA...	1492- ASPU...	1492- SP...
X					X
	X				X
		X			X
			X		X
				X	X
X			X		X
	X		X		X
		X	X		X

1492-SP ... + 1492-ASPA ...

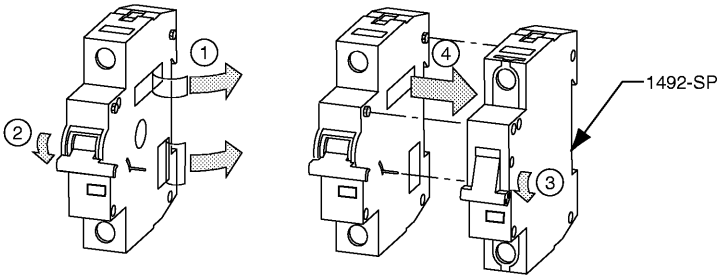

1492-SP ... + 1492-ASPU ...

