
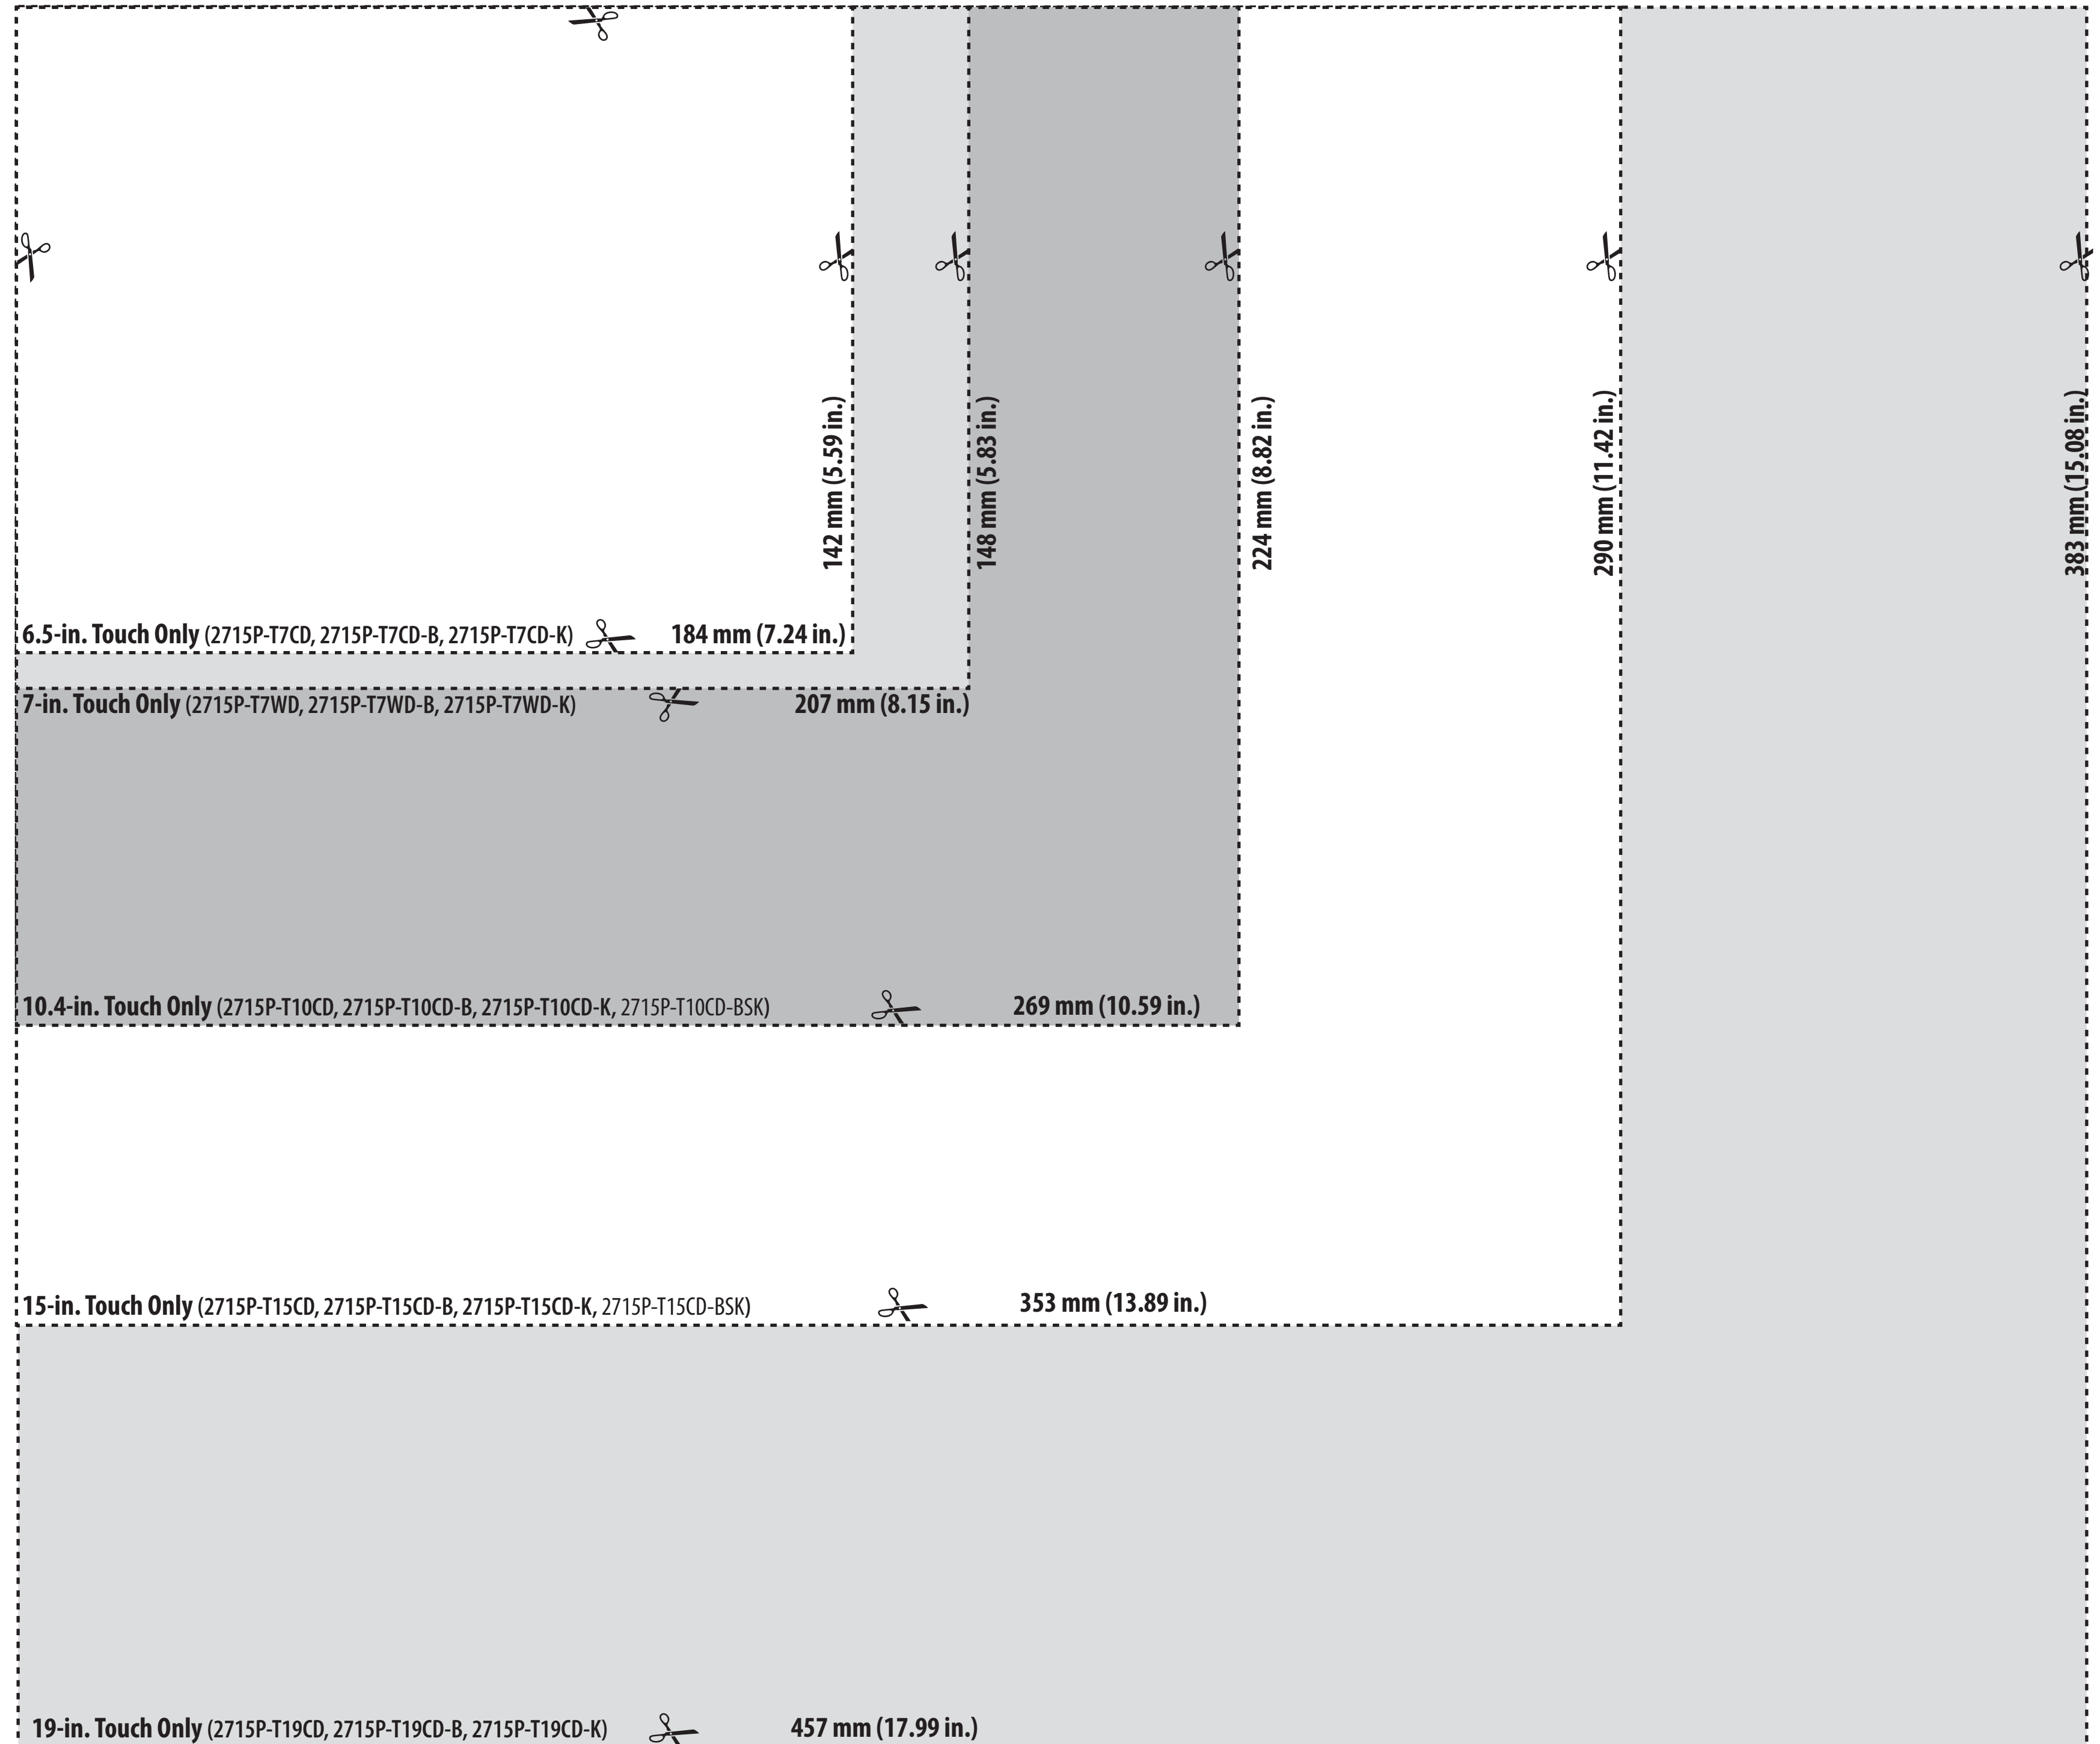


Cutout Templates for PanelView 5510 Terminals

Printed actual size (scale = 1:1). If you print this cutout template from the PDF, set the paper size on your plotter or printer to 610 mm (24 in.) x 457 mm (18 in.).

The cutout templates below are for cat. nos. 2715P-T7CD, 2715P-T7CD-B, 2715P-T7CD-K, 2715P-T7WD, 2715P-T7WD-B, 2715P-T7WD-K, 2715P-T10CD, 2715P-T10CD-B, 2715P-T10CD-K, 2715P-T10CD-BSK, 2715P-T15CD, 2715P-T15CD-B, 2715P-T15CD-K, 2715P-T15CD-BSK, 2715P-T19CD, 2715P-T19CD-B, and 2715P-T19CD-K.

To determine what template to use, locate the catalog number on your PanelView® 5510 terminal sticker. For other PanelView 5510 catalog numbers not shown below, see the opposite side.

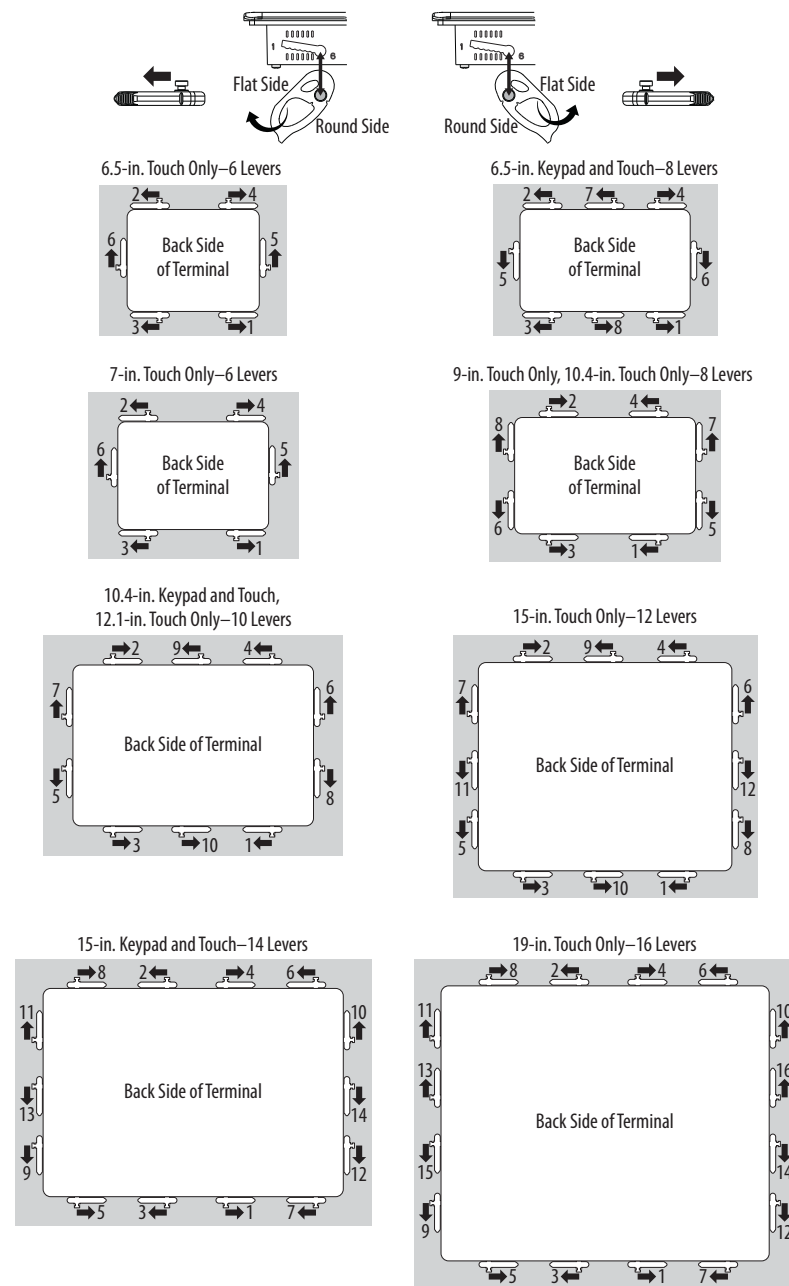


Rotate each lever to its final lock position using the sequence shown for your terminal size. The arrows indicate the direction to rotate each lever.

For complete installation instructions, see the PanelView 5510 Terminal User Manual, publication [2715P-UM001](#).

For instructions on how to install the mounting clips on the PanelView 5510 stainless steel terminals, see the Mounting Clips Installation Instructions, publication [2711P-IN006](#).

Lever Lock Position	Panel Thickness Range	Typical Gauge
1	1.50...2.01 mm (0.060...0.079 in.)	16
2	2.03...2.64 mm (0.080...0.104 in.)	14
3	2.67...3.15 mm (0.105...0.124 in.)	12
4	3.17...3.66 mm (0.125...0.144 in.)	10
5	3.68...4.16 mm (0.145...0.164 in.)	8/9
6	4.19...4.80 mm (0.165...0.188 in.)	7

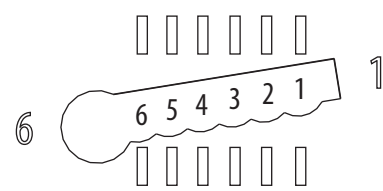


Cutout Templates for PanelView 5510 Terminals

Printed actual size (scale = 1:1). If you print this cutout template from the PDF, set the paper size on your plotter or printer to 610 mm (24 in.) x 457 mm (18 in.).

The cutout templates below are for cat. nos. 2715P-B7CD, 2715P-B7CD-B, 2715P-B7CD-K, 2715P-T9WD, 2715P-T9WD-B, 2715P-T9WD-K, 2715P-T9WD-BSK, 2715P-B10CD, 2715P-B10CD-B, 2715P-B10CD-K, 2715P-T12WD, 2715P-T12WD-B, 2715P-T12WD-K, 2715P-T12WD-BSK, 2715P-B15CD, 2715P-B15CD-B, and 2715P-B15CD-K.

To determine what template to use, locate the catalog number on your PanelView 5510 terminal sticker. For other PanelView 5510 catalog numbers not shown below, see the opposite side.


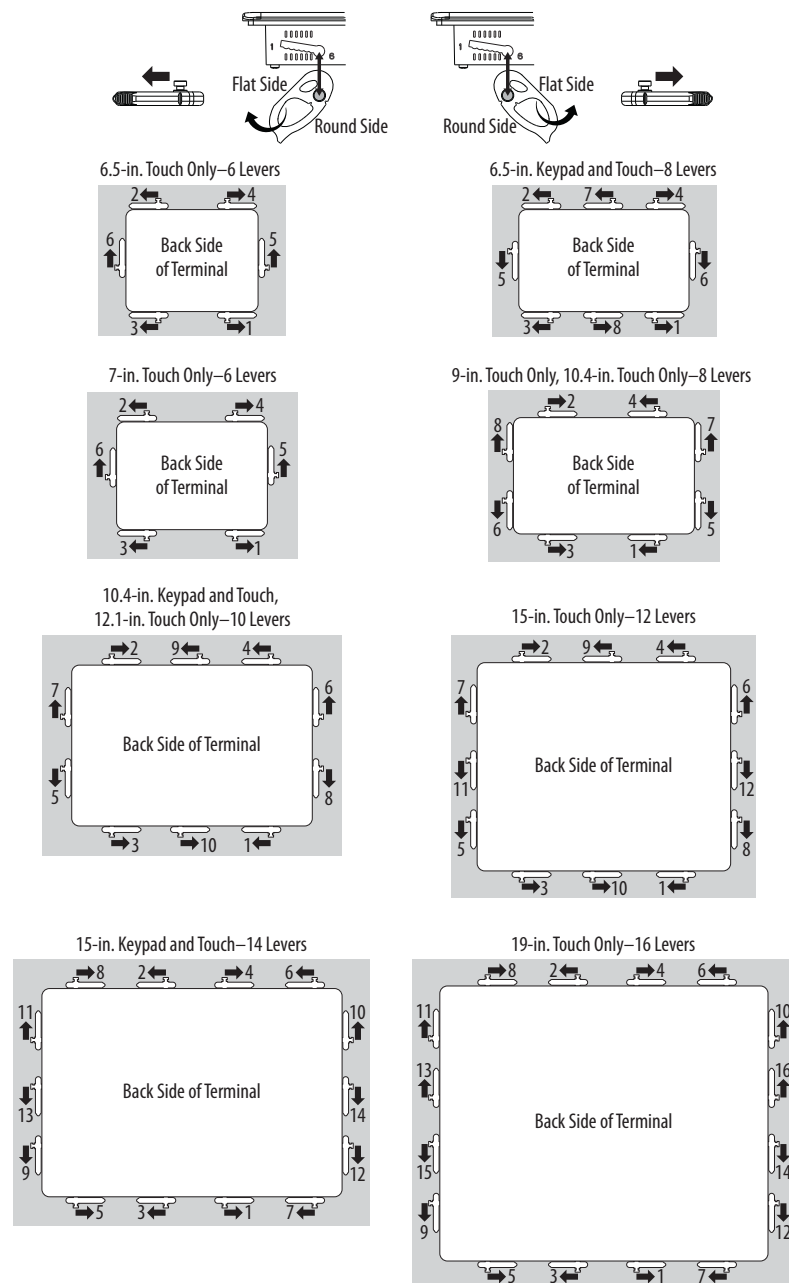


Rotate each lever to its final lock position using the sequence shown for your terminal size. The arrows indicate the direction to rotate each lever.

For complete installation instructions, see the PanelView 5510 Terminal User Manual, publication [2715P-UM001](#).

For instructions on how to install the mounting clips on the PanelView 5510 stainless steel terminals, see the Mounting Clips Installation Instructions, publication [2711P-IN006](#).

Lever Lock Position	Panel Thickness Range	Typical Gauge
1	1.50...2.01 mm (0.060...0.079 in.)	16
2	2.03...2.64 mm (0.080...0.104 in.)	14
3	2.67...3.15 mm (0.105...0.124 in.)	12
4	3.17...3.66 mm (0.125...0.144 in.)	10
5	3.68...4.16 mm (0.145...0.164 in.)	8/9
6	4.19...4.80 mm (0.165...0.188 in.)	7

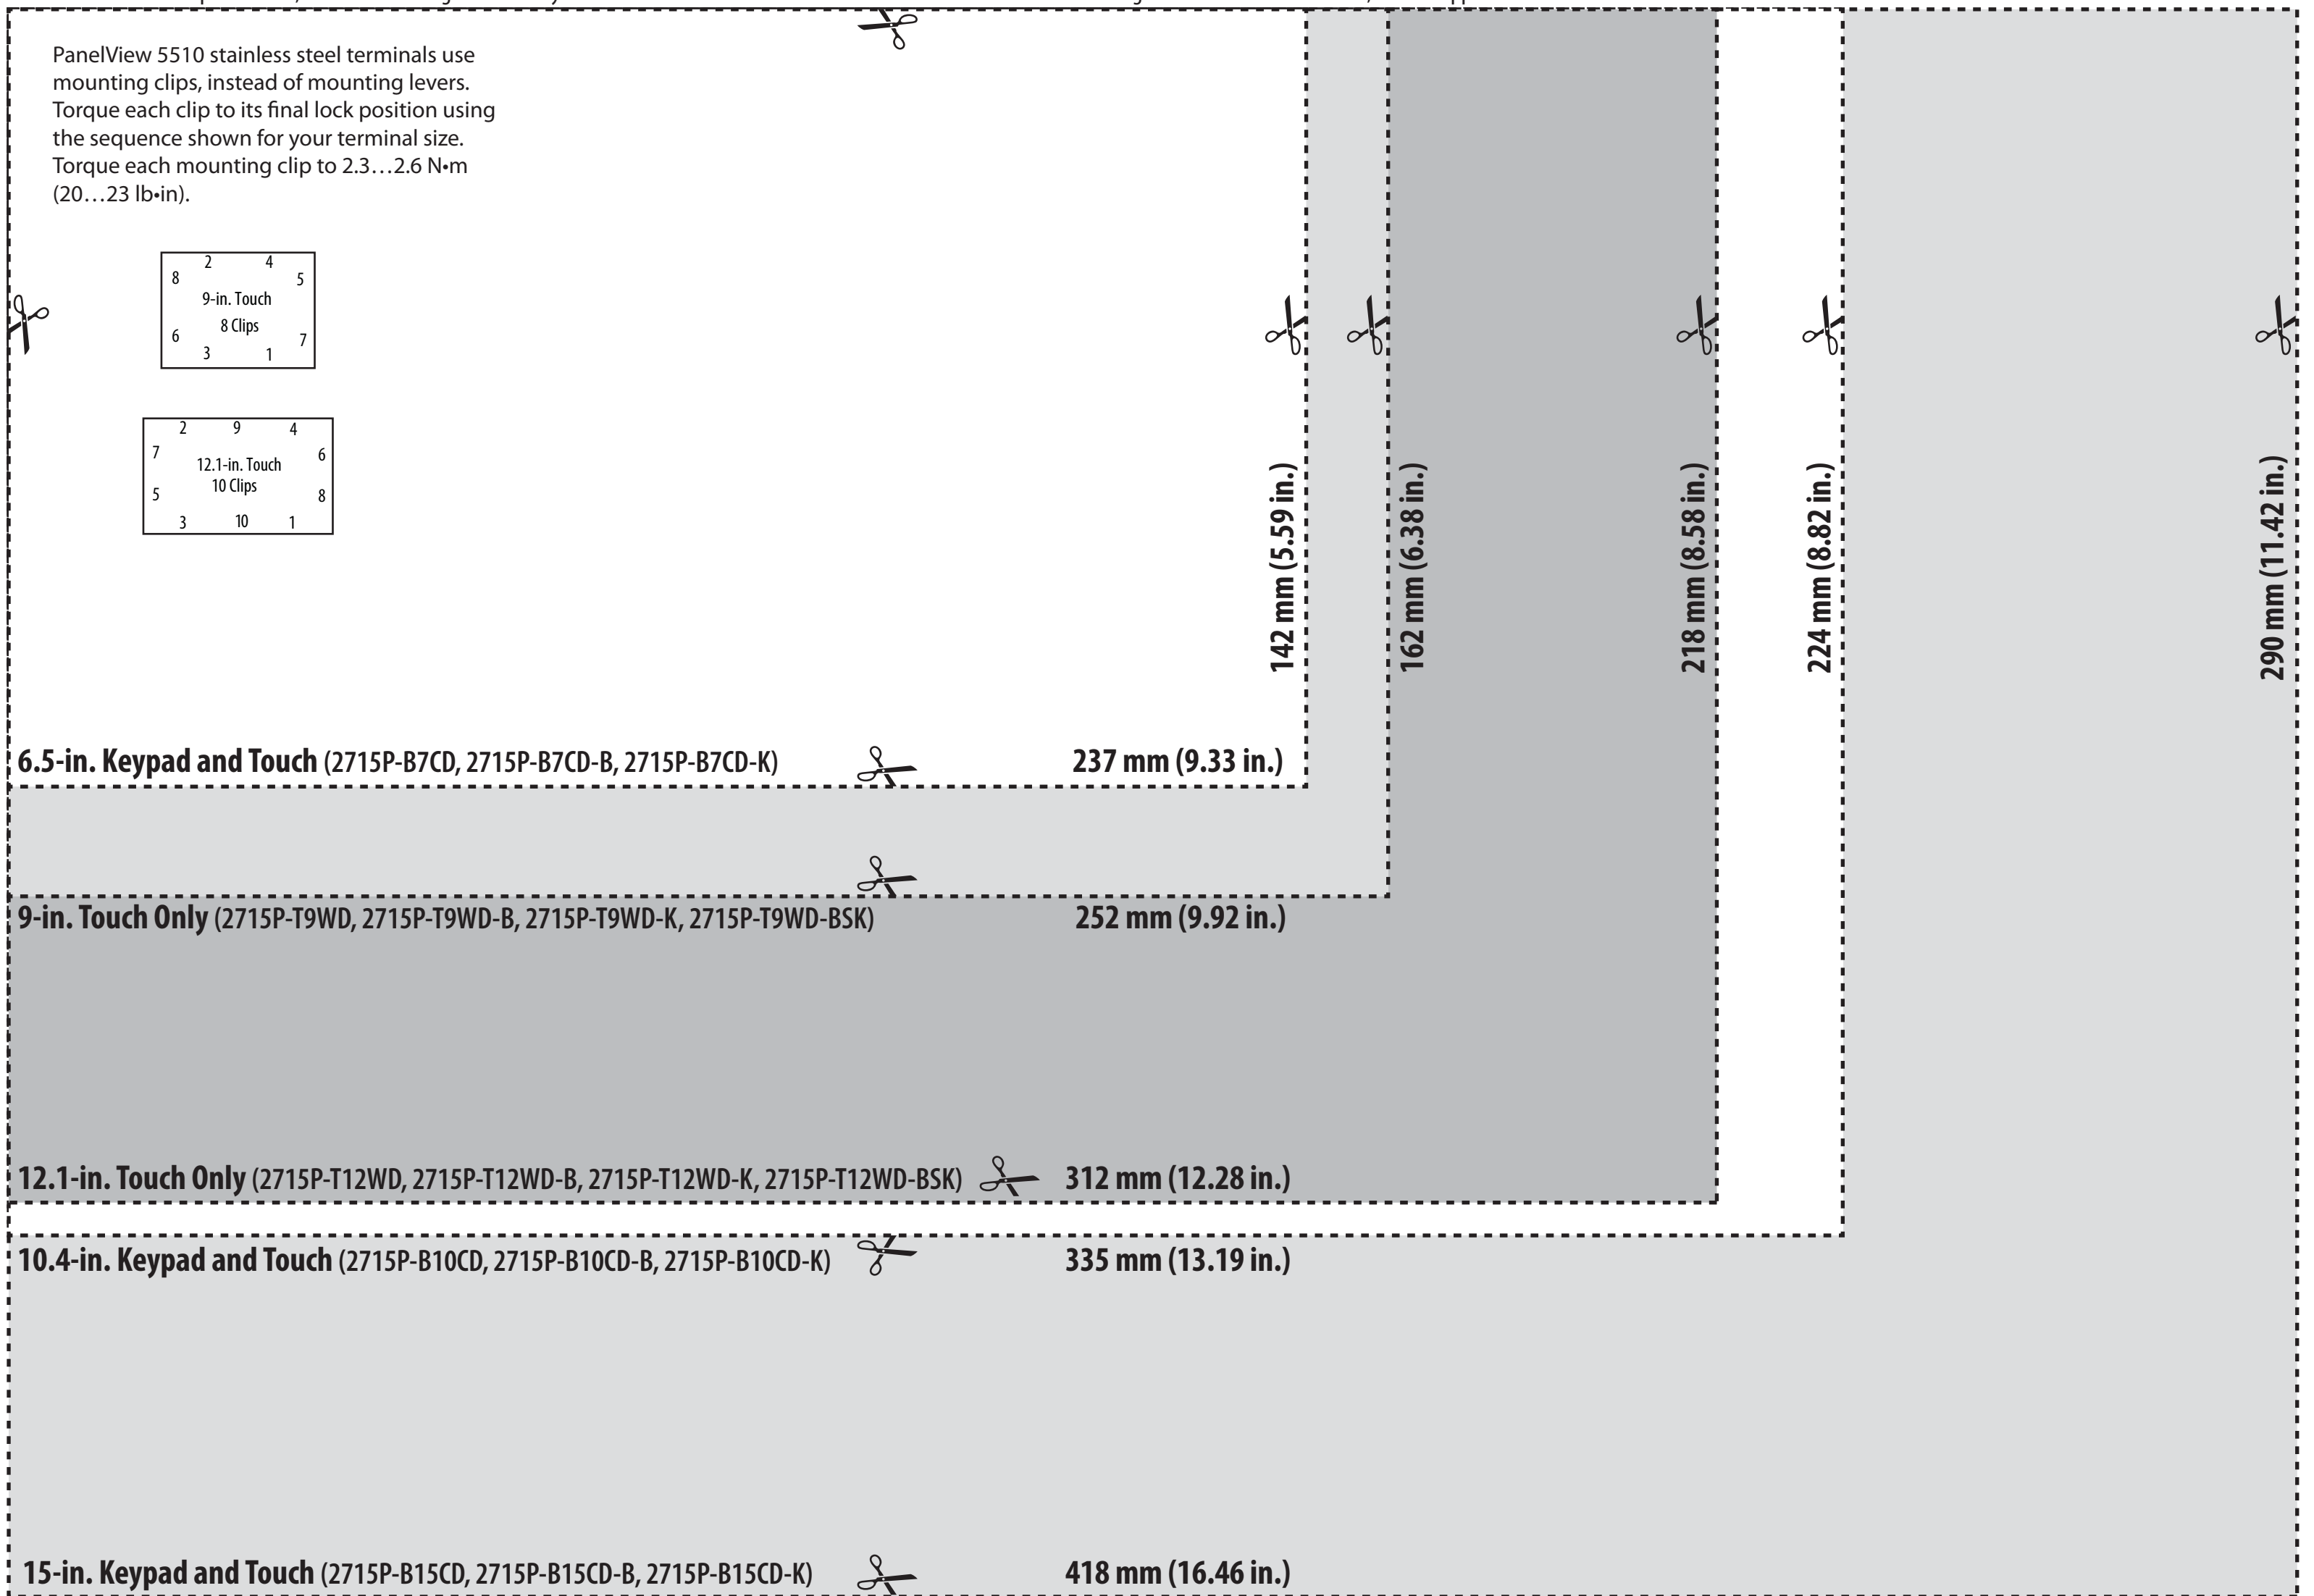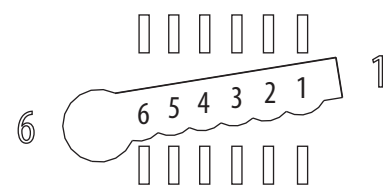



6.5-in. Keypad and Touch (2715P-B7CD, 2715P-B7CD-B, 2715P-B7CD-K) 237 mm (9.33 in.)

9-in. Touch Only (2715P-T9WD, 2715P-T9WD-B, 2715P-T9WD-K, 2715P-T9WD-BSK) 252 mm (9.92 in.)

12.1-in. Touch Only (2715P-T12WD, 2715P-T12WD-B, 2715P-T12WD-K, 2715P-T12WD-BSK) 312 mm (12.28 in.)

10.4-in. Keypad and Touch (2715P-B10CD, 2715P-B10CD-B, 2715P-B10CD-K) 335 mm (13.19 in.)

15-in. Keypad and Touch (2715P-B15CD, 2715P-B15CD-B, 2715P-B15CD-K) 418 mm (16.46 in.)

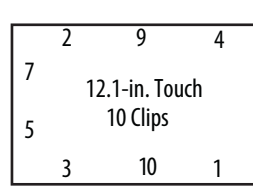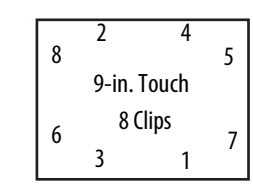

Allen-Bradley, PanelView, and Rockwell Automation are trademarks of Rockwell Automation, Inc. Trademarks not belonging to Rockwell Automation are property of their respective companies.

Rockwell Automation maintains current product environmental information on its website at <http://www.rockwellautomation.com/global/about-us/sustainability-ethics/product-environmental-compliance.page>.

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
 Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleelaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 064
 Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

