

Bulletin 509 Size 3, 4

To Replace Existing Overload Relay

- Disconnect power wires and control wires from overload relay.
- Remove the two screws that secure the overload relay mounting plate to the back of the contactor mounting plate.
- Remove the screws that connect the overload relay terminals to the contactor terminals.
- Separate the overload relay from the contactor and remove.

