

# MV SMC OEM Components

## SMC™ Flex Control Module

### Instruction Sheet

#### Handling



SMC Flex Control Module

Carefully unpack the item and inspect it for damage that may have occurred during shipping. Immediately report any damage to the claims office of the carrier. Rockwell Automation will render reasonable assistance in resolving a damage claim.

**ATTENTION**



Electrical components may be damaged or destroyed by electrostatic charges that build up in personnel during normal activities. To avoid damage to the equipment, observe the following precautions.

- 1) Use a grounding wrist strap to minimize the build up of static charge on personnel.
- 2) Handle the module by the edges and avoid touching components or printed circuit paths.
- 3) Store devices with sensitive components in the conductive packaging that the module is shipped in.

These precautions are the minimum requirements for guarding against ESD. For more information, refer to *Guarding Against Electrostatic Damage – Publication 8000-4.5.2*.

#### Identification

Verify the catalog number of the SMC Flex Control Module.

Table 1 – SMC Flex Control Module Options and Catalog Numbers

Control Module Options	Catalog Number
Standard Control	7703E-S1FX
Pump Control	7703E-B1FX

#### Storage

If the voltage sensing board will not be installed immediately after receipt, store it in a clean, dry and dust-free environment. Humidity should not exceed 95%, non-condensing.

## Storage

If the SMC Flex Control Module will not be installed immediately after receipt, store it in a clean, dry and dust-free environment. Humidity should not exceed 95%, non-condensing.

## Installation

Refer to *MV SMC OEM Components – Bulletins 7703E, Installation Instructions* (Publication **7703E-IN001\_-EN-P**) for complete installation instructions of the SMC Flex Control Module.

Refer to *MV SMC Flex Controller – Bulletin 1503E, 1560E and 1562E, User Manual* (Publication **1560E-UM051\_-EN-P**) for complete programming and operating instructions for the SMC-Flex Control Module.

## Additional Publications

To order additional copies of Instruction Manuals for all Rockwell Automation medium voltage products, please contact a Rockwell Automation sales office or your local distributor.

[www.rockwellautomation.com](http://www.rockwellautomation.com)

---

### Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

**Medium Voltage Products**, 135 Dundas Street, Cambridge, ON, N1R 5X1 Canada, Tel: (1) 519.740.4100, Fax: (1) 519.623.8930, [www.ab.com/mvb](http://www.ab.com/mvb)