

## Installation Instructions

Original Instructions



**Allen-Bradley**

by ROCKWELL AUTOMATION

## Contact Operation

Catalog Numbers for Clockwise Operation as Supplied

802T-A3, 802X-A34, 802X-A37, 802XR-A3C7, 402XA-A3F7

Catalog Numbers for Counter-clockwise Operation as Supplied


802T-A4, 802X-A44, 802X-A47, 802XR-A4C7, 802XR-A4F7



**WARNING:** To avoid electrical shock and/or unintended operation of equipment, disconnect all power to the limit switch and the controlled equipment before proceeding with any repair or adjustment of the limit switch.

1. Remove the operating head from the limit switch.
2. Shown in [Figure 1](#), hold the operating head with the plunger in the upright position, break the diaphragm seal, then pull out the plunger.
3. Rotate the plunger 180° and replace the plunger into the operating head.
4. Return the operating head to the limit switch.
5. Securely tighten the mounting screws to approximately 0.68 N•m (6 lb•in) of torque.

Figure 1 - Limit Switch Operating Head

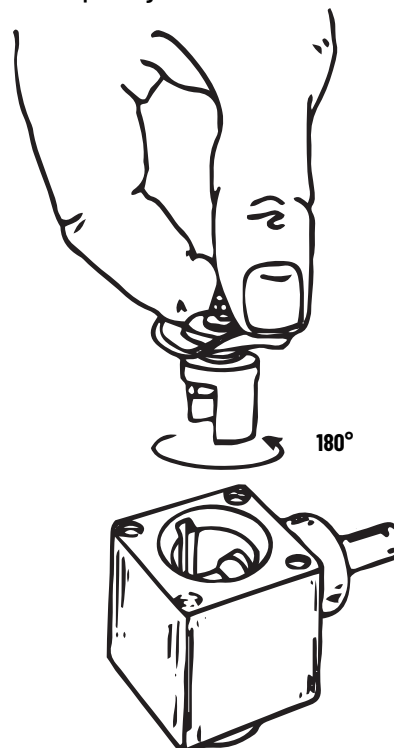

## Waste Electrical and Electronic Equipment (WEEE)







At the end of life, this equipment should be collected separately from any unsorted municipal waste.

Rockwell Automation maintains current product environmental compliance information on its website at [rok.auto/pec](http://rok.auto/pec).

Your comments help us serve your documentation needs better. If you have any suggestions on how to improve our content, complete the form at [rok.auto/docfeedback](http://rok.auto/docfeedback).

For technical support, visit [rok.auto/support](http://rok.auto/support).

Rockwell Otomasyon Ticaret A.Ş. Kar Plaza İş Merkezi E Blok Kat:6 34752, İçerenköy, İstanbul, Tel: +90 (216) 5698400 EEE Yönetmeliğine Uygundur

Connect with us.    

**rockwellautomation.com** — expanding **human possibility**<sup>®</sup>

AMERICAS: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

EUROPE/MIDDLE EAST/AFRICA: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

ASIA PACIFIC: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Allen-Bradley, expanding human possibility, and Rockwell Automation are trademarks of Rockwell Automation, Inc.  
Trademarks not belonging to Rockwell Automation are property of their respective companies.



Publication 802-IN002A-EN-P - June 2021

Copyright © 2021 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.

40060-021-02 Ver 06