

# PowerFlex 700H and 700S Frame 9 Drive Lifting Instructions

This document provides instructions for lifting frame 9 PowerFlex 700H and PowerFlex 700S AC drives.



**ATTENTION:** Follow these precautions to guard against possible personal injury and/or equipment damage.


- Remove any wiring access covers at the top of the drive.
- Do Not allow any part of the drive or lifting mechanism to make contact with electrically charged conductors or components.
- At no time should a person or their limbs be directly underneath the items being lifted.
- Do not subject the load to high rates of acceleration or deceleration.
- Inspect all lifting hardware for proper attachment before lifting drive unit.

## Frame 9 - Approximate Drive and Enclosure Weights

Voltage Class	Drive Rating Amps	AC Input Drive & Enclosure Weight <i>kg (lbs)</i>	AC Input Drive, Enclosure & Packaging Weight <i>kg (lbs)</i>	DC Input Drive & Enclosure Weight <i>kg (lbs)</i>	DC Input Drive, Enclosure & Packaging Weight <i>kg (lbs)</i>
400/480V AC (540/650V DC)	261	143 (315)	205 (452)	109 (240)	171 (377)
400/480V AC (540/650V DC)	300	151 (333)	213 (470)	117 (258)	179 (395)
600/690V AC (810/932V DC)	170	143 (315)	205 (452)	109 (240)	171 (377)
600/690V AC (810/932V DC)	208	143 (315)	205 (452)	109 (240)	171 (377)

**IMPORTANT** When lifting frame 9 drives a rod must be placed between the lifting holes as shown in the illustration below.

---

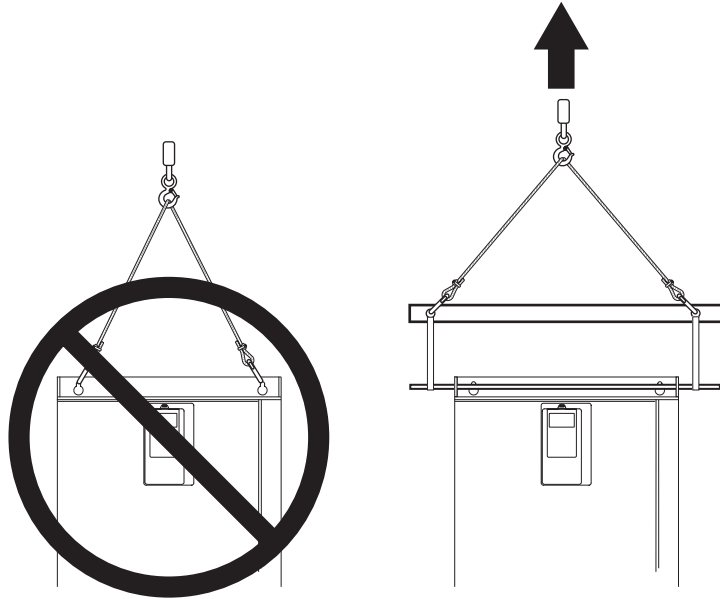

U.S. Allen-Bradley Drives Technical Support - Tel: (1) 262.512.8176, Fax: (1) 262.512.2222, E-mail: [support@drives.ra.rockwell.com](mailto:support@drives.ra.rockwell.com)  
Online: [www.ab.com/support/abdrives](http://www.ab.com/support/abdrives)

Allen-Bradley, PowerFlex, Rockwell Software, Rockwell Automation, and TechConnect are trademarks of Rockwell Automation, Inc.  
Trademarks not belonging to Rockwell Automation are property of their respective companies.

**[www.rockwellautomation.com](http://www.rockwellautomation.com)**

---

**Power, Control and Information Solutions Headquarters**

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444  
Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640  
Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846