


# Logix 5000 Controllers Messages

1756 ControlLogix, 1756 GuardLogix, 1769 CompactLogix,  
1769 Compact GuardLogix, 1789 SoftLogix, 5069 CompactLogix,  
5069 Compact GuardLogix, Studio 5000 Logix Emulate

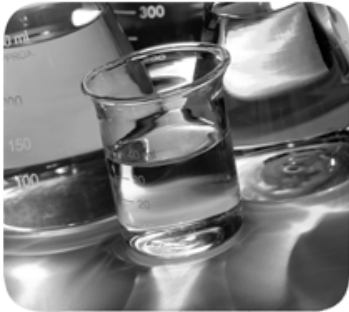

# Important user information

Read this document and the documents listed in the additional resources section about installation, configuration, and operation of this equipment before you install, configure, operate, or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice. If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.



**WARNING:** Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.



**ATTENTION:** Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence

---

**Important:** Identifies information that is critical for successful application and understanding of the product.

---

Labels may also be on or inside the equipment to provide specific precautions.



**SHOCK HAZARD:** Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.



**BURN HAZARD:** Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.



**ARC FLASH HAZARD:** Labels may be on or inside the equipment, for example, a motor control center, to alert people to potential Arc Flash. Arc Flash will cause severe injury or death. Wear proper Personal Protective Equipment (PPE). Follow ALL Regulatory requirements for safe work practices and for Personal Protective Equipment (PPE).

---

Allen-Bradley, Rockwell Software, Rockwell Automation, and TechConnect are trademarks of Rockwell Automation, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

## Summary of changes

---

This manual includes new and updated information. Use these reference tables to locate changed information.

Grammatical and editorial style changes are not included in this summary.

### Global changes

This table identifies changes that apply to all information about a subject in the manual and the reason for the change. For example, the addition of new supported hardware, a software design change, or additional reference material would result in changes to all of the topics that deal with that subject.

Subject	Reason
Updated screen shots throughout.	The graphical user interface has been updated in release 31 of the Logix Designer application.
Updated supported controllers.	Logix Designer supports new 5069 Compact GuardLogix controllers.

### New or enhanced features

This table contains a list of topics changed in this version, the reason for the change, and a link to the topic that contains the changed information.

Topic Name	Reason
<a href="#">Guidelines</a> on <a href="#">page 15</a>	Added tip that MSG tags can be created at the controller or Program Local scope for some controllers in version 31 of the Logix Designer application.



## Table of contents

---

<b>Preface</b>	Studio 5000 environment..... 7
	Additional resources ..... 8
	Legal notices..... 8
 <b>Chapter 1</b>	
<b>Controller messages</b>	Introduction to Controller Messages..... 11
	Supported data types..... 11
	Message Queue..... 12
	Cache list ..... 13
	Unconnected buffers..... 15
	Guidelines..... 15
	Get or set the number of unconnected buffers ..... 16
	Get the number of unconnected buffers ..... 16
	Set the number of unconnected buffers..... 17
	Convert between INTs and DINTs ..... 18
 <b>Chapter 2</b>	
<b>Manage multiple messages</b>	Introduction..... 23
	Message manager logic..... 23
 <b>Chapter 3</b>	
<b>Send a message to multiple controllers</b>	Introduction..... 27
	Configure the I/O configuration ..... 28
	Define your source and destination elements ..... 29
	Create the MESSAGE_CONFIGURATION data type ..... 30
	Create the configuration array ..... 31
	Get the size of the local array ..... 32
	Load the message properties for a controller..... 33
	Configure the message..... 33
	Step to the next controller..... 34
	Restart the sequence..... 34
 <b>Index</b>	



This manual shows how to program message (MSG) instructions to and from Logix 5000™ controllers. This manual is one of a set of related manuals that show common procedures for programming and operating Logix 5000™ controllers.

For a complete list of common procedures manuals, refer to the [Logix 5000 Controllers Common Procedures Programming Manual](#), publication [1756-PM001](#).

- The term Logix 5000 controller refers to any controller that is based on the Logix 5000 operating system.

## Studio 5000 environment

The Studio 5000 Automation Engineering & Design Environment® combines engineering and design elements into a common environment. The first element is the Studio 5000 Logix Designer® application. The Logix Designer application is the rebranding of RSLogix 5000® software and will continue to be the product to program Logix 5000™ controllers for discrete, process, batch, motion, safety, and drive-based solutions.



The Studio 5000® environment is the foundation for the future of Rockwell Automation® engineering design tools and capabilities. The Studio 5000 environment is the one place for design engineers to develop all elements of their control system.

## Additional resources

These documents contain additional information concerning related Rockwell Automation products.

Resource	Description
<a href="#">Industrial Automation Wiring and Grounding Guidelines</a> , publication 1770-4.1	Provides general guidelines for installing a Rockwell Automation industrial system.
Product Certifications webpage, available at <a href="http://ab.rockwellautomation.com">http://ab.rockwellautomation.com</a>	Provides declarations of conformity, certificates, and other certification details.

You can view or download publications at <http://www.rockwellautomation.com/literature> . To order paper copies of technical documentation, contact your local Rockwell Automation distributor or sales representative.

## Legal notices

### Copyright notice

Copyright © 2018 Rockwell Automation Technologies, Inc. All Rights Reserved. Printed in USA.

This document and any accompanying Rockwell Software products are copyrighted by Rockwell Automation Technologies, Inc. Any reproduction and/or distribution without prior written consent from Rockwell Automation Technologies, Inc. is strictly prohibited. Please refer to the license agreement for details.

### End User License Agreement (EULA)

You can view the Rockwell Automation End-User License Agreement ("EULA") by opening the License.rtf file located in your product's install folder on your hard drive.

### Other Licenses

The software included in this product contains copyrighted software that is licensed under one or more open source licenses. Copies of those licenses are included with the software. Corresponding Source code for open source packages included in this product can be located at their respective web site(s).

You may alternately obtain complete Corresponding Source code by contacting Rockwell Automation via our Contact form on the Rockwell Automation website: <http://www.rockwellautomation.com/global/about-us/contact/contact.page> .

Please include "Open Source" as part of the request text.



The following open source software is used in this product:

Software	Copyright	License Name	License Text
AngularJS	Copyright 2010-2017 Google, Inc.	MIT License	AngularJS 1.5.9 License
Bootstrap	Copyright 2011-2017 Twitter, Inc. Copyright 2011-2017 The Bootstrap Authors	MIT License	Bootstrap 3.3.7 License
jQuery	Copyright 2005, 2014 JS Foundation and other contributors	MIT License	jQuery 2.1.1 License
OpenSans	Copyright 2017 Google, Inc.	Apache License, Version 2.0	OpenSans License

### Trademark Notices

Allen-Bradley, ControlBus, ControlFLASH, Compact GuardLogix, Compact I/O, ControlLogix, CompactLogix, DCM, DH+, Data Highway Plus, DriveLogix, DPI, DriveTools, Explorer, FactoryTalk, FactoryTalk Administration Console, FactoryTalk Alarms and Events, FactoryTalk Batch, FactoryTalk Directory, FactoryTalk Security, FactoryTalk Services Platform, FactoryTalk View, FactoryTalk View SE, FLEX Ex, FlexLogix, FLEX I/O, Guard I/O, High Performance Drive, Integrated Architecture, Kinetix, Logix5000, Logix 5000, Logix5550, MicroLogix, DeviceNet, EtherNet/IP, PLC-2, PLC-3, PLC-5, PanelBuilder, PowerFlex, PhaseManager, POINT I/O, PowerFlex, Rockwell Automation, RSBizWare, Rockwell Software, RSEmulate, Historian, RSFieldbus, RSLinx, RSLogix, RSNetWorx for DeviceNet, RSNetWorx for EtherNet/IP, RSMACC, RSView, RSView32, Rockwell Software Studio 5000 Automation Engineering & Design Environment, Studio 5000 View Designer, SCANport, SLC, SoftLogix, SMC Flex, Studio 5000, Ultra 100, Ultra 200, VersaView, WINTelligent, XM, SequenceManager are trademarks of Rockwell Automation, Inc.

Any Rockwell Automation logo, software or hardware product not mentioned herein is also a trademark, registered or otherwise, of Rockwell Automation, Inc.

### Other Trademarks

CmFAS Assistant, CmDongle, CodeMeter, CodeMeter Control Center, and WIBU are trademarks of WIBU-SYSTEMS AG in the United States and/or other countries. Microsoft is a registered trademark of Microsoft Corporation in the United States and/or other countries. ControlNet is a trademark of ControlNet International. DeviceNet is a trademark of the Open DeviceNet Vendors Association (ODVA). Ethernet/IP is a trademark of ControlNet International under license by ODVA.

All other trademarks are the property of their respective holders and are hereby acknowledged.

## **Warranty**

This product is warranted in accordance with the product license. The product's performance may be affected by system configuration, the application being performed, operator control, maintenance, and other related factors. Rockwell Automation is not responsible for these intervening factors. The instructions in this document do not cover all the details or variations in the equipment, procedure, or process described, nor do they provide directions for meeting every possible contingency during installation, operation, or maintenance. This product's implementation may vary among users.

This document is current as of the time of release of the product; however, the accompanying software may have changed since the release. Rockwell Automation, Inc. reserves the right to change any information contained in this document or the software at any time without prior notice. It is your responsibility to obtain the most current information available from Rockwell when installing or using this product.

## **Environmental compliance**

Rockwell Automation maintains current product environmental information on its website at

<http://www.rockwellautomation.com/rockwellautomation/about-us/sustainability-ethics/product-environmental-compliance.page>

## **Contact Rockwell Automation**

Customer Support Telephone — 1.440.646.3434

Online Support — <http://www.rockwellautomation.com/support/>

## Controller messages

### Introduction to Controller Messages

This section describes how to transfer (send or receive) data between controllers by executing a message (MSG) instruction. It explains cache connections and buffers so you can correctly program the controller.

### Supported data types

The following data types are supported when sending CIP messages.

- SINT
- INT
- DINT
- LINT
- REAL

In addition, you can send a message with any structure type that is predefined, module-defined, or user-defined.

For more information, see "[Convert between INTs and DINTs](#) on [page 18](#)".


For complete details on programming a message instruction, see the [LOGIX 5000 Controllers General Instruction Reference Manual](#), publication 1756-RM003.

#### Example: Execute a message (MSG) instruction

If count\_send = 1  
and count\_msg.EN = 0 (MSG instruction is not enabled)  
then execute a MSG instruction that sends data to another controller.



This diagram shows how the controller processes MSG instructions.

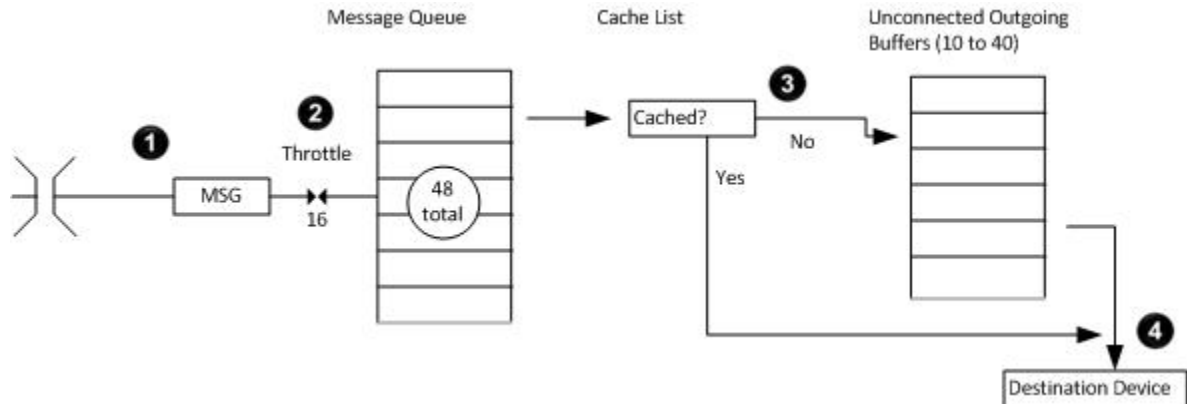


**Description**

<b>1</b>	The controller scans the MSG instruction and its rung-condition-in goes true. The message passes to a throttle that has 16 positions. If the throttle is full, the message remains enabled but is held until another controller scan.	
<b>2</b>	The System-overhead time slice executes and the message is pulled from the throttle to the message queue.	
<b>3</b>	<b>If the MSG instruction</b>	<b>Then the MSG instruction</b>
	Does not use a connection or the connection was not previously cached	Uses an unconnected buffer to establish communication with the destination device.
	Uses a connection and the connection is cached	Does not use an unconnected buffer.
<b>4</b>	Communication occurs with the destination device.	

## Message Queue

The message queue holds up to 48 MSG instructions, including those that you configure as a block-transfer read or block-transfer write. When the queue is full, an instruction tries to enter the queue on each subsequent scan of the instruction, as shown in the following illustration.

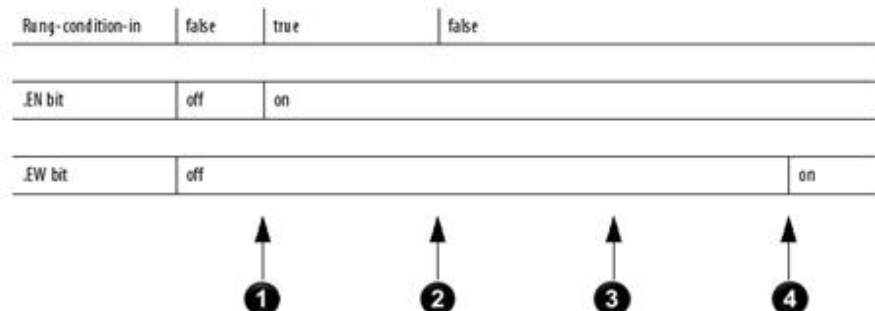

Description	
<b>1</b>	<p>The controller scans the MSG instruction.</p> <p>The rung-condition-in for the MSG instruction is true.</p> <p>The EN bit is set.</p> <p>The MSG instruction attempts to enter the queue but 16 throttle positions exist. If all 16 are filled and a 17th message is executed, the message is enabled.</p> <p>The EW bit remains cleared.</p>
<b>2</b> & <b>3</b>	<p>The controller scans the MSG instruction.</p> <p>The rung-condition-in for the MSG instruction is false.</p> <p>The EN bit remains set.</p> <p>The MSG instruction attempts to pass through the throttle, but no open positions exist yet.</p> <p>The EW bit remains cleared.</p>
<b>4</b>	<p>The controller scans the MSG instruction.</p> <p>The MSG instruction attempts to enter the queue. This time the throttle position is open and the message can pass to the message queue.</p> <p>The EW bit is set.</p>

## Cache list

Depending on how you configure a MSG instruction, it may use a connection to send or receive data.

This type of message	And this communication method	Uses a connection
CIP data table read or write	—	Your option <sup>(1)</sup>
PLC-2, PLC-3, PLC-5, or SLC (all types)	CIP CIP with Source ID	No
	DH+	Yes
CIP generic	—	Your option <sup>(2)</sup>
Block-transfer read or write	—	Yes

(1) CIP data table read or write messages can be connected or unconnected. However for most applications, it is recommended you leave CIP data table read or write messages connected.

(2) CIP generic messages can be connected or unconnected. However for most applications, it is recommended you leave CIP generic messages unconnected, unless you want to use the Large Connection option.

If a MSG instruction uses a connection, you have the option to leave the connection open (cache) or close the connection when the message is done transmitting.

If you	Then
Cache the connection	The connection stays open after the MSG instruction is done. This optimizes execution time. Opening a connection each time the message executes increases execution time.
Do not cache the connection	The connection closes after the MSG instruction is done. This frees up that connection for other uses.

The controller has the following limits on the number of connections that you can cache.

If you have this software version and firmware revision	Then you can cache
11.x or earlier	<ul style="list-style-type: none"> <li>Block transfer messages for up to 16 connections.</li> <li>Other types of messages for up to 16 connections.</li> </ul>
12.x or later	Up to 32 connections.

If several messages go to the same device, the messages may be able to share a connection.

If the MSG instructions are to	And they are	Then
Different devices	—	Each MSG instruction uses 1 connection.
The same device, cached, and not a large connection	Enabled simultaneously (same scan)	Each MSG instruction uses 1 connection and 1 cached buffer.
	Not enabled simultaneously	All MSG instructions use 1 connection and 1 cached buffer. They share the connection and the buffer.
The same device, cached, and a large connection	Enabled simultaneously (same scan)	Each MSG instruction uses 1 connection and 1 cached buffer.
	Not enabled simultaneously	All MSG instructions use 1 connection and 1 cached buffer. They share the connection and the buffer.

**Example: Share a connection**

- If the controller alternates between sending a block-transfer read message and a block-transfer write message to the same module, then together the messages count as one connection. Caching both messages counts as one on the cached buffer.
- If the controller sends 10 cached connected messages to the same bridge module (for example, 1756-EN2T) where 7 utilize a standard connection (large connection unchecked) and 3 utilize a large connection, then the 7 standard connection messages all utilize one cached connection. The 3 large connection messages all utilize another cached connection. In total, the 10 messages use 2 cached connections.

## Unconnected buffers

To establish a connection or process unconnected messages, the controller uses an unconnected buffer.

Term	Definition
Unconnected buffer	<p>An allocation of memory that the controller uses to process unconnected communication. The controller performs unconnected communication when it:</p> <ul style="list-style-type: none"> <li>Establishes a connection with a device, including an I/O module.</li> <li>Executes a MSG instruction that does not use a connection.</li> </ul> <p>The controller can have 10 to 40 unconnected buffers.</p> <ul style="list-style-type: none"> <li>The default number is 10.</li> <li>To increase the number of unconnected buffers, execute a MSG instruction that reconfigures the number of unconnected buffers.</li> <li>Each unconnected buffer uses 1.2 KB of memory.</li> <li>If all unconnected buffers are in use when an instruction leaves the message queue, an error occurs and data does not transfer.</li> </ul>

If a MSG instruction uses a connection, the instruction uses an unconnected buffer when it first executes to establish a connection. If you configure the instruction to cache the connection, it no longer requires an unconnected buffer once the connection is established.

## Guidelines

As you plan and program your MSG instructions, follow these guidelines.

Guideline	Details
For each MSG instruction, create a control tag.	<ul style="list-style-type: none"> <li>Data type = MESSAGE</li> <li>Scope = controller</li> <li>The tag cannot be part of an array or a user-defined data type.</li> </ul>
Keep the source and destination data at the controller scope.	<p>A MSG instruction can access only tags that are in the <b>Controller Tags</b> folder (controller scope).</p> <p><b>Tip:</b> On CompactLogix 5370, ControlLogix 5570, Compact GuardLogix 5370, and GuardLogix 5570 controllers, enter an MSG tag only as a controller scope tag.</p> <p>In versions 31 and later of the Logix Designer application, on CompactLogix 5380, CompactLogix 5480, ControlLogix 5580, Compact GuardLogix 5380, and GuardLogix 5580 controllers, enter an MSG tag as either a controller scope or a Program Local scope tag.</p>
If your message is to a device that uses 16-bit integers, such as a PLC-5 or SLC 500 controller, and it transfers integers (not REALs), use a buffer of INTs in the message and DINTs throughout the project.	<p>Logix 5000 controllers execute more efficiently and use less memory when working with 32-bit integers (DINTs).</p> <p>See <a href="#">Convert Between INTs and DINTs</a> on <a href="#">page 18</a>.</p>
Cache the connection for those MSG instructions that execute most frequently, up to the maximum number permissible for your controller revision.	<p>Execution time is optimized when the controller does not open a connection each time the message executes.</p>

If you want to enable more than 16 MSGs at one time, use a management strategy to ensure some MSG instructions are not delayed entering the queue.	To guarantee the execution of each message, use one of these options: <ul style="list-style-type: none"> <li>• Enable each message in sequence.</li> <li>• Enable the messages in groups.</li> <li>• Program a message to communicate with multiple devices.</li> <li>• Program logic to coordinate the execution of messages.</li> </ul>
Keep the number of unconnected and uncached MSGs less than the number of unconnected buffers.	The controller can have 10 to 40 unconnected buffers. The default number is 10. <ul style="list-style-type: none"> <li>• If all unconnected buffers are in use when an instruction leaves the message queue, an error occurs, the data is not transferred.</li> <li>• You can increase the number of unconnected buffers (up to 40), provided you continue to adhere to the previous guideline.</li> <li>• To increase the number of unconnected buffers, see "<a href="#">Get or Set the Number of Unconnected Buffers</a> on <a href="#">page 16</a>".</li> </ul>

## Get or set the number of unconnected buffers

To determine or change the number of unconnected buffers, use a MSG instruction.

- The range is 10 to 40 unconnected buffers.
- The default number is 10.
- Each unconnected buffers uses 1.1 KB of memory.

## Get the number of unconnected buffers

To determine the number of unconnected buffers that are currently available, configure a Message (MSG) instruction as follows.

On this tab	For this item	Type or choose	
Configuration	Message Type	CIP Generic	
	Service Type	Custom	
	Service Code	3	
	Class	304	
	Instance	1	
	Attribute	0	
	Source Element	<i>source_array</i> where data type = SINT[4]	
		<b>In this element</b>	<b>Enter</b>
		<i>source_array</i> [0]	1
		<i>source_array</i> [1]	0
<i>source_array</i> [2]		17	
<i>source_array</i> [3]	0		
Source Length (bytes)	4 (Write 4 SINTs.)		
Destination Element	<i>destination_array</i> where data type = SINT[10] (Leave all values = 0.)		
	<i>destination_array</i> [6] = current number of unconnected buffers		
Communication	Path	1, <i>slot_number_of_controller</i>	



## Set the number of unconnected buffers

As a starting value, set the number of unconnected buffers equal to the number of unconnected and uncached messages enabled at one time plus 5. The additional 5 buffers provide a cushion in case you underestimate the number of messages that are enabled at once.

To change the number of unconnected buffers of the controller, configure a Message (MSG) instruction as follows.

On this tab	For this item	Type or select	
Configuration	Message Type	CIP Generic	
	Service Type	Custom	
	Service Code	4	
	Class	304	
	Instance	1	
	Attribute	0	
	Source Element	<i>source_array</i> where data type = SINT[8]	
		<b>In this element</b>	<b>Enter</b>
		<i>source_array</i> [0]	1
		<i>source_array</i> [1]	0
		<i>source_array</i> [2]	17
		<i>source_array</i> [3]	0
		<i>source_array</i> [4]	Number of unconnected buffers that you want.
<i>source_array</i> [5]		0	
<i>source_array</i> [6]		0	
<i>source_array</i> [7]	0		
Source Length (bytes)	8 (Write 8 SINTs.)		
Destination Element	<i>destination_array</i> where data type = SINT[6] (Leave all the values = 0.)		
Communication	Path	THIS or for earlier Logix 5000 controllers: 1, <i>slot_number_of_controller</i>	

**Example: Set the number of unconnected buffers**

If S:FS = 1 (first scan)

then set the number of unconnected buffers for the controller.

Source\_Array[0] = 1

Source\_Array[0] = 1

Source\_Array[1] = 0


Source\_Array[2] = 17

Source\_Array[3] = 0

Source\_Array[4] = 12 (The number of unconnected buffers that you want. In this example, we want 12 buffers.)

If UCB\_Set.EN = 0 (MSG instruction is not already enabled)

then MSG instruction sets the number of unconnected buffers = Source\_Array[4].

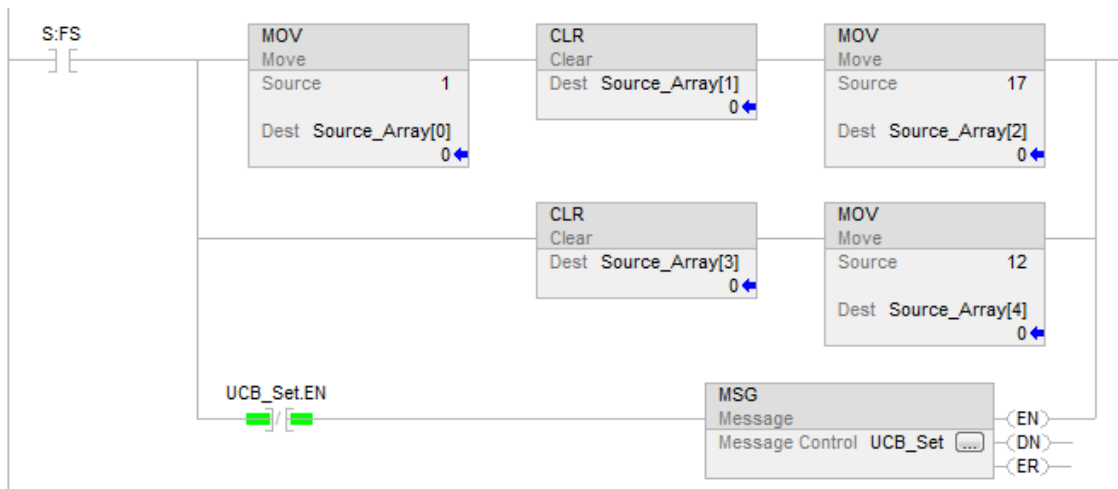


Tag Name	Type	Description
UCB_Set	MESSAGE	Control tag for the MSG instruction.
Source_Array	SINT[8]	Source values for the MSG instruction, including the number of unconnected buffers that you want.

## Convert between INTs and DINTs

In the Logix 5000 controller, use the DINT data type for integers whenever possible. Logix 5000 controllers execute more efficiently and use less memory when working with 32-bit integers (DINTs).

If your message is to a device that uses 16-bit integers, such as a PLC-5 or SLC 500 controller, and it transfers integers (not REALs), use a buffer of INTs in the message and DINTs throughout the project. This increases the efficiency of your project.


**Read 16-bit integers**

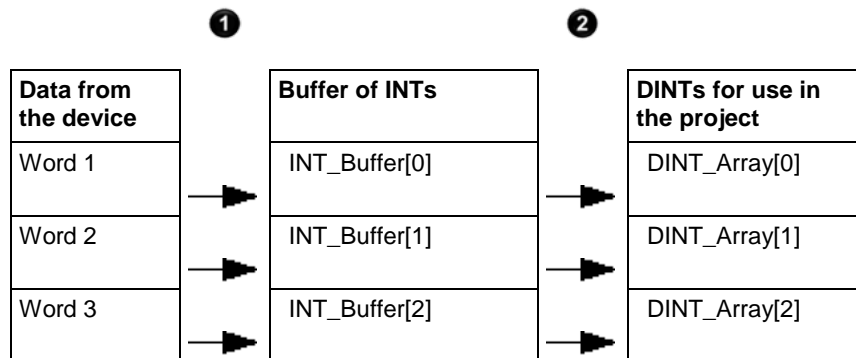

**Description**

<b>1</b>	The Message (MSG) instruction reads 16-bit integers (INTs) from the device and stores them in a temporary array of INTs.
<b>2</b>	A File Arith/Logical (FAL) instruction converts the INTs to DINTs for use by other instructions in your project.

**Write 16-bit integers**

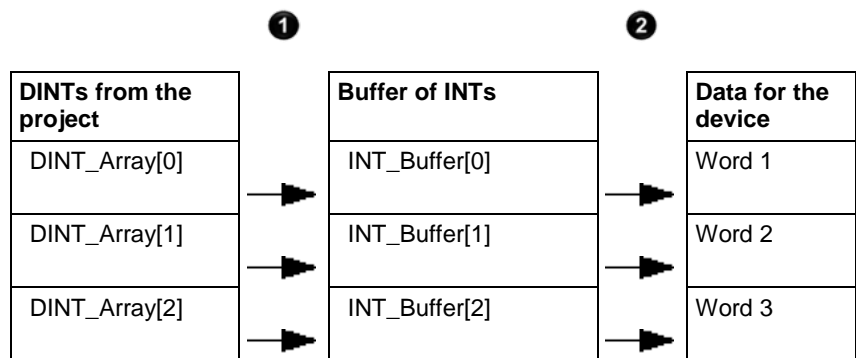

**Description**

<b>1</b>	An FAL instruction converts the DINTs from the Logix 5000 controller to INTs.
<b>2</b>	The MSG instruction writes the INTs from the temporary array to the device.

**Example: Read integer values from a PLC-5 controller**

If Condition\_1 = 1  
 and Msg\_1.EN = 0 (MSG instruction is not enabled)  
 then read 3 integers from the PLC-5 controller and store them in INT\_Buffer (3 INTs).



If Msg\_1.DN = 1 (MSG instruction has read the data)  
 then reset the FAL instruction.  
 The FAL instruction sets DINT\_Array = INT\_Buffer. This converts the values to 32-bit integers (DINTs).



**Example: Write integer values to a PLC-5 controller**

If Condition\_2 = 1  
 then reset the FAL instruction.  
 The FAL instruction sets INT\_Buffer = DINT\_Array. This converts the values to 16-bit integers (INTs).



If Control\_2.DN = 1 (FAL instruction has converted the DINTs to INTs)  
 and Msg\_2.EN = 0 (MSG instruction is not enabled)  
 then write the integers in INT\_Buffer (3 INTs) to the PLC-5 controller.







# Manage multiple messages

## Introduction

You can use ladder logic to send groups of message (MSG) instructions in sequence.

- To be processed, each MSG instruction must enter the message queue.
- The queue holds 48 MSGs.
- If more than 16 MSGs are enabled at one time, the message throttle prevents some of the messages from entering the message queue. If this occurs, the MSG is held until room exists on the queue for the controller to process the MSG. On each subsequent scan of the MSG, it checks the queue to see if room exists.

The message manager logic lets you control the number of MSGs that are enabled at one time and enable subsequent MSGs in sequence. In this way, MSGs enter and exit the queue in order and do not need to wait for room on the queue to become available.

## Message manager logic

The message manager logic sends three groups of MSGs. Use as many groups as needed to include all your MSGs.

The Msg\_Group tag controls the enabling of each MSG.

- The tag uses the DINT data type.
- Each bit of the tag corresponds to a group of MSGs. For example, Msg\_Group.0 enables and disables the first group of MSGs (group 0).

### Example: Message manner logic


To make the example easier to follow, each group contains only two MSGs. In your project, use more MSGs in each group, such as five.

#### Initialize the logic

If S:FS = 1 (first scan)  
then initialize the MSGs:

Msg\_Group = 0, which disables all MSGs.


Msg\_Group.0 =1, which enables the first group of MSGs.

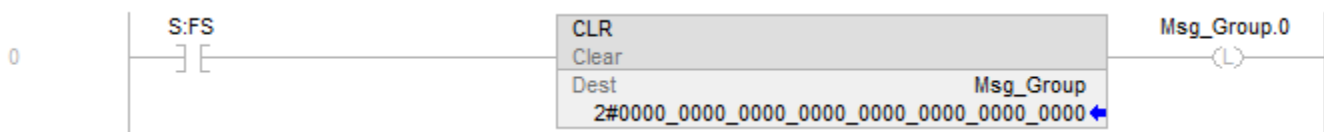

**Restart the sequence**

If the MSGs in group 2 (last group) are currently enabled (Msg\_Group.2 = 1) and Msg\_4 is in the state of done or error and Msg\_5 is in the state of done or error then restart the sequence of MSGs with the first group:

- Msg\_Group.2 = 0. This disables the last group of MSGs.
- Msg\_Group.0 = 1. This enables the first group of MSGs.

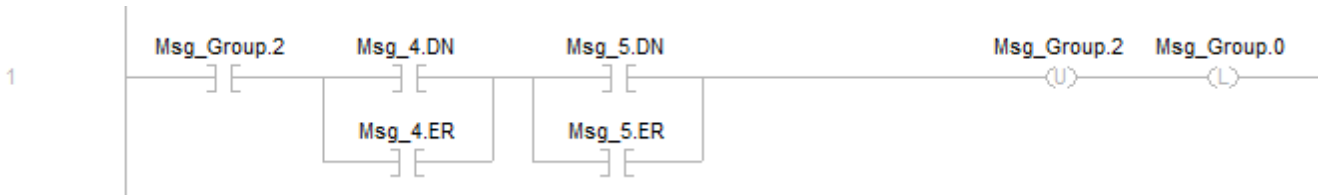

**Send the first group of MSGs**

If Msg\_Group.0 changes from 0 -> 1 then send Msg\_0.  
send Msg\_1.


Because a MSG instruction is a transitional instruction, it executes only when its rung-condition-in changes from false to true.



**Enable the second group of MSGs**

If the MSGs in group 0 are currently enabled (Msg\_Group.0 = 1) and Msg\_0 is in the state of done or error and Msg\_1 is in the state of done or error then:

- Msg\_Group.0 = 0. This disables the current group of MSGs.
- Msg\_Group.1 = 1. This enables the next group of MSGs.

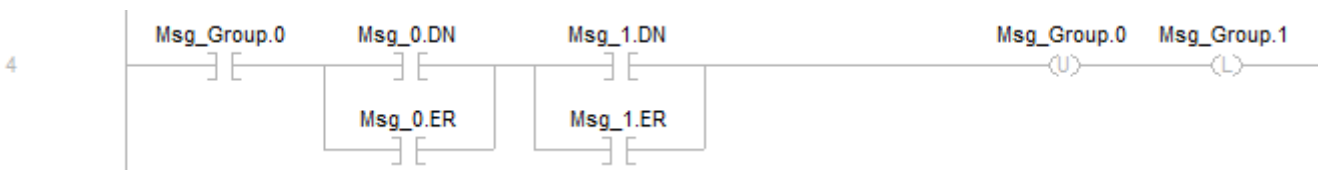



**Send the second group of MSGs**


If Msg\_Group.1 changes from 0 -> 1 then  
 send Msg\_2.  
 send Msg\_3.



**Enable the next group of MSGs**

If the MSGs in group 1 are currently enabled (Msg\_Group.1 = 1)  
 and Msg\_2 is in the state of done or error  
 and Msg\_3 is in the state of done or error  
 then:

Msg\_Group.1 = 0. This disables the current group of MSGs.  
 Msg\_Group.2 = 1. This enables the next group of MSGs.

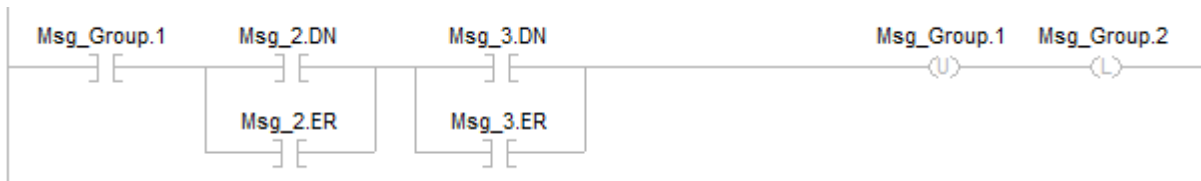

**Send the next group of MSGs**

If Msg\_Group.1 changes from 0 -> 1 then  
 send Msg\_2.  
 send Msg\_3.






# Send a message to multiple controllers

## Introduction

Program a single message instruction to communicate with multiple controllers. To reconfigure a MSG instruction during runtime, write new values to the members of the MESSAGE data type.

**Important:** In the MESSAGE data type, the RemoteElement member stores the tag name or address of the data in the controller that receives the message.

If the message	Then the RemoteElement is the
Reads data	Source element
Writes data	Destination element

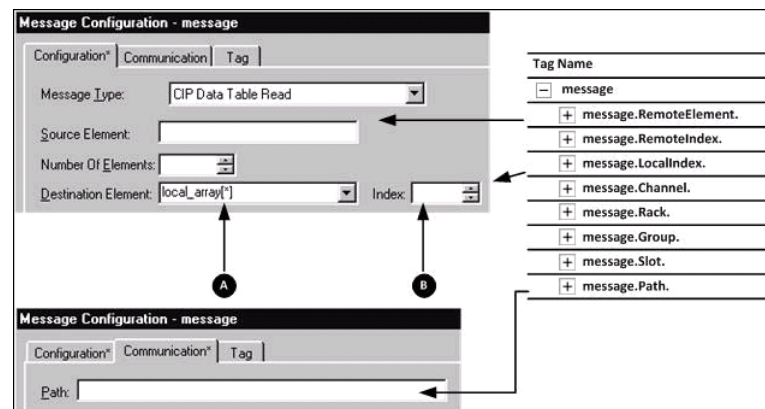

- A** If using an asterisk [\*] to designate the element number of the array, the value in **B** provides the element number.
- B** The **Index** box is available only when using an asterisk [\*] in **Source Element** or **Destination Element**. The instruction substitutes the value of **Index** for the asterisk [\*].

Complete the following to send a message to multiple controllers:

- [Set Up the I/O Configuration](#) on [page 28](#)
- [Define Your Source and Destination Elements](#) on [page 29](#)
- [Create the MESSAGE\\_CONFIGURATION Data Type](#) on [page 30](#)
- [Create the Configuration Array](#) on [page 31](#)

- [Get the Size of the Local Array](#) on [page 32](#)
- [Load the Message Properties for a Controller](#) on [page 33](#)
- [Configure the Message](#) on [page 33](#)
- [Step to the Next Controller](#) on [page 34](#)
- [Restart the Sequence](#) on [page 34](#)

**Tip:** To copy the above components from a sample project, open the **C:\Users\Public\Public Documents\Studio 5000\Samples\ENU\<current\_project>\Rockwell Automation** folder.

## Configure the I/O configuration

Although not required, it is recommended that you add the communication modules and remote controllers to the I/O configuration of the controller. This makes it easier to define the path to each remote controller.

For example, once you add the local communication module, the remote communication module, and the destination controller, clicking Browse lets you select the destination.


---

### Message Path Browser

---

Path: peer\_controller

peer\_controller

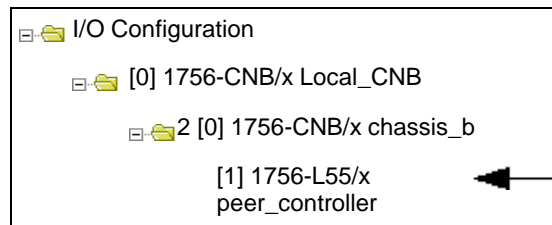

## Define your source and destination elements

An array stores the data that is read from or written to each remote controller. Each element in the array corresponds to another remote controller.

1. Use the following worksheet to organize the tag names in the local and remote controllers.

Name of Remote Controller	Tag or Address of Data in Remote Controller	Tag in This Controller
		local_array[0]
		local_array[1]
		local_array[2]
		local_array[3]

2. Create the local\_array tag, which stores the data in this controller.


Tag Name	Type
local_array	<i>data_type</i> [ <i>length</i> ] where: <i>data_type</i> is the data type of the data that the message sends or receives, such as DINT, REAL, or STRING. <i>length</i> is the number of elements in the local array.

## Create the MESSAGE\_CONFIGURATION data type

Create a user-defined data type to store the configuration variables for the message to each controller.

- Some of the required members of the data type use a string data type.
- The default STRING data type stores 82 characters.
- If your paths or remote tag names or addresses use less than 82 characters, you have the option of creating a new string type that stores fewer characters. This lets you conserve memory.
- To create a string type, click **File > New Component > String Type**.
- If you create a string type, use it in place of the STRING data type.

To store the configuration variables for the message to each controller, expand the **Assets > Data Types** folder, right-click **User Defined**, and select **New Data Type** to create the following user-defined data type.

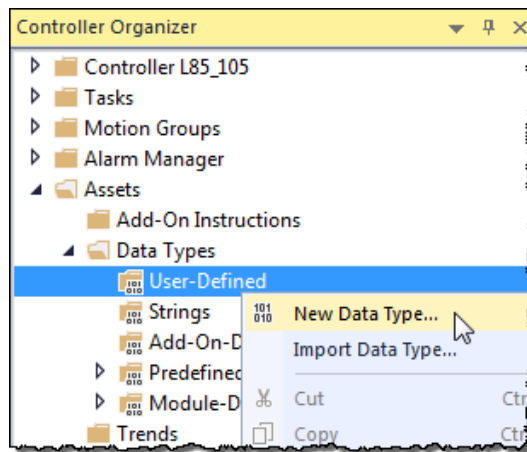


---

### Data Type: MESSAGE\_CONFIGURATION

---

Name: MESSAGE\_CONFIGURATION

---

Description: Configuration properties for a message to another controller


---

#### Members

Name	Data Type	Style	Description
+ Path	STRING		
+ RemoteElement	STRING		

## Create the configuration array

Store the configuration properties for each controller in an array. Before each execution of the MSG instruction, your logic loads new properties into the instruction. This sends the message to another controller.

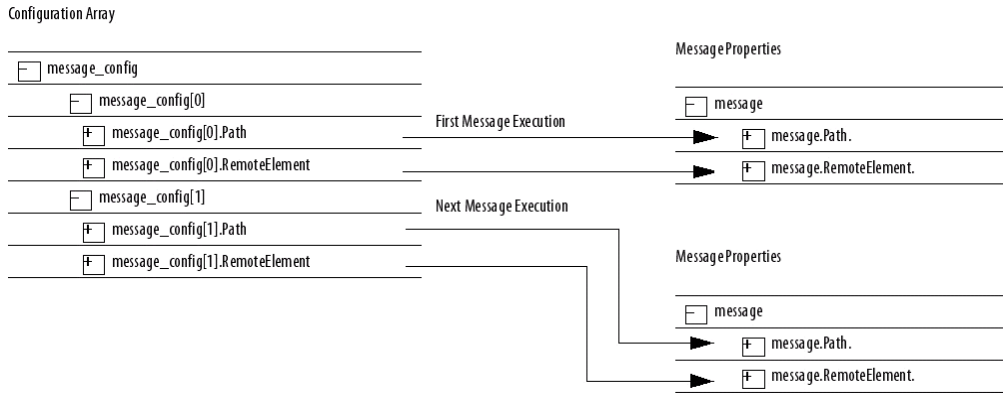

1. To store the configuration properties for the message, create the following array.


Tag Name	Type	Scope
message_config	MESSAGE_CONFIGURATION[number] <sup>(1)</sup>	Any

(1) Number indicates the number of controllers to send the message

2. In the message\_config array, enter the path to the first controller that receives the message.

Tag Name	Value
message_config	{...}
message_config[0]	{...}
message_config[0].Path	
message_config[0].RemoteElement	

- In the message\_config array, enter the tag name or address of the data in the first controller to receive the message.

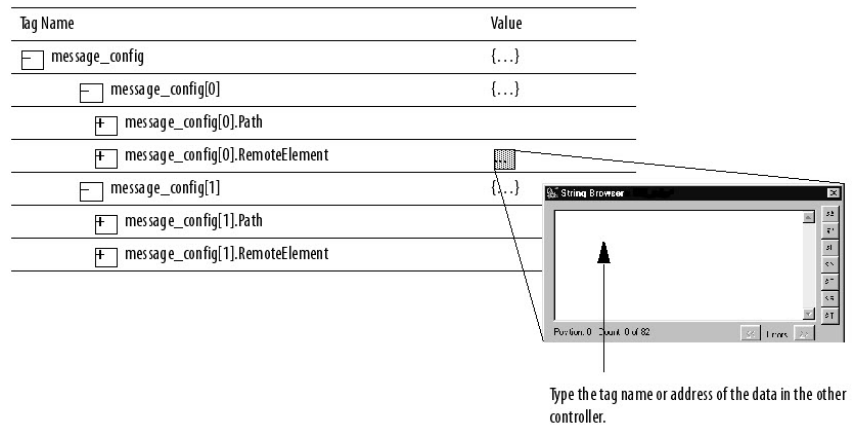

- Enter the path and remote element for each additional controller.

Tag Name	Value
message_config	{...}
message_config[0]	{...}
message_config[0].Path	
message_config[0].RemoteElement	
message_config[1]	{...}
message_config[1].Path	←
message_config[1].RemoteElement	←

## Get the size of the local array

The SIZE instruction:

- Counts the number of elements in local\_array.
- Counts the number of elements in Dimension 0 of the array. In this case, that is the only dimension.


Local\_array\_length (DINT) stores the size (number of elements) of local\_array. This value tells a subsequent rung when the message is sent to all controllers and to start with the first controller again.






## Load the message properties for a controller

1. The XIO instruction conditions the rung to continuously send the message.
2. The first COP instruction loads the path for the message. The value of index determines which element the instruction loads from message\_config. The instruction loads one element from message\_config.
3. The second COP instruction loads the tag name or address of the data in the controller that receives the message. The value of index determines which element the instruction loads from message\_config. The instruction loads one element from message\_config.

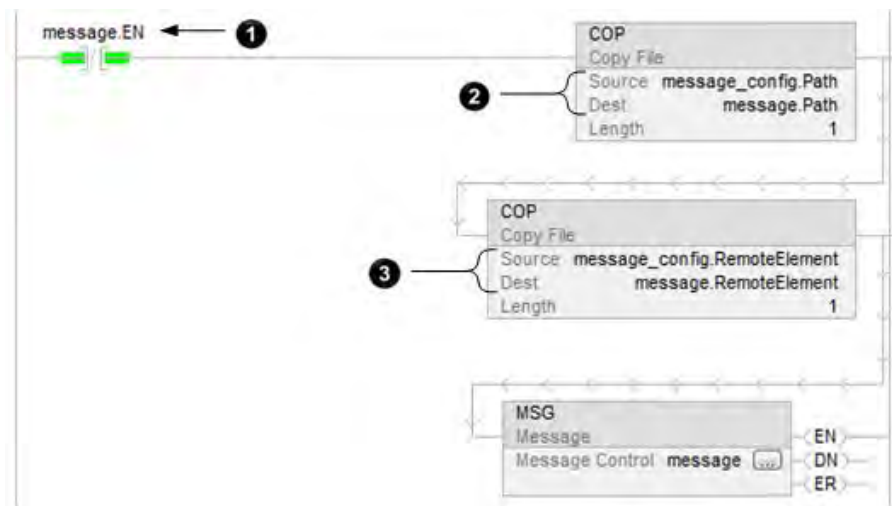

## Configure the message

The following table explains how to configure the message.




On this tab	If you want to	For this item	Type or select
Configuration	Read (receive) data from the other controllers	Message Type	The read-type that corresponds to the other controllers
		Source Element	Tag or address that contains the data in the first controller
		Number Of Elements	1
		Destination Element	local_array[*]
		Index	0
	Write (send) data to the other controllers	Message Type	The write-type that corresponds to other controllers
		Source Element	local_array[*]
		Index	0
		Number Of Elements	1
		Destination Element	Tag or address that contains the data in the first controller

Communication	—	Path	Path to the first controller
		Cache Connections	Clear the <b>Cache Connections</b> check box (more efficient since this procedure continuously changes the path of the message)

## Step to the next controller

After the MSG instruction sends the message, the following actions occur.


1. The first ADD instruction increments the index. This lets the logic load the configuration properties for the next controller into the MSG instruction.
2. The second ADD instruction increments the LocalIndex member of the MSG instruction. This lets the logic load the value from the next controller into the next element of local\_array.

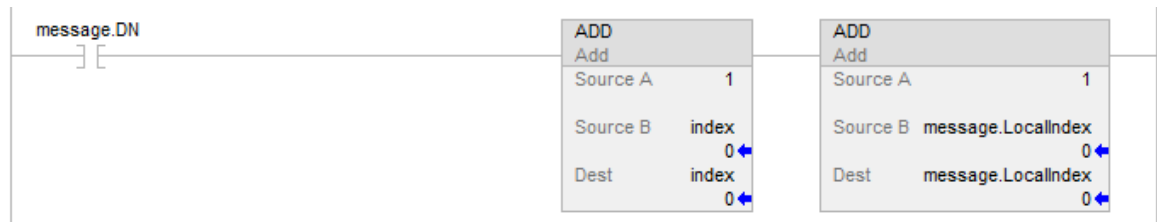

## Restart the sequence

When the index equals the local\_array\_length, the controller sends the message to all other controllers.

1. The first CLR instruction sets the index equal to 0. This lets the logic load the configuration properties for the first controller into the MSG instruction and start the sequence of messages again.
2. The second CLR instruction sets the LocalIndex member of the MSG instruction equal to 0. This lets the logic load the value from the first controller into the first element of local\_array.

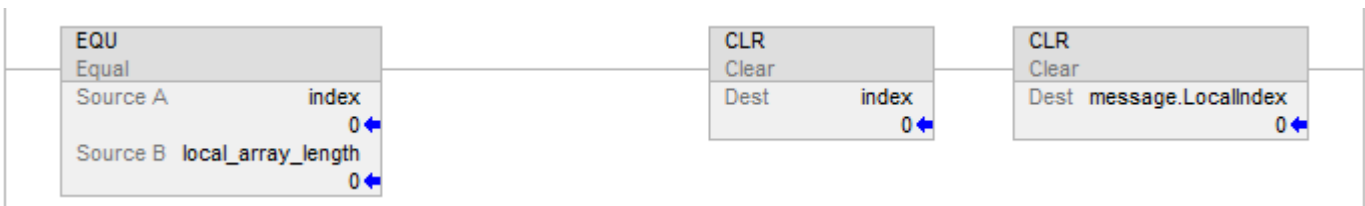

## A

array  
controller configuration 28

## B

block transfer  
guidelines 15  
buffer  
for unconnected messages 14, 16

## C

cache  
connection 13  
communicate  
message instruction 11  
other controllers 11  
connection  
cache 13  
controller  
message properties 30  
messages 11

## D

data type  
convert data 18  
message configuration 27

## G

guidelines  
messages 15

## L

ladder logic  
manage messages 21

## M

message  
cache connection 13  
controller 11  
convert between 16 and 32-bit data 18

example illustration 11  
limits 12  
manage multiple messages 21  
processing 11  
queue 12  
to a single controller 11  
to multiple controllers 25  
unconnected buffer 14, 16

## P

processing  
message 11

## Q

queue  
message 12

## T

tag  
guidelines for messages 15  
organize for message 11

# Rockwell Automation support

Rockwell Automation provides technical information on the web to assist you in using its products. At <http://www.rockwellautomation.com/support> you can find technical and application notes, sample code, and links to software service packs. You can also visit our Support Center at <https://rockwellautomation.custhelp.com> for software updates, support chats and forums, technical information, FAQs, and to sign up for product notification updates.

In addition, we offer multiple support programs for installation, configuration, and troubleshooting. For more information, contact your local distributor or Rockwell Automation representative, or visit <http://www.rockwellautomation.com/services/online-phone>.

## Installation assistance

If you experience a problem within the first 24 hours of installation, review the information that is contained in this manual. You can contact Customer Support for initial help in getting your product up and running.

United States or Canada	1.440.646.3434
Outside United States or Canada	Use the Worldwide Locator available at <a href="http://www.rockwellautomation.com/locations">http://www.rockwellautomation.com/locations</a> , or contact your local Rockwell Automation representative.

## New product satisfaction return

Rockwell Automation tests all of its products to ensure that they are fully operational when shipped from the manufacturing facility. However, if your product is not functioning and needs to be returned, follow these procedures.

United States	Contact your distributor. You must provide a Customer Support case number (call the phone number above to obtain one) to your distributor to complete the return process.
Outside United States	Please contact your local Rockwell Automation representative for the return procedure.

## Documentation feedback

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete the feedback form, publication [RA-DU002](#).

Rockwell Otomasyon Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400

[www.rockwellautomation.com](http://www.rockwellautomation.com)

### Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444  
Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleedaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640  
Asia Pacific: Rockwell Automation, Level 14, Core E, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Rockwell Automation Publication 1756-PM012H-EN-P - February 2018