

Installation Instructions

Original Instructions



Allen-Bradley

by ROCKWELL AUTOMATION

FLEX I/O 2-input Frequency Modules

Catalog Numbers 1794-IJ2, 1794-IJ2XT

Topic	Page
Summary of Changes	1
Install Your Frequency Input Module	5
Connect Wiring for the 1794-TB3G or 1794-TB3GS Terminal Base Unit	5
Resolution and Accuracy	7
Interpret Status Indicators	8
Diagnostics	9
Specifications	10
Additional Resources	12

Summary of Changes

This publication contains the following new or updated information. This list includes substantive updates only and is not intended to reflect all changes.

Topic	Page
Updated Certifications	12
Added Additional Resources	12



ATTENTION: Read this document and the documents listed in the Additional Resources section about installation, configuration and operation of this equipment before you install, configure, operate or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice. If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

注意：在安装、配置、操作和维护本产品前，请阅读本文档以及“其他资源”部分列出的有关设备安装、配置和操作的相应文档。除了所有适用规范、法律和标准的相关要求之外，用户还必须熟悉安装和接线说明。

安装、调整、投运、使用、组装、拆卸和维护等各项操作必须由经过适当训练的专业人员按照适用的操作规范实施。

如果未按照制造商指定的方式使用该设备，则可能会损害设备提供的保护。

ATENCIÓN: Antes de instalar, configurar, poner en funcionamiento o realizar el mantenimiento de este producto, lea este documento y los documentos listados en la sección Recursos adicionales acerca de la instalación, configuración y operación de este equipo. Los usuarios deben familiarizarse con las instrucciones de instalación y cableado y con los requisitos de todos los códigos, leyes y estándares vigentes.

El personal debidamente capacitado debe realizar las actividades relacionadas a la instalación, ajustes, puesta en servicio, uso, ensamblaje, desensamblaje y mantenimiento de conformidad con el código de práctica aplicable. Si este equipo se usa de una manera no especificada por el fabricante, la protección provista por el equipo puede resultar afectada.

ATENÇÃO: Leia este e os demais documentos sobre instalação, configuração e operação do equipamento que estão na seção Recursos adicionais antes de instalar, configurar, operar ou manter este produto. Os usuários devem se familiarizar com as instruções de instalação e fiação além das especificações para todos os códigos, leis e normas aplicáveis.

É necessário que as atividades, incluindo instalação, ajustes, colocação em serviço, utilização, montagem, desmontagem e manutenção sejam realizadas por pessoal qualificado e especializado, de acordo com o código de prática aplicável.

Caso este equipamento seja utilizado de maneira não estabelecida pelo fabricante, a proteção fornecida pelo equipamento pode ficar prejudicada.

ВНИМАНИЕ: Перед тем как устанавливать, настраивать, эксплуатировать или обслуживать данное оборудование, прочитайте этот документ и документы, перечисленные в разделе «Дополнительные ресурсы». В этих документах изложены сведения об установке, настройке и эксплуатации данного оборудования. Пользователи обязаны ознакомиться с инструкциями по установке и прокладке соединений, а также с требованиями всех применимых норм, законов и стандартов.

Все действия, включая установку, наладку, ввод в эксплуатацию, использование, сборку, разборку и техническое обслуживание, должны выполняться обученным персоналом в соответствии с применимыми нормами и правилами.

Если оборудование используется не предусмотренным производителем образом, защита оборудования может быть нарушена.

注意：本製品を設置、構成、稼働または保守する前に、本書および本機器の設置、設定、操作についての参考資料の該当箇所に記載されている文書に目を通してください。ユーザは、すべての該当する条例、法律、規格の要件に加えて、設置および配線の手順に習熟している必要があります。

設置調整、運転の開始、使用、組立て、解体、保守を含む諸作業は、該当する実施規則に従って訓練を受けた適切な作業員が実行する必要があります。

本機器が製造メーカーにより指定されていない方法で使用されている場合、機器により提供されている保護が損なわれる恐れがあります。

ACHTUNG: Lesen Sie dieses Dokument und die im Abschnitt „Weitere Informationen“ aufgeführten Dokumente, die Informationen zu Installation, Konfiguration und Bedienung dieses Produkts enthalten, bevor Sie dieses Produkt installieren, konfigurieren, bedienen oder warten. Anwender müssen sich neben den Bestimmungen aller anwendbaren Vorschriften, Gesetze und Normen zusätzlich mit den Installations- und Verdrahtungsanweisungen vertraut machen.

Arbeiten im Rahmen der Installation, Anpassung, Inbetriebnahme, Verwendung, Montage, Demontage oder Instandhaltung dürfen nur durch ausreichend geschulte Mitarbeiter und in Übereinstimmung mit den anwendbaren Ausführungsvorschriften vorgenommen werden.

Wenn das Gerät in einer Weise verwendet wird, die vom Hersteller nicht vorgesehen ist, kann die Schutzfunktion beeinträchtigt sein.

ATTENTION : Lisez ce document et les documents listés dans la section Ressources complémentaires relatifs à l'installation, la configuration et le fonctionnement de cet équipement avant d'installer, configurer, utiliser ou entretenir ce produit. Les utilisateurs doivent se familiariser avec les instructions d'installation et de câblage en plus des exigences relatives aux codes, lois et normes en vigueur. Les activités relatives à l'installation, le réglage, la mise en service, l'utilisation, l'assemblage, le démontage et l'entretien doivent être réalisées par des personnes formées selon le code de pratique en vigueur.

Si cet équipement est utilisé d'une façon qui n'a pas été définie par le fabricant, la protection fournie par l'équipement peut être compromise.

주의：본 제품 설치, 설정, 작동 또는 유지보수하기 전에 본 문서를 포함하여 설치, 설정 및 작동에 관한 참고 자료 섹션의 문서들을 반드시 읽고 숙지하십시오. 사용자는 모든 관련 규정, 법규 및 표준에서 요구하는 사항에 대해 반드시 설치 및 배선 지침을 숙지해야 합니다.

설치, 조정, 가동, 사용, 조립, 분해, 유지보수 등 모든 작업은 관련 규정에 따라 적절한 교육을 받은 사용자를 통해서만 수행해야 합니다.

본 장비를 제조사가 명시하지 않은 방법으로 사용하면 장비의 보호 기능이 손상될 수 있습니다.

ATTENZIONE Prima di installare, configurare ed utilizzare il prodotto, o effettuare interventi di manutenzione su di esso, leggere il presente documento ed i documenti elencati nella sezione "Altre risorse", riguardanti l'installazione, la configurazione ed il funzionamento dell'apparecchiatura. Gli utenti devono leggere e comprendere le istruzioni di installazione e cablaggio, oltre ai requisiti previsti dalle leggi, codici e standard applicabili.

Le attività come installazione, regolazioni, utilizzo, assemblaggio, disassemblaggio e manutenzione devono essere svolte da personale adeguatamente addestrato, nel rispetto delle procedure previste. Qualora l'apparecchio venga utilizzato con modalità diverse da quanto previsto dal produttore, la sua funzione di protezione potrebbe venire compromessa.

DIKKAT: Bu ürünün kurulumu, yapılandırılması, işletilmesi veya bakımı öncesinde bu dokümanı ve bu ekipmanın kurulumu, yapılandırılması ve işletimi ile ilgili ilave Kaynaklar bölümünde yer listelenmiş dokümanları okuyun. Kullanıcılar yürürlükteki tüm yönetmelikler, yasalar ve standartların gereksinimlerine ek olarak kurulum ve kablolama talimatlarını da öğrenmek zorundadır.

Kurulum, ayarlama, hizmete alma, kullanma, parçaları birleştirme, parçaları sökme ve bakım gibi aktiviteler sadece uygun eğitimleri almış kişiler tarafından yürürlükteki uygulama yönetmeliklerine uygun şekilde yapılabilir.

Bu ekipman üretici tarafından belirlenmiş amacın dışında kullanılırsa, ekipman tarafından sağlanan koruma bozulabilir.

注意事項：在安装、設定、操作或維護本產品前，請先閱讀此文件以及列於「其他資源」章節中有關安裝、設定與操作此設備的文件。使用者必須熟悉安裝和配線指示，並符合所有法規、法律和標準要求。

包括安裝、調整、交付使用、使用、組裝、拆卸和維護等動作都必須交由已經過適當訓練的人員進行，以符合適用的實作法規。

如果將設備用於非製造商指定的用途時，可能會造成設備所提供的保護功能受損。

POZOR: Než začnete instalovat, konfigurovat či provozovat tento výrobek nebo provádět jeho údržbu, přečtěte si tento dokument a dokumenty uvedené v části Dodatečné zdroje ohledně instalace, konfigurace a provozu tohoto zařízení. Uživatelé se musejí vedle požadavků všech relevantních vyhlášek, zákonů a norem nutně seznámit také s pokyny pro instalaci a elektrické zapojení.

Činnosti zahrnující instalaci, nastavení, uvedení do provozu, užívání, montáž, demontáž a údržbu musí vykonávat vhodné proškolený personál v souladu s příslušnými prováděcími předpisy.

Pokud se toto zařízení používá způsobem neodpovídajícím specifikaci výrobce, může být narušena ochrana, kterou toto zařízení poskytuje.

UWAGA: Przed instalacją, konfiguracją, użytkowaniem lub konserwacją tego produktu należy przeczytać niniejszy dokument oraz wszystkie dokumenty wymienione w sekcji Dodatkowe źródła omawiające instalację, konfigurację i procedury użytkowania tego urządzenia. Użytkownicy mają obowiązek zapoznać się z instrukcjami dotyczącymi instalacji oraz przewodowania, jak również z obowiązującymi kodeksami, prawem i normami.

Działania obejmujące instalację, regulację, przekazanie do użytkowania, użytkowanie, montaż, demontaż oraz konserwację muszą być wykonywane przez odpowiednio przeszkolony personel zgodnie z obowiązującym kodeksem postępowania.

Jeśli urządzenie jest użytkowane w sposób inny niż określony przez producenta, zabezpieczenie zapewniane przez urządzenie może zostać ograniczone.

OBST! Läs detta dokument samt dokumentet, som står listat i avsnittet Övriga resurser, om installation, konfiguration och drift av denna utrustning innan du installerar, konfigurerar eller börjar använda eller utföra underhållsarbete på produkten. Användare måste bekanta sig med instruktioner för installation och kabeldragning, förutom krav enligt gällande koder, lagar och standarder.

Åtgärder som installation, justering, service, användning, montering, demontering och underhållsarbete måste utföras av personal med lämplig utbildning enligt lämpligt bruk.

Om denna utrustning används på ett sätt som inte anges av tillverkaren kan det hända att utrustningens skyddsanordningar försätts ur funktion.

LET OP: Lees dit document en de documenten die genoemd worden in de paragraaf Aanvullende informatie over de installatie, configuratie en bediening van deze apparatuur voordat u dit product installeert, configureert, bedient of onderhoudt. Gebruikers moeten zich vertrouwd maken met de installatie en de bedradingsinstructies, naast de vereisten van alle toepasselijke regels, wetten en normen.

Activiteiten zoals het installeren, afstellen, in gebruik stellen, gebruiken, monteren, demonteren en het uitvoeren van onderhoud mogen uitsluitend worden uitgevoerd door hiervoor opgeleid personeel en in overeenstemming met de geldende praktijkregels.

Indien de apparatuur wordt gebruikt op een wijze die niet is gespecificeerd door de fabrikant, dan bestaat het gevaar dat de beveiliging van de apparatuur niet goed werkt.

Environment and Enclosure



ATTENTION:

This equipment is intended for use in a Pollution Degree 2 industrial environment, in overvoltage Category II applications (as defined in EN/IEC 60664-1), at altitudes up to 2000 m (6562 ft) without derating.

This equipment is not intended for use in residential environments and may not provide adequate protection to radio communication services in such environments.

This equipment is supplied as open-type equipment for indoor use. It must be mounted within an enclosure that is suitably designed for those specific environmental conditions that will be present and appropriately designed to prevent personal injury resulting from accessibility to live parts. The enclosure must have suitable flame-retardant properties to prevent or minimize the spread of flame, complying with a flame spread rating of 5VA or be approved for the application if nonmetallic. The interior of the enclosure must be accessible only by the use of a tool. Subsequent sections of this publication may contain more information regarding specific enclosure type ratings that are required to comply with certain product safety certifications.

In addition to this publication, see the following:

- Industrial Automation Wiring and Grounding Guidelines, publication [1770-4.1](#), for additional installation requirements.
- NEMA Standard 250 and IEC 60529, as applicable, for explanations of the degrees of protection provided by enclosures.



WARNING: If you insert or remove the module while backplane power is on, an electric arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.



WARNING: If you connect or disconnect wiring while the field-side power is on, an electric arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.



ATTENTION: Personnel responsible for the application of safety-related Programmable Electronic Systems (PES) shall be aware of the safety requirements in the application of the system and shall be trained in using the system.



ATTENTION: Do not remove or replace a Terminal Base unit while power is applied. Interruption of the backplane can result in unintentional operation or machine motion.



ATTENTION: This product is grounded through the DIN rail to chassis ground. Use zinc-plated chromate-passivated steel DIN rail to assure proper grounding. The use of other DIN rail materials (for example, aluminum or plastic) that can corrode, oxidize, or are poor conductors, can result in improper or intermittent grounding. Secure DIN rail to mounting surface approximately every 200 mm (7.8 in.) and use end-anchors appropriately. Be sure to ground the DIN rail properly. See the Industrial Automation Wiring and Grounding Guidelines, publication [1770-4.1](#), for more information.

Prevent Electrostatic Discharge



ATTENTION: This equipment is sensitive to electrostatic discharge, which can cause internal damage and affect normal operation. Follow these guidelines when you handle this equipment:

- Touch a grounded object to discharge potential static.
- Wear an approved grounding wriststrap.
- Do not touch connectors or pins on component boards.
- Do not touch circuit components inside the equipment.
- Use a static-safe workstation, if available.
- Store the equipment in appropriate static-safe packaging when not in use.



ATTENTION: To reduce susceptibility to noise, power analog modules and digital modules from separate power supplies. Do not exceed a total length of 9.8 ft (3 m) for DC power cabling.

UK and European Hazardous Location Approval

The following applies to products marked II 3 G:

- Are Equipment Group II, Equipment Category 3, and comply with the Essential Health and Safety Requirements relating to the design and construction of such equipment given in Schedule 1 of UKEX and Annex II of EU Directive 2014/34/EU. See the UKEX and EU Declaration of Conformity at rok.auto/certifications for details.
- The type of protection is Ex ec IIC T4 Gc according to EN IEC 60079-0:2018, EXPLOSIVE ATMOSPHERES - PART 0: EQUIPMENT - GENERAL REQUIREMENTS, Issue Date 07/2018 and EN IEC 60079-7:2015+A1:2018, Explosive atmospheres. Equipment protection by increased safety "e".
- Comply with Standard EN IEC 60079-0:2018, EXPLOSIVE ATMOSPHERES - PART 0: EQUIPMENT - GENERAL REQUIREMENTS, Issue Date 07/2018, EN IEC 60079-7:2015+A1:2018 Explosive atmospheres. Equipment protection by increased safety "e", reference certificate number DEMKO 14 ATEX 1342501X and UL22UKEX2378X.
- Are intended for use in areas in which explosive atmospheres caused by gases, vapors, mists, or air are unlikely to occur, or are likely to occur only infrequently and for short periods. Such locations correspond to Zone 2 classification according to UKEX regulation 2016 No. 1107 and ATEX directive 2014/34/EU.

IEC Hazardous Location Approval

The following applies to products marked with IECEx certification:



- Are intended for use in areas in which explosive atmospheres caused by gases, vapors, mists, or air are unlikely to occur, or are likely to occur only infrequently and for short periods. Such locations correspond to Zone 2 classification to IEC 60079-0.
- The type of protection is Ex ec IIC T4 Gc according to IEC 60079-0 and IEC 60079-7.
- Comply with Standards IEC 60079-0, Explosive atmospheres Part 0: Equipment - General requirements, Edition 7, Revision Date 2017, IEC 60079-7, 5.1 Edition revision date 2017, Explosive atmospheres - Part 7: Equipment protection by increased safety "e", reference IECEx certificate number IECEx UL 14.0066X.




WARNING: Special Conditions for Safe Use

- This equipment is not resistant to sunlight or other sources of UV radiation.
- This equipment shall be mounted in an UKEX/ATEX/IECEx Zone 2 certified enclosure with a minimum ingress protection rating of at least IP54 (in accordance with EN/IEC 60079-0) and used in an environment of not more than Pollution Degree 2 (as defined in EN/IEC 60664-1) when applied in Zone 2 environments. The enclosure must be accessible only by the use of a tool.
- This equipment shall be used within its specified ratings defined by Rockwell Automation.
- Transient protection shall be provided that is set at a level not exceeding 140% of the peak rated voltage value at the supply terminals to the equipment.
- This equipment must be used only with UKEX/ATEX/IECEx certified Rockwell Automation backplanes.
- Secure any external connections that mate to this equipment by using screws, sliding latches, threaded connectors, or other means provided with this product.
- Do not disconnect equipment unless power has been removed or the area is known to be nonhazardous.
- Earthing is accomplished through mounting of modules on rail.

North American Hazardous Location Approval

The Following Information Applies When Operating This Equipment In Hazardous Locations:	Informations sur l'utilisation de cet équipement en environnements dangereux:
<p>Products marked "CL I, DIV 2, GP A, B, C, D" are suitable for use in Class I Division 2 Groups A, B, C, D, Hazardous Locations and nonhazardous locations only. Each product is supplied with markings on the rating nameplate indicating the hazardous location temperature code. When combining products within a system, the most adverse temperature code (lowest "T" number) may be used to help determine the overall temperature code of the system. Combinations of equipment in your system are subject to investigation by the local Authority Having Jurisdiction at the time of installation.</p>	<p>Les produits marqués "CL I, DIV 2, GP A, B, C, D" ne conviennent qu'à une utilisation en environnements de Classe I Division 2 Groupes A, B, C, D dangereux et non dangereux. Chaque produit est livré avec des marquages sur sa plaque d'identification qui indiquent le code de température pour les environnements dangereux. Lorsque plusieurs produits sont combinés dans un système, le code de température le plus défavorable (code de température le plus faible) peut être utilisé pour déterminer le code de température global du système. Les combinaisons d'équipements dans le système sont sujettes à inspection par les autorités locales qualifiées au moment de l'installation.</p>
<div style="display: flex; align-items: center;">  <div> <p>WARNING: Explosion Hazard -</p> <ul style="list-style-type: none"> • Do not disconnect equipment unless power has been removed or the area is known to be nonhazardous. • Do not disconnect connections to this equipment unless power has been removed or the area is known to be nonhazardous. Secure any external connections that mate to this equipment by using screws, sliding latches, threaded connectors, or other means provided with this product. • Substitution of components may impair suitability for Class I Division 2. </div> </div>	<div style="display: flex; align-items: center;">  <div> <p>AVERTISSEMENT: Risque d'Explosion -</p> <ul style="list-style-type: none"> • Couper le courant ou s'assurer que l'environnement est classé non dangereux avant de débrancher l'équipement. • Couper le courant ou s'assurer que l'environnement est classé non dangereux avant de débrancher les connecteurs. Fixer tous les connecteurs externes reliés à cet équipement à l'aide de vis, loquets coulissants, connecteurs filetés ou autres moyens fournis avec ce produit. • La substitution de composants peut rendre cet équipement inadapté à une utilisation en environnement de Classe I Division 2. </div> </div>

Install Your Frequency Input Module

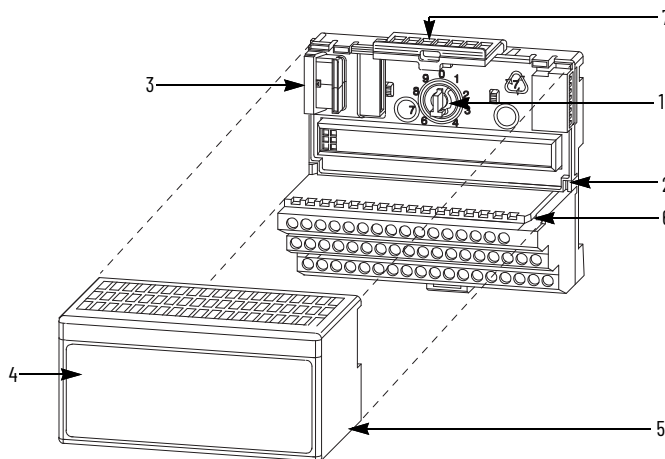

Component Identification

	Description		Description
1	Keyswitch	5	Alignment bar
2	Terminal base	6	Groove
3	Flexbus connectors	7	Latching mechanism
4	Module		



ATTENTION: During mounting of all devices, be sure that all debris (metal chips, wire strands, and so on) are kept from falling into the module. Debris that falls into the module could cause damage on power-up.

The FLEX™ I/O 2-input frequency modules mounts on a 1794-TB3G or 1794-TB3G-TB3GS terminal base.

1. Rotate the keyswitch (1) on the terminal base (2) clockwise to position 1 as required for this type of module.
2. Make sure that the Flexbus connector (3) is pushed all the way to the left to connect with the neighboring terminal base/adapter. **You cannot install the module unless the connector is fully extended.**
3. Make sure that the pins on the bottom of the module are straight so that they align properly with the connector in the terminal base.



WARNING: If you remove or insert the module while the backplane power is on, an electric arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.

4. Position the module (4) with its alignment bar (5) aligned with the groove (6) on the terminal base.
5. Press firmly and evenly to seat the module in the terminal base unit. The module is seated when the latching mechanism (7) is locked into the module.

Connect Wiring for the 1794-TB3G or 1794-TB3GS Terminal Base Unit

Connect wiring as shown in [Figure 1](#).




ATTENTION: To reduce susceptibility to noise, power analog modules and digital modules from separate power supplies. Do not exceed a length of 3 m (9.8 ft) for DC power cabling.



ATTENTION: Do not daisy chain power or ground from this terminal base unit to any AC or DC digital module terminal base units.

Figure 1 - Wiring Connections with a 1794-TB36 or 1794-TB36S Terminal Base Unit

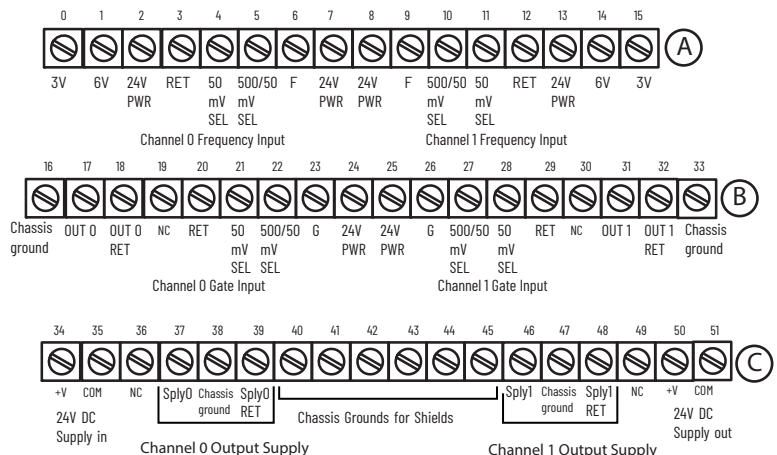

+24V DC = Terminals C-34 and C-50
 COM = C-35 and C-51
 Chassis ground = Terminals B-16, B-33, C-38, C-40...45, and C-47
 NC = No connection

1794-TB36 shown

For daisy chaining:
 Supply in - C-34 (+) and C-35 (-)
 Supply out - C-50 (+) and C-51 (-)

Output Alarm Connections	Channel 0 Terminals ⁽¹⁾				Channel 1 Terminals ⁽¹⁾			
	Sply +	Sply RET	Out +	Out RET	Sply +	Sply RET	Out +	Out RET
Supply	C-37	C-39			C-46	C-48		
Output			B-17	B-18			B-31	B-32

(1) Connect cable shields to ground connections.

Types of Inputs	Channel 0 Terminals ⁽¹⁾			Channel 1 Terminals ⁽¹⁾			GND ⁽¹⁾
	Power	Input	RET ⁽²⁾	Power	Input	RET ⁽²⁾	
Frequency							
24V DC IEC 1+ Proximity ⁽³⁾⁽⁴⁾	A-7	A-6	A-3	A-8	A-9	A-12	
24V DC Contact Switch ⁽⁵⁾	A-7	A-6	A-3	A-8	A-9	A-12	
500 mV AC Magnetic Pickup	A-7	A-5	A-3	A-8	A-10	A-12	
50 mV AC Magnetic Pickup ⁽⁶⁾	A-7	A-5	A-3	A-8	A-10	A-12	
6V AC Vortex	A-2	A-1	A-3	A-13	A-14	A-12	
3V AC Vortex	A-2	A-0	A-3	A-13	A-15	A-12	
Gate							
24V DC IEC 1+ Proximity ⁽³⁾⁽⁴⁾	B-24	B-23	B-20	B-25	B-26	B-29	
24V DC Contact Switch ⁽⁵⁾	B-24	B-23	B-20	B-25	B-26	B-29	
500 mV DC Magnetic Pickup	B-24	B-22	B-20	B-25	B-27	B-29	
50 mV DC Magnetic Pickup ⁽⁶⁾	B-24	B-22	B-20	B-25	B-27	B-29	

- (1) Connect cable shields to GND terminals.
- (2) All four RET terminals (Ch 0 and 1, Frequency, and Gate) are internally connected together.
- (3) As defined by standard IEC 1131-2
- (4) RET is not used on 2-wire devices.
- (5) Add an external resistor from 24V to F (A-6) or G (A-9) for wire-off detection (0.4 mA).
- (6) Add a jumper between 50 mV and RET (frequency - channel 0 = A-4...A-3; channel 1 = A-11...A-12).

Resolution and Accuracy

±1 Hz or ±0.1 Hz (depending on frequency range bit setting), or ± accuracy specification listed in [Table 1](#), whichever is greater.

Resolution % is defined as:

$$\% \text{ Resolution} = \frac{100}{\text{Count frequency} \times \text{minimum frequency sample time}}$$

Accuracy % is defined as:

$$\% \text{ Accuracy} = 100 \left[1 - \frac{\frac{\text{Minimum frequency sample time}}{2}}{\frac{\text{Minimum frequency sample time}}{2} + \frac{1}{\text{Count frequency}}} \right]$$

Table 1 - Accuracy Specifications

Min. Frequency Sample Time (ms)	Accuracy				Deviation in Hz Due to Total Accuracy		Resolution
	Sampling Accuracy	Time Base Accuracy	Worst Case Total Accuracy	1.0...3276.7 Frequency Range (in Hz)	1...32767 Frequency Range (in Hz)		
2	±0.02%	±0.0225%	±0.0425	±0.1...1.4	±1...14	0.01%	
4	±0.01%	±0.0225%	±0.0325	±0.1...1.1	±1...11	0.005%	
5	±0.008%	±0.0225%	±0.0305	±0.1...1.0	±1...10	0.004%	
10	±0.004%	±0.0225%	±0.0265	±0.1...0.9	±1...9	0.002%	
20	±0.002%	±0.0225%	±0.0245	±0.1...0.8	±1...8	0.001%	
50	±0.0008%	±0.0225%	±0.0233	±0.1...0.8	±1...8	0.0004%	
100	±0.0004%	±0.0225%	±0.0229	±0.1...0.8	±1...8	0.0002%	
200	±0.0002%	±0.0225%	±0.0227	±0.1...0.7	±1...7	0.0001%	
500	±0.00008%	±0.0225%	±0.02258	±0.1...0.7	±1...7	0.00004%	
1000	±0.00004%	±0.0225%	±0.02254	±0.1...0.7	±1...7	0.00002%	

Table 2 - Input Map

Bit →	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
Word ↓	Read															
0	Frequency 0...32,767 or 0.0...3,276.7 Channel 0															
1	% Full Scale 0.0...3,276.7% Channel 0 or Acceleration -32,768...+32,767 Channel 0															
2	Frequency 0...32,767 or 0.0...3,276.7 Channel 1															
3	% Full Scale 0.0...3,276.7% Channel 1 or Acceleration -32,768...+32,767 Channel 1															
4	R	R	Direction Ch 0	GS Ch 0	F/A Ch 0	WO Ch 0	MPA Ch 0	R	R	Direction Ch 1	GS Ch 1	F/A Ch 1	WO Ch 1	MPA Ch 1		
5	Reserved			Diagnostic Status Channel 0				Reserved			Diagnostic Status Channel 1					
6	Reserved															
Where:	GS = Gate state F/A = Frequency/Acceleration alarm WO = Wire-off alarm MPA = Missing pulse alarm R = Reserved															


Table 3 - Output Map

Dec.	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
Oct.	17	16	15	14	13	12	11	10	7	6	5	4	3	2	1	0	
0	CF	SSM	FR Ch 0	Number of pulses to terminate sampling 0...7 Ch 0			MPM 0...3 Ch 0			R	LF	FR Ch 1	Number of pulses to terminate sampling 0...7 Ch 1			MPM 0...3 Ch 1	
1	Maximum Frequency 0...32,767 or 0.0...3,276.7 or Absolute Value of Acceleration - 0...32,767 Channel 0																
2	Frequency Scaling Divisor 0...255 Channel 0								Frequency Scaling Multiplier 0...255 Channel 0								
3	WOFG Ch 0	WOFF Ch 0	IGI Ch 0	IFI Ch 0	Minimum Frequency Sample Time 0...15 Ch 0			Init St Up Ch 0	ACT 0...3 Ch 0		F/AAS Ch 0	MPDM 0...3 Ch 0		WOFM 0...3 Ch 0			
4	Maximum Frequency 0...32,767 or 0.0...3,276.7 or Absolute Value of Acceleration - 0...32,767 Channel 1																
5	Frequency Scaling Divisor 0...255 Channel 1								Frequency Scaling Multiplier 0...255 Channel 1								
6	WOFG Ch 1	WOFF Ch 1	IGI Ch 1	IFI Ch 1	Minimum Frequency Sample Time 0...15 Ch 1			Init St Up Ch 1	ACT 0...3 Ch 1		F/AAS Ch 1	MPDM 0...3 Ch 1		WOFM 0...3 Ch 1			
7	Reserved																

Where:

- CF = Communication fault
- SSM = Safe state mode
- FR = Frequency range
- MPM = Missing pulse multiplier
- LF = Local fault mode
- F/AAS = Frequency/Acceleration alarm select
- WOFF = Wire-off fault frequency
- WOFG = Wire-off fault gate
- WOFM = Wire-off fault mode
- IGI = Invert gate input
- IFI = Invert frequency input
- ACT = Acceleration calculation time
- MPDM = Missing pulse delay multiplier
- R = Reserved

Interpret Status Indicators

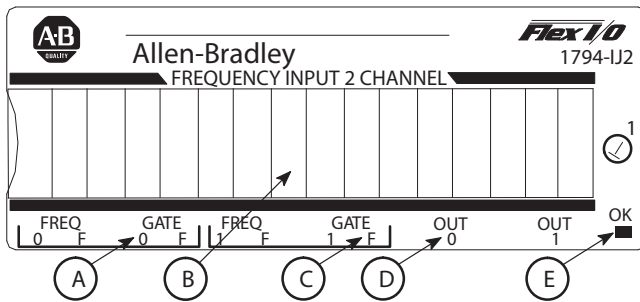

1794-IJ2 shown

- A = Input indicator
- B = Insertable label for writing individual I/O assignments
- C = Wire-off Fault indicator
- D = Output indicator
- E = Power/status indicator - Indicates power applied to the module and status of the module

When an input indicator (yellow) is lighted, it indicates that a valid signal (active high or active low) is present at one of the input terminals.

When wire-off detection is enabled, and a wire-off fault is detected (24V DC IEC 1+ input terminal only), a fault indicator (red) flashes at a rate of 1 Hz to signal a fault condition. A wire-off fault signal is sent to the backplane. A flashing red fault indication means a valid wire-off condition for a 24V DC IEC 1+ Input or a 24V DC contact switch input with a shunt resistor.

When an output indicator is yellow, the logic is driving an output alarm On. After detecting a fault, the internal circuitry sets the output data to the appropriate safe state, as defined by the module data table. Safe state control may be adapter-dependent. The input and output indicators are on the field side of the isolation path, and display the logic state of the actual micro controller input and output.

The status indicator initially powers up as steady green, indicating the power supply is operating and internal diagnostic tests are being performed. After a successful power-up test, the indicator remains green. The indicator turns red in about 1.5 s if there is an internal diagnostics error. The module is operating correctly when the green OK indicator is On.

A red OK indicator shows that the module is in a faulted condition (internal error).


Table 4 - Status Indicators Description

Indicator	Condition	Operating Description
Input (0, 1) (Frequency or Gate)	Off (dark)	Input turned off, input not used, or wire disconnected
	On (yellow)	Input turned on (active high or active low if inverted)
Fault (F) (Frequency or Gate)	Off (dark)	Wire connected, normal operation or detection disabled
	On (flashing red)	Wire disconnected, fault condition (for IEC 1+ proximity switch or switch contacts with shunt resistor)
Output Alarm (0, 1)	Off (dark)	Output alarm turned off
	On (yellow)	Output alarm turned on (logic drive on)
Status (OK)	Off (dark)	24V power turned off, or 5V logic power problem
	Steady green	Module OK, normal operating mode
	Steady red	Module fault, outputs disabled

Diagnostics

The frequency input module returns diagnostics to the controller processor in word 5 of the BTR file. These diagnostics give you information on the status or condition of the module.

BTR Word 5



See [Table 5](#) for diagnostics.

Table 5 - Diagnostic Bit Definition

Input Word	Bit	03	02	01	00	Definition	
Word 5	Bits 00...03	0	0	0	0	0 = Normal operation (no failure)	
		0	0	0	1	1 = Calibration failure	
		0	0	1	0	2 = Configuration failure A Minimum frequency sample time value other than 0...9 was selected.	
		0	0	1	1	3 = Message failure	
		0	1	0	0	4 = Lead break detection hardware failure	
		0	1	0	1	5 = Major hardware failure	
		0	1	1	0	6 = EEPROM failure	
		0	1	1	1	7 = RAM failure	
		1	0	0	0	8 = ROM failure	
		1	0	0	1	9 = Calculation failure The actual frequency is greater than 32,767 Hz or 3,276.7 Hz (over range). The scaled frequency is greater than 32,767 Hz or 3,276.7 Hz (over range). The % full Scale calculation (based on max frequency) is > 3,276.7%.	
		1010...1111					10...15 = Not used
		Diagnostic status - Indicates the response from the module; a normal or non-normal operating condition.					

Specifications

Input Specifications

Attribute	Value
Number of input channels	2
Number of inputs per channel	2 - Frequency and Gate (gate used to establish direction)
Input frequency, max	1...32 kHz w/sine wave; 1...32 kHz w/square wave input
Frequency value, max	32,767 or 3,276.7 (Dependent on range)
Input pulse width	20 μ s
Resolution/Accuracy	See Resolution and Accuracy on page 7
On-stage voltage, min	10V (24V IEC+1 proximity, encoder input or switch inputs)
On-state voltage, nom (selected by terminal base connections)	50 mV AC, 28V AC peak - Extended Magnetic Pickup 500 mV AC, 28V AC peak - Magnetic Pickup \leq 3V - Vortex Flowmeter low range \geq 6V - Vortex Flowmeter high range 24V DC IEC+1 proximity or encoder input 24V DC Contact Switch input
On-state voltage, max	Limited to isolated 24V DC power supply
On-state current Min Nom Max	2.0 mA 9.0 mA 10.0 mA
Off-state current, min	1.5 mA into 24V DC IEC+ terminal
Off-state voltage, max	5.0V DC on 24V DC IEC+1 terminal
Wire-off detection	0.4 mA for proximity, encoder, or contact switch with 50 k Ω shunt resistor
Frequency input impedance	> 5 k Ω for 50 mV Extended Magnetic Pickup > 5 k Ω for 500 mV Magnetic Pickup > 10 k Ω for 3V Vortex Flowmeter low range > 10 k Ω for 6V Vortex Flowmeter high range > 2.5 k Ω for 24V DC IEC+1 proximity or encoder input > 2.5 k Ω for 24V DC Contact Switch input
Gate input impedance	> 5 k Ω for 50 mV Extended Magnetic Pickup > 5 k Ω for 500 mV Magnetic Pickup > 2.5 k Ω for 24V DC IEC+1 proximity or encoder input > 2.5 k Ω for 24V DC Contact Switch input

Output Specifications

(Meets IEC 1 A 24V DC output specifications)

Attribute	Value
Number of outputs	2 isolated
Output voltage source	Customer supplied
Output voltage Min Nom Max	10V DC 24V DC 31.2V DC
Off-state voltage, max	31.2V DC
On-state current	1 mA per output min 1.0 A per channel sourced out of module max Current Limited - All outputs can be on simultaneously without derating
Surge current	2 A for 50 ms, repeatable every 2 s
Off-state leakage, max	Less than 300 μ A at 31.2V DC
On-state voltage drop	0.9V DC at 1 A
Output control	Outputs individually assignable to: Frequency, % Full Scale, or Acceleration Alarm
Output switching time	Triggered by frequency alarm or acceleration alarm Turn on: Less than 0.5 ms Turn off: Less than 1 ms

General Specifications

Attribute	Value
Module location	1794-TB3G and 1794-TB3GS Terminal base units
External DC power Voltage range Supply voltage, nom Supply current	(Input for +5V logic and 24V DC/DC converters) 19.2...31.2V DC (includes 5% AC ripple) 24V DC 120 mA
Isolated DC power Voltage range Supply voltage, nom Supply current, max Peak AC ripple, max	(Output to sensors and encoders) 21.6...26.4V DC 24V DC 0...60 mA @ 24V DC (4 devices @ 15 mA = 60 mA) 100 mV
Dimensions (with module installed in base), (H x W x D)	94 x 94 x 69 mm (3.7 x 3.7 x 2.7 in.)
Isolation voltage	50V (continuous), Basic Insulation Type Type tested at 1365V AC for 60 s, between field side and system and individual channels
Processing time	≤ 4 ms
Flexbus current	30 mA at 5V DC
Power dissipation, max	4.6 W at 31.2V DC
Thermal dissipation, max	15.6 BTU/hr at 31.2V DC
Indicators (field side driven, logic side indication)	1 green/red power/status indicator 4 yellow status indicators (Frequency 0, 1, Gate 0, 1) 4 red wire-off indicators (Frequency 0, 1, Gate 0, 1) 2 yellow status indicators (Out 0, Out 1) - Logic side
Keyswitch position	1
Wire size	Determined by the installed terminal base
Wiring category ⁽¹⁾	2 - on signal ports 3 - on power ports
Wire type	Shielded on signal ports
Terminal screw torque	Determined by the installed terminal base
Enclosure type rating	None (open-style)
North American temp code	T4A
IECEx temp code	T4
UKEX/ATEX temp code	T4

(1) Use this conductor category information for planning conductor routing. See the Industrial Automation Wiring and Grounding Guidelines, publication [1770-4.1](#).

Environmental Specifications

Attribute	1794-IJ2	1794-IJ2XT
Temperature, operating	IEC 60068-2-1 (Test Ad, Operating Cold), IEC 60068-2-2 (Test Bd, Operating Dry Heat), IEC 60068-2-14 (Test Nb, Operating Thermal Shock): 0...55 °C (32...131 °F)	IEC 60068-2-1 (Test Ad, Operating Cold), IEC 60068-2-2 (Test Bd, Operating Dry Heat), IEC 60068-2-14 (Test Nb, Operating Thermal Shock): -20...+70 °C (-4...+158 °F)
Temperature, surrounding air, max	55 °C (131 °F)	70 °C (158 °F)
Temperature, nonoperating	IEC 60068-2-1 (Test Ab, Unpackaged nonoperating Cold), IEC 60068-2-2 (Test Bb, Unpackaged nonoperating Dry Heat), IEC 60068-2-14 (Test Na, Unpackaged nonoperating Thermal Shock): -40...+85 °C (-40...+185 °F)	
Relative humidity	IEC 60068-2-30 (Test Db, Unpackaged Damp Heat): 5...95% noncondensing	
Vibration	IEC 60068-2-6 (Test Fc, Operating): 5 g @ 10...500 Hz	
Shock, operating	IEC 60068-2-27 (Test Ea, Unpackaged Shock): 30 g	
Shock, nonoperating	IEC 60068-2-27 (Test Ea, Unpackaged Shock): 50 g	
Emissions	IEC 61000-6-4	
ESD immunity	IEC 61000-4-2: 4 kV contact discharges 8 kV air discharges	IEC 61000-4-2: 6 kV contact discharges 8 kV air discharges

Environmental Specifications (Continued)

Attribute	1794-IJ2	1794-IJ2XT
Radiated RF immunity	IEC 61000-4-3: 10V/m with 1 kHz sine-wave 80% AM from 80...6000 MHz	
EFT/B immunity	IEC 61000-4-4: ±2 kV at 5 kHz on power ports ±2 kV at 5 kHz on signal ports	
Surge transient immunity	IEC 61000-4-5: ±2 kV line-earth(CM) on shielded signal ports	
Conducted RF immunity	IEC 61000-4-6: 10V rms with 1 kHz sine-wave 80% AM from 150 kHz...80 MHz on shielded signal ports	

Certifications

Attribute (when product is marked) ⁽¹⁾	Value
c-UL-us	UL Listed Industrial Control Equipment, certified for US and Canada. See UL File E65584. UL Listed for Class I Division 2 Group A,B,C,D Hazardous Locations, certified for U.S. and Canada. See UL File E194810.
Ex	UK Statutory Instrument 2016 No. 1107 and European Union 2014/34/EU ATEX Directive, compliant with: EN IEC 60079-0; General Requirements EN IEC 60079-7; Explosive Atmospheres, Protection "e" II 3 G Ex ec IIC T4 Gc DEMKO 14 ATEX 1342501X UL22UKEX2378X
IECEX	IECEX System, compliant with: IEC 60079-0; General Requirements IEC 60079-7; Explosive Atmospheres, Protection "e" Ex ec IIC T4 Gc IECEX UL 14.0066X
UK and CE	UK Statutory Instrument 2016 No. 1091 and European Union 2014/30/EU EMC Directive, compliant with: EN 61326-1; Meas./Control/Lab., Industrial Requirements EN 61000-6-2; Industrial Immunity EN 61131-2; Programmable Controllers EN 61000-6-4; Industrial Emissions UK Statutory Instrument 2012 No. 3032 and European Union 2011/65/EU RoHS, compliant with: EN 63000; Technical documentation
RCM	Australian Radiocommunications Act, compliant with: EN 61000-6-4; Industrial Emissions
TÜV	TÜV Certified for Functional Safety: up to and including SIL 2
KC	Korean Registration of Broadcasting and Communications Equipment, compliant with: Article 58-2 of Radio Waves Act, Clause 3
Morocco	Arrêté ministériel n° 6404-15 du 29 ramadan 1436
CCC	CNCA-C23-01 强制性产品认证实施规则 防爆电气 CNCA-C23-01 CCC Implementation Rule Explosion-Proof Electrical Products

(1) See the Product Certification link at rok.auto/certifications for Declarations of Conformity, Certificates, and other certification details.

Additional Resources

For more information on the products that are described in this publication, use these resources. You can view or download publications at rok.auto/literature.

Resource	Description
FLEX I/O and FLEX I/O-XT Selection Guide, publication 1794-SG002	Provides information on how to select FLEX I/O and FLEX I/O-XT™ adapters, terminal bases, I/O modules, and accessories.
FLEX I/O Frequency Input Module User Manual, publication 1794-UM011	Describes how to install, configure, and troubleshoot your module.
Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1	Provides general guidelines for installing a Rockwell Automation industrial system.
Product Certifications website, rok.auto/certifications	Provides declarations of conformity, certificates, and other certification details.

Notes:

Rockwell Automation Support

Use these resources to access support information.

Technical Support Center	Find help with how-to videos, FAQs, chat, user forums, Knowledgebase, and product notification updates.	rok.auto/support
Local Technical Support Phone Numbers	Locate the telephone number for your country.	rok.auto/phonesupport
Technical Documentation Center	Quickly access and download technical specifications, installation instructions, and user manuals.	rok.auto/techdocs
Literature Library	Find installation instructions, manuals, brochures, and technical data publications.	rok.auto/literature
Product Compatibility and Download Center (PCDC)	Download firmware, associated files (such as AOP, EDS, and DTM), and access product release notes.	rok.auto/pcdc

Documentation Feedback

Your comments help us serve your documentation needs better. If you have any suggestions on how to improve our content, complete the form at rok.auto/docfeedback.





Waste Electrical and Electronic Equipment (WEEE)



At the end of life, this equipment should be collected separately from any unsorted municipal waste.

Rockwell Automation maintains current product environmental compliance information on its website at rok.auto/pec.

Rockwell Otomasyon Ticaret A.Ş. Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400 EEE Yönetmeliğine Uygundur

Connect with us.    

rockwellautomation.com — expanding **human possibility**[®]

AMERICAS: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000

EUROPE/MIDDLE EAST/AFRICA: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2663 0600

ASIA PACIFIC: Rockwell Automation SEA Pte Ltd, 2 Corporation Road, #04-05, Main Lobby, Corporation Place, Singapore 618494, Tel: (65) 6510 6608

UNITED KINGDOM: Rockwell Automation Ltd., Pitfield, Kiln Farm, Milton Keynes, MK11 3DR, United Kingdom, Tel: (44)(1908) 838-800

Allen-Bradley, expanding human possibility, FactoryTalk, FLEX, FLEX I/O-XT, Rockwell Automation, and TechConnect are trademarks of Rockwell Automation, Inc. Trademarks not belonging to Rockwell Automation are property of their respective companies.

Publication 1794-IN049G-EN-P - March 2024 | Supersedes Publication 1794-IN049F-EN-P - October 2022

Copyright © 2024 Rockwell Automation, Inc. All rights reserved.