



IntelliCENTER Software

Catalog Number 2101A-INTLCNTR



Allen-Bradley

by ROCKWELL AUTOMATION

User Manual

Original Instructions

Important User Information

Read this document and the documents listed in the additional resources section about installation, configuration, and operation of this equipment before you install, configure, operate, or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.



WARNING: Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.



ATTENTION: Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence.

IMPORTANT

Identifies information that is critical for successful application and understanding of the product.

These labels may also be on or inside the equipment to provide specific precautions.



SHOCK HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.



BURN HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.



ARC FLASH HAZARD: Labels may be on or inside the equipment, for example, a motor control center, to alert people to potential Arc Flash. Arc Flash will cause severe injury or death. Wear proper Personal Protective Equipment (PPE). Follow ALL Regulatory requirements for safe work practices and for Personal Protective Equipment (PPE).

The following icon may appear in the text of this document.



Identifies information that is useful and can help to make a process easier to do or easier to understand.

	Preface	7
	About This Publication	7
	Download Firmware, AOP, EDS, and Other Files	7
	Summary of Changes	7
	Additional Resources	7
	Chapter 1	
Welcome to IntelliCENTER Software	What Is IntelliCENTER Software?	9
	Features and Benefits of IntelliCENTER Software	9
	Chapter 2	
IntelliCENTER Software Installation	System and Equipment Requirements	11
	Minimum Permission Requirements	11
	Firewall Changes Made by the IntelliCENTER Software Installation	11
	IntelliCENTER – Known Folders and File-Extensions	11
	Services IntelliCENTER Depends On	12
	Equipment Necessary for Connecting the Computer	12
	DeviceNet Network	12
	ControlNet Network	12
	Ethernet Network	12
	Recommended Additional Software	12
	Online Help	13
	Install the Software	13
	Acquiring the IntelliCENTER Software or IntelliCENTER Data Set	13
	New IntelliCENTER Software Installation	13
	Installing IntelliCENTER Software Data Sets	14
	IntelliCENTER Energy	15
	Install IntelliCENTER Energy	16
	Install the IntelliCENTER Energy Data CDs	16
	Chapter 3	
Getting Started	Set Up the RSLinx Classic Driver	19
	Configure Ethernet Devices Driver	20
	Configure EtherNet/IP Driver	21
	Configure DeviceNet Driver	22
	Starting IntelliCENTER Software	23
	Chapter 4	
Exploring IntelliCENTER Software	IntelliCENTER Software User Interface	27
	Menu Bar	28
	Tool Bar	28
	Workspace	29
	Elevation View	29
	Status Bar	29

Legend 30

Using IntelliCENTER Software

Chapter 5

Workspace Options. 31
 Add a Lineup to the Workspace. 31
 Remove a Lineup from the Workspace 31
 Saving the Customized Workspace..... 32
 Open a Workspace 32
 Real-Time Monitoring..... 32
 Elevation View..... 33
 Elevation View Features..... 34
 Monitor (Unit) View 36
 IntelliCENTER MCC - Lineup Information 43
 Spreadsheet View 43
 Events Log View 46
 Electronic Documentation..... 46
 User Manuals 46
 Spare Parts List..... 48
 CAD Drawings..... 48

**IntelliCENTER Software
Integration Assistant**

Chapter 6

Integration Assistant For Logix5000 Software 51
 Integration Assistant for IntelliCENTER Energy..... 53

IntelliCENTER Energy

Chapter 7

IntelliCENTER Energy Installation 55
 Integration Assistant for IntelliCENTER Energy..... 55
 Run Integration Assistant from the Server 55
 Run Integration Assistant from the Client 57
 IntelliCENTER Energy Views..... 60
 IntelliCENTER Energy Calendar Trend..... 61
 IntelliCENTER Energy Trend..... 62
 IntelliCENTER Energy Meter Data 63
 IntelliCENTER Energy Device Setup..... 63

**IntelliCENTER Software
Additional Features**

Chapter 8

User Accounts and Security 65
 Login after Lineup Opens..... 65
 Add a New User 65
 Change Password 67
 Export Data 67
 Event Deletion Tool..... 68
 Backup Data 69
 Restore Data 70
 Create a Data CD..... 71
 Device Description Tool..... 71
 Language Options..... 72
 Toolbar..... 72

Legend Options	73
Configure External Applications for Advanced Configuration	73
Security - Log Out Settings	74
Disable Security Option	75
IntelliCENTER Software File Locations	75
Event Logging Options	76
Communication Set Up	76
Device EDS Files	77
Manually Install EDS Files	77
EDS Files for Other Devices	77
Setting Device IP Address	78
Change the Device IP Address by Using the Spreadsheet View	78
Change the Device IP Address by Using the Device Web Page	79
Change the Device IP Address by Using Monitor View for Variable Frequency Drives and Soft Starters	80
Edit User Field	80

Chapter 9

Using IntelliCENTER Software - Advanced Features

Advanced Workspace Options	83
Edit the Lineup	83
Advanced Elevation View Options	83
Edit Position of Device or Section	83
Duplicate Device or Section	84
Add a New or Auxiliary Device	84
Delete a Device or Auxiliary Device	89
Add or Remove a Section	89
Advanced Monitor View for Motor Protection Devices, Power Monitors, I/O Devices, and Ethernet Network Switches	90
Changing Data Trending Parameters	90
Exporting Data Trend	91
Change I/O	92
Change Parameters	92
Change the Values of the Parameters	93
Change Real-time Analog Meter Data/Parameters	94
View Ethernet Network Port Status	95
Advanced Monitor View for Variable Frequency Drives and Soft Starters Options	95
Change Process Display	95
Add a Peripheral Device	96
Change Parameters and Values	96
Advanced Spreadsheet View Options	96
Edit or Add I/O	97
Edit Standard I/O Settings	98
Advanced Event Log View Options	99
Configure Auto Logging	99
Manual LogginMCC-UM002C-EN-Pg	99
Advanced Electronic Documentation Options	100
Adding Additional User Manual	100
Adding Additional Spare Parts	101
Adding Additional CAD Drawings	102

ActiveX Controls

Elevation ActiveX Control..... 105
Spreadsheet ActiveX Control..... 105
Documents ActiveX Controls..... 105
Monitor ActiveX Control 105
..... 106

Appendix B

**RSLinx Classic Launch Control
Panel
Compatible Device List
Your Support Plan**

IntelliCENTER Software Not Starting 107
RSLinx Classic Software Not Starting..... 107

Change of Registration 113
Product Updates..... 113
..... 113
..... 113

Index 115

About This Publication

This manual contains information on how to install and use IntelliCENTER® software and contains information about IntelliCENTER Integration Assistant and IntelliCENTER Energy applications.

Download Firmware, AOP, EDS, and Other Files

Download firmware, associated files (such as AOP, EDS, and DTM), and access product release notes from the Product Compatibility and Download Center at rok.auto/pcdc.

Summary of Changes

This publication contains the following new or updated information. This list includes substantive updates only and is not intended to reflect all changes.

Topic	Page
Updated IntelliCENTER Software Installation	11
Updated Install the Software	13
Updated Installing IntelliCENTER Software Data Sets	14
Updated tables 4 through 8	109
Updated Your Support Plan	113
Updated 5700 to Ethernet and Stratix 5700 to Stratix 5700 and 5200	Throughout

Additional Resources

These documents contain additional information concerning related products from Rockwell Automation. You can view or download publications at rok.auto/literature.

Resource	Description
IntelliCENTER ActiveX Application Note, publication MCC-AT002	Provides information for the configuration of ActiveX controls for IntelliCENTER software.
Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1	Provides general guidelines for installing a Rockwell Automation industrial system.
ProposalWorks™ configuration software, rok.auto/systemtools	Helps configure complete, valid catalog numbers and build complete quotes based on detailed product information.
Rockwell Automation Global SCCR tool, rok.auto/sccr	Provides coordinated high-fault branch circuit solutions for motor starters, soft starters, and component drives.
Product Certifications website, rok.auto/certifications	Provides declarations of conformity, certificates, and other certification details.

Notes:

Welcome to IntelliCENTER Software

What Is IntelliCENTER Software?

IntelliCENTER® software is a pre-configured, intuitive software package that is customized for your IntelliCENTER Motor Control Center (MCC). The IntelliCENTER software provides a sophisticated, extensive, and easy-to-identify real-time virtual representation for your entire IntelliCENTER MCC lineup. The software also enhances the intelligence at your MCC by using built-in networking to capture motor control device data for predictive maintenance, real-time process monitoring, quick troubleshooting, and advanced diagnostics. The software also provides critical IntelliCENTER MCC information like Spare parts list, Documentation, and Parameter values through several views. The virtual interface of your IntelliCENTER MCC lineup is accessible on the plant floor, in the plant control room, or from a secure remote connection.

Features and Benefits of IntelliCENTER Software

The features and benefits of IntelliCENTER software are the following:

- Elevation view provides graphical representation of your entire MCC lineup.
- IntelliCENTER software supports EtherNet/IP and DeviceNet industrial networks.
- Monitor view displays an overview of a connected MCC intelligent device and lets you change configuration parameters.
- Documentation views are customized for your IntelliCENTER MCC, it includes manuals, CAD drawings, and a spare parts list.
- Event log records and stores events that occur within the IntelliCENTER MCC.
- Integration Assistant seamlessly integrates IntelliCENTER MCCs into the Studio 5000® application and automatically generates tags and IP address configurations for intelligent motor control devices in the MCC.
- IntelliCENTER Energy provides automatic, pre-configured setup of FactoryTalk® EnergyMetrix™ software for devices in the MCC. IntelliCENTER Energy shows real-time energy consumption and historical trend data for all intelligent devices directly from IntelliCENTER software.
- ActiveX controls are available in the IntelliCENTER software to interface the Elevation, Monitor, Spreadsheet, and Document views into HMI applications, such as FactoryTalk® View SE and RSView®32.

Notes:

IntelliCENTER Software Installation

This chapter describes the requirements and procedure for installation of IntelliCENTER® software.

System and Equipment Requirements

IntelliCENTER software is compatible with these operating systems: Windows 7 64-bit or later.

These minimum system requirements provide optimal operation of the IntelliCENTER software.

Table 1 - Hardware Requirements

Characteristic	Minimum	Recommended
Processor	Intel Core i3	Intel Core i5 ⁽¹⁾
Speed ⁽²⁾	2.4 GHz	2.9 GHz
RAM memory	4 GB	8 GB
Hard disk space	10 GB	15 GB
Video resolution	1024 x 768 with True Color (24 bit or better)	Use the recommended setting for your computer
DVD-ROM drive	4X	16X

(1) Using touchscreen computers or using virtualization can negatively impact the performance of IntelliCENTER Software. In these cases it is suggested to go above the recommended requirements to ensure optimal operation is maintained.

(2) The IntelliCENTER software is a monitoring/communication software package that requires a large amount of processor speed to function efficiently and quickly. The processor speeds listed allow the software to function correctly. However, for speed and efficiency, we recommend that the processor used is the fastest processor available to you.

Minimum Permission Requirements

You must be an Administrator^(a) to install and run IntelliCENTER software. In some cases, a non-Administrator can be set up to use IntelliCENTER software, but this task requires additional work as described in Knowledgebase article 68413.

This information is provided to help support antivirus and firewall programs and security policies that can interfere with IntelliCENTER software operation.

Firewall Changes Made by the IntelliCENTER Software Installation

During IntelliCENTER software installation, the IntelliCENTER.exe application is added to the list of allowed programs within the Windows Firewall settings.

IntelliCENTER - Known Folders and File-Extensions

IntelliCENTER software must have read/write access to the following folders:

- Software Installation folder (set during install)
- Data DVD Installation folder (set during install)

The known file extensions that are created/used by IntelliCENTER software are:

- .dwg (Drawing)
- .txt (Text Document)
- .wsp (Work Space File)
- .csv

(a) The Administrator is the user who has the highest level of access in the software and can add other user accounts to the software. There are certain functions within the software that only the administrator account can perform.

- .png (PNG Image)
- .ldb (temporary database file)
- .tlb (TLB File)
- .acd (RSLogix/Studio 5000 Project)
- .L5X (L5X File)
- .InstallLog (INSTALLLOG File)
- .InstallState (INSTALLSTATE File)

Services IntelliCENTER Depends On

The services that IntelliCENTER depends on are:

- IntelliCENTER Communication Server
- RSLinx® Classic
- Windows Event Log

Equipment Necessary for Connecting the Computer

The following is the equipment that you need to connect your computer through your network.

DeviceNet Network

For a DeviceNet network, you need the following equipment:

- Laptop computer: 1784-U2DN USB to DeviceNet cable or 1784-PCD DeviceNet personal computer interface card and 1784-PCD1 cable
- Desktop computer: 1784-U2DN USB to DeviceNet cable or 1784-PCID DeviceNet personal computer interface card
- RS-232 interface (reduced performance): 1770-KFD module



See the device user manual to set the communication rate.



A 2100H-ICPC120 patch cable is necessary to connect the interface (laptop, desktop, RS-232) to IntelliCENTER MCC wireway.

ControlNet Network

For a ControlNet network, you need the following equipment:

- Laptop computer: 1784-PCC ControlNet personal computer interface card and 1784-C1 cable
- Desktop computer: 1784-PCIC ControlNet personal computer interface card and 1784-TPR ControlNet tap



Consult the ControlNet Coax Media Planning and Installation Guide, publication [CNET-IN002](#), for configuration and installation of the ControlNet cable.

Ethernet Network

For an Ethernet network, you need a laptop or desktop computer. Consult your local computer-support personnel for Ethernet interface requirements.

Recommended Additional Software

Use RSNetWorx™ for DeviceNet software to configure DeviceNet nodes, save parameters, and communicate to all types of DeviceNet components (sensors, non-Allen-Bradley products, and other products that are not found in MCCs).

Online Help

The online help that is included in the IntelliCENTER software complements and adds to the information in this document. To access the online help, from the Start menu choose Programs>IntelliCENTER>IntelliCENTER Help.

Install the Software

These next sections guide you through the installation of the IntelliCENTER software. IntelliCENTER software requires two items in order to present data to a user.

- IntelliCENTER Software Installer
- IntelliCENTER Software Data Set

The IntelliCENTER Software Installer installs the IntelliCENTER program onto your computer. Follow the steps to install all dependencies for IntelliCENTER software and then finally the IntelliCENTER Software itself. A customer purchases one of these for each machine they intend to install the software on. The software by itself will not present anything, it needs one or more IntelliCENTER Software Data Sets to present data to a user.

IMPORTANT Note the serial number from the email or DVD and save it. For installation instructions, see [Installing IntelliCENTER Software Data Sets on page 14](#)

The IntelliCENTER Software Data Set contains the specific information about a particular MCC and allows the IntelliCENTER Software to present data for a particular lineup. It provides the details about a particular IntelliCENTER motor control center. It installs the databases, drawings, manuals, and EDS files necessary for IntelliCENTER software to operate. Also included, in the Access folder on this DVD, are the DNT files for your DeviceNet orders and ENET files for your EtherNet/IP orders.

IMPORTANT For installation instructions See [Installing IntelliCENTER Software Data Sets on page 14](#)

Acquiring the IntelliCENTER Software or IntelliCENTER Data Set

When a customer places an order which includes IntelliCENTER Software Installer or IntelliCENTER Software Data Set, they may have the ability to choose to have the item delivered to them electronically via email, instead of sent to them physically.

If the customer requested their IntelliCENTER Software Installer or IntelliCENTER Software Data Set to be delivered electronically then an email will be sent to the email address associated with the order. The customer can then follow the link in the email to download the software. After downloading the software, the customer will need to unzip the file to extract the contents.

If the customer requested their IntelliCENTER Software Installer or IntelliCENTER Software Data Set to be delivered physically then a DVD will be burned and sent to the customer.

New IntelliCENTER Software Installation




If the IntelliCENTER software program disk is installed already, skip to [Installing IntelliCENTER Software Data Sets](#).

Follow these steps to install the software.

1. Close all programs.
2. Run the Setup.exe file in the top-level folder of the IntelliCENTER Software Installer to install the dependencies that are needed.

IMPORTANT For new IntelliCENTER Software Data Sets installation see [page 14](#).

- When finally prompted to install IntelliCENTER Software, choose the setup type, either IntelliCENTER setup or ActiveX Only setup.

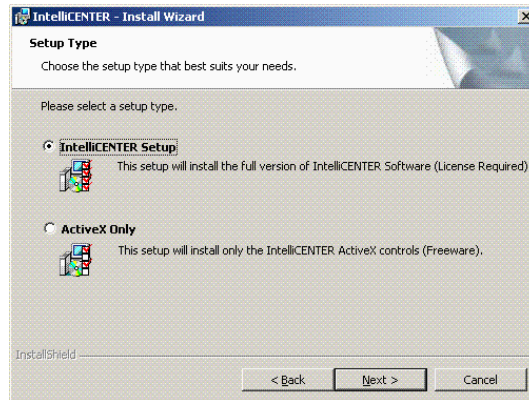

- IntelliCENTER setup - This option includes the IntelliCENTER software standalone application and all of its features. This option is a full functioning version of the software and requires a license for each machine it is installed onto.
 - ActiveX only - This option is to support HMIs developed by using the IntelliCENTER ActiveX controls. This version does not contain the IntelliCENTER software standalone application. This version can be installed on as many computers as desired.
- To finish installing IntelliCENTER software, follow the remaining instructions on the screen.
 - At the last step it will have you install IntelliCENTER Software, after all the dependencies are installed. When installing IntelliCENTER Software you will be prompted for a serial number. Use the number that appears in the email (for electronic delivery) or which is printed on the physical disk (for physical delivery).

Installing IntelliCENTER Software Data Sets

The information on the data disks includes all user manuals, CAD drawings, spare parts, and two database files. The data sets can be installed on the local hard disk drive or on a server (where multiple user can access it). The Installation Wizard asks for the preferred location. During normal operation of the IntelliCENTER software, files are read from and written to the data set files located either on the hard disk drive or a server.

Install the First IntelliCENTER Software Data Set

Follow these steps to install the first data disk. To install an additional data disk, see [Install Additional IntelliCENTER Software Data Sets](#).

- Close all programs.
- Run the Setup.exe file in the top-level folder of the IntelliCENTER Software Installer.
- Follow the instructions on the screen.


IMPORTANT During the installation process, you are prompted to choose a directory into which the new database is installed. We suggest that you choose the default directory. If you select another directory than the default directory, the IntelliCENTER software has to be reconfigured to the new directory. To reconfigure the software, in IntelliCENTER software from the Edit menu, choose Preferences and click the File Locations tab. All additional IntelliCENTER software data disks must be installed in the same directory.

Install Additional IntelliCENTER Software Data Sets

To install data sets other than the initial data set that was installed with the IntelliCENTER software, follow these steps.

1. Run the Setup.exe from the new IntelliCENTER Software Data Set.

The Merge Data dialog box appears automatically and the Select New Database box is populated with the path to the databases on the new IntelliCENTER Software Data Set.

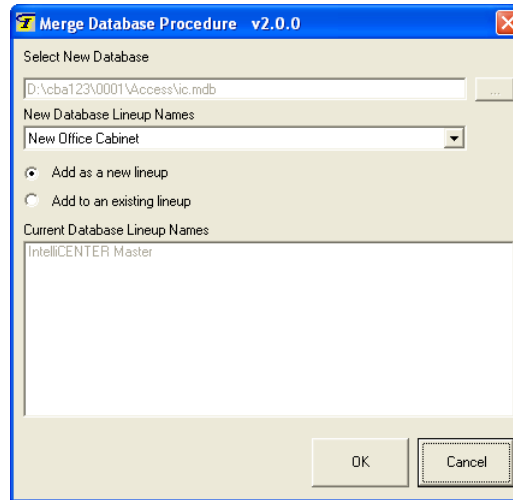

If there are multiple MCC lineups on the new data set, the New Database Lineup Names pull-down menu lets you choose which lineup is merged into the existing database on the computer.

2. Select the MCC lineup to merge.

IMPORTANT If multiple lineups are merged from the data disk, each lineup has to be merged individually until all lineups have been merged into the existing database.

3. Click 'Add as a new lineup' or 'Add to an existing lineup'.

Choose Add to an existing lineup when you add replacement units or new sections to a lineup that exists within the database. Otherwise, choose Add as a new lineup to have the lineup merge in as a new lineup, separate from the other lineups in your database.

4. Click OK to merge the databases together.

The database is checked for errors. If there are errors, the database is not merged. If there are no errors, the new database is merged with the existing database; the merge can take a few minutes. There is a confirmation that the databases were merged successfully. If there are multiple lineups on the new data disk, a dialog box appears, to ask if you are done merging. If you are not, repeat the steps for additional lineups until you are done merging all lineups.

IMPORTANT If you are merging a replacement or new unit into an existing lineup, make sure that the location of the new units is empty in the existing database. If necessary, open the Spreadsheet view and delete or move the unit currently located where you want to place the new unit.

IntelliCENTER Energy

IntelliCENTER Energy is a premier software package with the features of IntelliCENTER software plus additional Energy Management benefits powered by FactoryTalk® EnergyMetrix™. IntelliCENTER Energy software provides the following:

- Real-time energy consumption and historical trend data down to the device level
- Ability to monitor and manage energy usage for substantial cost savings

Install IntelliCENTER Energy

The installation CD for IntelliCENTER Energy contains FactoryTalk EnergyMetrix software and the required software:

- FactoryTalk Activation Manager
- RSLinx Classic Lite
- Microsoft .NET Framework
- Adobe Acrobat Reader



We recommend, but do not require, that you install FactoryTalk EnergyMetrix software on a dedicated server with a local installation of Microsoft SQL Server.

System Requirements

These minimum system requirements provide optimal operation of the FactoryTalk EnergyMetrix software:

- Server Software Requirements for Installing FactoryTalk EnergyMetrix software
 - Windows Server 2008 R2 and Windows Server 2012 R2, Application Server role.
 - Microsoft SQL Server 2005 or 2008, installed with mixed-mode authentication (Windows and SQL). TCP/IP access must be enabled and IIS must be installed and setup. A system administrator SQL login must be used for the FactoryTalk EnergyMetrix software installation.
 - SQL Management Studio to create a user to install FactoryTalk EnergyMetrix software.
 - You must have machine administrator privileges to install FactoryTalk EnergyMetrix software.
- Hardware Requirements - The database requires these minimum standards:
 - 2.4 GHz or better Intel or Compatible Processor
 - 4 GB RAM
 - 60 GB hard disk (with separate disks for operating system and log files and RAID 5 for main database files preferred)

The following are general guidelines. FactoryTalk EnergyMetrix software can run on various hardware platforms. The main scalability issue is related to the processing of logged data (for example, report generation and trend data). CPU speed, number of CPUs, RAM, and RAID 5 for the database files are the main scalability factors (in that order). All hardware platforms require the following:

- Processor, RAM, and hard disk drive as noted
- DVD drive
- One or more Ethernet network ports
- Internet access
- Peripherals such as a monitor, keyboard, and mouse

For installation instructions, refer to the FactoryTalk EnergyMetrix User Manual, publication [FTEM-UM003](#).

Install the IntelliCENTER Energy Data CDs

The IntelliCENTER Energy Data CD has two uses:

- Install the databases and documentation that is needed for IntelliCENTER Software to display information for your MCC.
- Populate the IntelliCENTER Energy server with information about the devices in the MCC, when run from the server.

To run the IntelliCENTER Energy Data CD, follow these steps.

1. Close all programs.
2. Insert the IntelliCENTER Energy Data CD into your CD-ROM.
3. If Autorun is enabled on your computer, the installation starts automatically and you can skip steps 4 and 5.
4. From the Start menu, choose Run.
5. Type D:\Setup.exe (substitute the appropriate letter of your CD-ROM drive for D) and click OK.

The IntelliCENTER Energy Data CD determines if it is being run from an IntelliCENTER Energy server machine. If the machine is an IntelliCENTER Energy server, then the Integration Assistant for IntelliCENTER Energy runs. For information on how to use Integration Assistant refer to [Integration Assistant for IntelliCENTER Energy on page 55](#).



If the machine is not an IntelliCENTER Energy server, refer to [Installing IntelliCENTER Software Data Sets on page 14](#).

The following steps are valid only if the user machine/computer is an EnergyMetrix server:

- After the Integration Assistant is completed, the EDS files are registered on the machine.
- IntelliCENTER Energy is now populated for the devices in your MCC.
- You are prompted whether you would like to install the IntelliCENTER Software Data CD as well (databases and documentation). If you do, then refer to [Installing IntelliCENTER Software Data Sets on page 14](#).

Notes:

Set Up the RSLinx Classic Driver

Getting Started

RSLinx® Classic software is a comprehensive communication platform between the IntelliCENTER® MCC hardware and software. During the installation of the IntelliCENTER software, RSLinx Classic Lite software is installed, unless RSLinx Classic was previously installed on the computer.

IMPORTANT If IntelliCENTER software data disks or EDS files were recently installed, then restart the computer before browsing the associated network in RSLinx Classic software. The EDS files require a restart of the computer before RSLinx Classic software is able to identify the device in the RSWho. If the devices do not appear in the RSWho, then IntelliCENTER software is not able to monitor the device.

IntelliCENTER software is compatible with EtherNet/IP and DeviceNet enabled motor control devices. See the IntelliCENTER software compatible devices table in the [Compatible Device List on page 109](#). RSLinx Classic software has different types of drivers to configure EtherNet/IP and DeviceNet enabled motor control devices. The driver must be configured for successful communication between IntelliCENTER software and motor control devices.

Table 2 - Various Configurable Drivers in RSLinx Classic Software

Industrial Network	Driver	Description
EtherNet/IP	Ethernet devices	Ethernet enabled devices
	EtherNet/IP	Ethernet enable devices
DeviceNet	1770-KFD	Supports 1770-KFD Module (RS-232 to DeviceNet)
	1771-SDNPT	Supports 1771-SDN scanner (DeviceNet Scanner for PLC-5®)
	1747-SDNPT	Supports 1747-SDN scanner (DeviceNet Scanner for SLC-500)

To configure the drivers in RSLinx Classic software, follow these steps.

1. To launch RSLinx Classic software from the Windows Start menu, choose All Programs>Rockwell Software>RSLinx>RSLinx Classic.
RSLinx Classic software launches.




If RSLinx Classic software does not launch, refer to the [RSLinx Classic Launch Control Panel on page 107](#).

2. From the Communications menu, choose Configure Drivers.
3. To configure the drivers, from the Available Driver Types pull-down menu, choose the desired driver (Ethernet Devices, EtherNet/IP Driver, DeviceNet Drivers), and click Add New.



For further details on selected driver configuration methods, refer to the appropriate section:


- [Configure Ethernet Devices Driver on page 20](#)
- [Configure EtherNet/IP Driver on page 21](#)
- [Configure DeviceNet Driver on page 22](#)

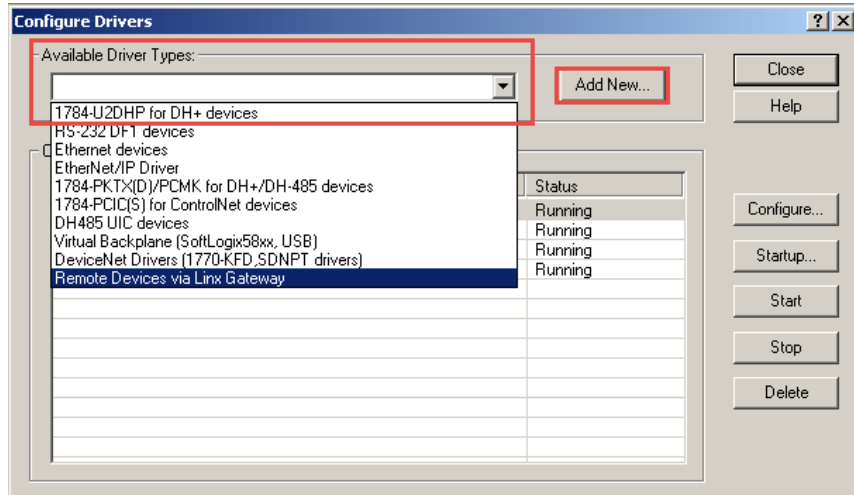

Configure Ethernet Devices Driver

To configure the Ethernet devices driver, follow these steps.


1. Choose a name for the new driver and click OK.
2. Manually add the IP Address of each Ethernet enabled device that the driver can communicate with and click OK.

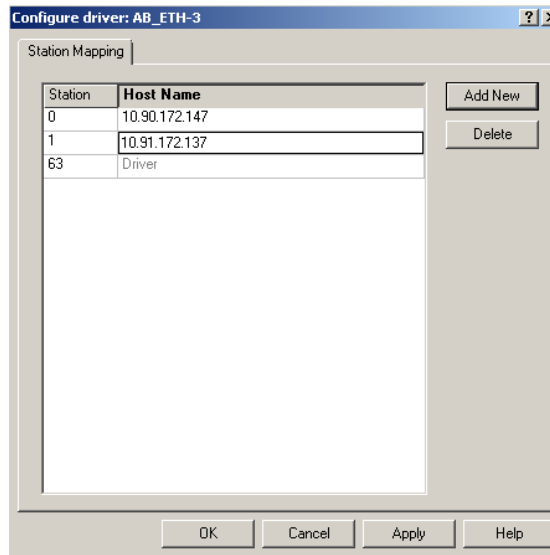

IMPORTANT Ethernet Devices Driver is the preferred driver and only 64 IP addresses can be configured per driver.

After successfully adding the new driver, the network must be browsed.

3. From the Communications menu, choose RSWho.

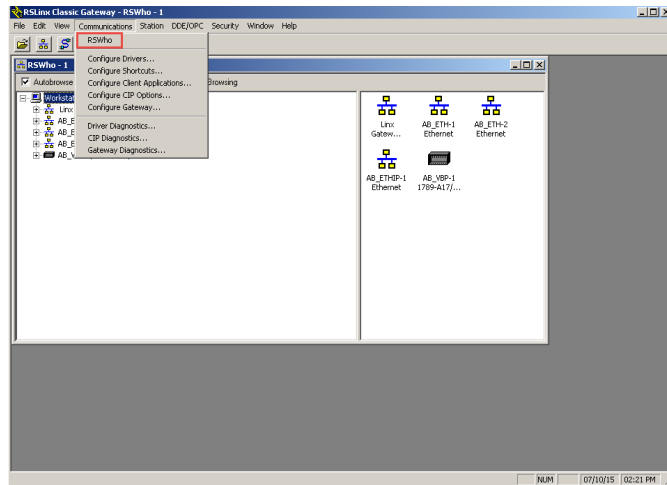


4. Select the configured driver and browse the appropriate networks that IntelliCENTER software is communicating with.
5. Allow all devices on a network to be browsed.

IMPORTANT If a device is not first browsed in RSLinx Classic software, the IntelliCENTER software cannot communicate to that device and displays Communication Loss. Once the network has been fully browsed, it does not need to be rebrowsed until the network is modified. This browse must happen in RSLinx Classic software, not in the IntelliCENTER software 'Select Network Paths' dialog box.

Configure EtherNet/IP Driver


To configure the EtherNet/IP driver, follow these steps.

1. Choose a name for the new driver and click OK.
2. To associate with this driver, select the Network card, and click OK.

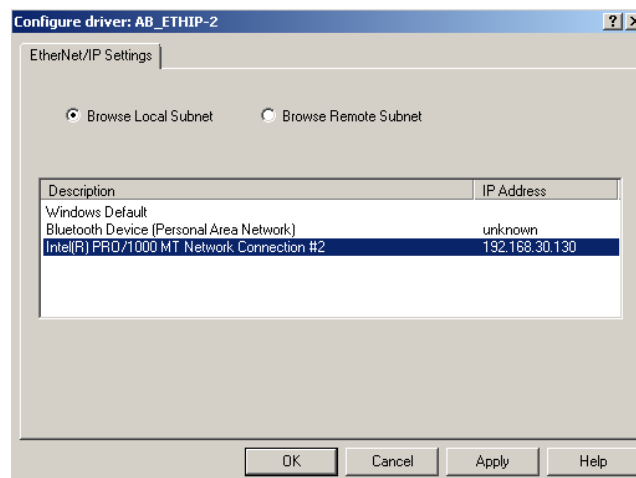

After successfully adding the new driver, the network must be browsed.

3. From the Communications menu, choose RSWho.

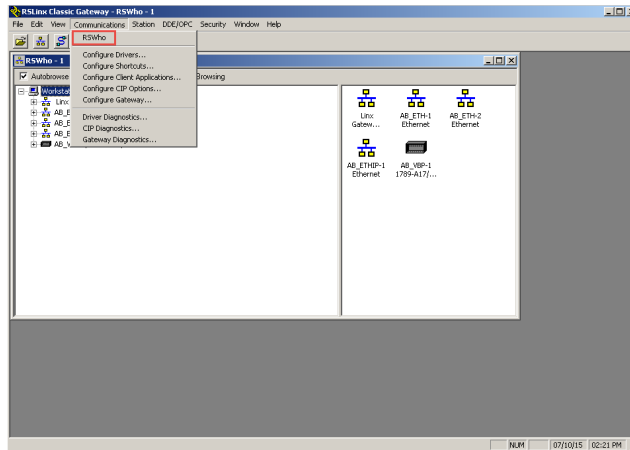


4. Select the configured driver and browse the appropriate networks that IntelliCENTER software is communicating with.
5. Allow all devices on a network to be browsed.

IMPORTANT If a device is not first browsed in RSLinx Classic software, the IntelliCENTER software cannot communicate to that device and displays Communication Loss. Once the network has been fully browsed, it does not need to be rebrowsed until the network is modified. This browse must happen in RSLinx Classic software, not in the IntelliCENTER software 'Select Network Paths' dialog box.

Configure DeviceNet Driver

To configure the DeviceNet driver, follow these steps.


1. Select the desired DeviceNet Driver from the list and click Select.

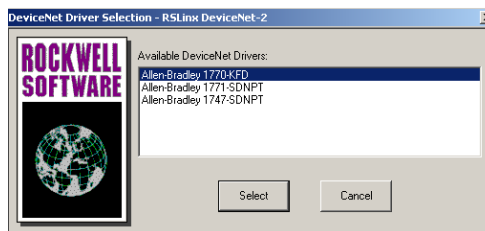

Complete the information in the Driver Configuration dialog box.

2. For the DeviceNet Drivers, select Autobaud as the Network Data Rate.
3. When finished, click OK.

This image is an example of the DeviceNet Driver configuration dialog box.

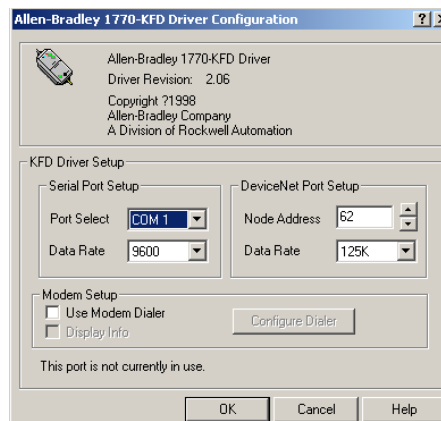

IMPORTANT The Driver Configuration dialog box varies depending on the driver you select.


IMPORTANT If a device is not first browsed in RSLinx Classic software, the IntelliCENTER software cannot communicate to that device and displays Communication Loss. Once the network has been fully browsed, it does not need to be rebrowsed until the network is modified. This browse must happen in RSLinx Classic software, not in the IntelliCENTER software 'Select Network Paths' dialog box.

Starting IntelliCENTER Software

After successfully installing the IntelliCENTER software program disk, data disk, and configuring the appropriate RSLinx Classic driver, the IntelliCENTER software is ready to use.

1. To launch the IntelliCENTER software, from the Windows Start menu, choose All Programs>IntelliCENTER>IntelliCENTER.



Double-click the IntelliCENTER software icon  (if any) on your windows desktop to start the IntelliCENTER software.



If the IntelliCENTER software doesn't start up, see [RSLinx Classic Launch Control Panel on page 107](#).

2. Enter the Username and Password.

When you start the IntelliCENTER software for the first time, a welcome screen appears and asks you to set the administrator password.


- a. Type the password in the New Password and Confirm Password fields.
- b. Click OK.

The Select the Lineup Name dialog box appears.

IMPORTANT The default username is Administrator. You can add a New User and change password as desired. See [User Accounts and Security on page 65](#) for details.

IMPORTANT If Username and Password are not entered, the IntelliCENTER software launches but you have limited capabilities. To enter username and password after starting IntelliCENTER Software, refer to the [Login after Lineup Opens on page 65](#) section.


3. Select the appropriate IntelliCENTER MCC lineup from the pull-down menu and click Next.

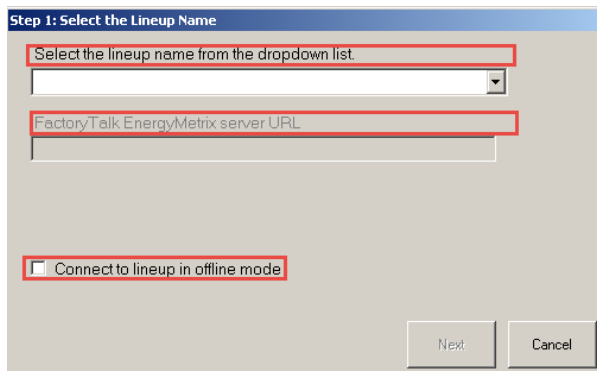

IMPORTANT By checking 'Connect to lineup in the offline mode' the IntelliCENTER software does not require a physical connection to lineup and there is no communication to the devices. If the lineup selected is IntelliCENTER Energy MCC, then you can enter the URL where the associated FactoryTalk® EnergyMetrix™ server is located. The software is enabled to display the IntelliCENTER Energy views for the devices within the MCC when you enter the URL.


For IntelliCENTER Energy lineups, if the URL field is left blank then the 'FactoryTalk EnergyMetrix server URL' dialog box appears.

4. Click Yes and continue.

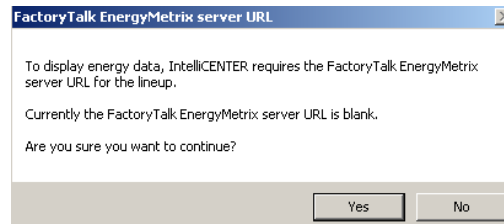


5. Select the Network Paths from the dialog box. If you are monitoring a particular IntelliCENTER network for the first time, then the network path is unknown.
6. To associate the network with the appropriate path, click RSWHo.
7. Expand the network tree until the desired network is highlighted, then click OK.


EtherNet/IP Network path example

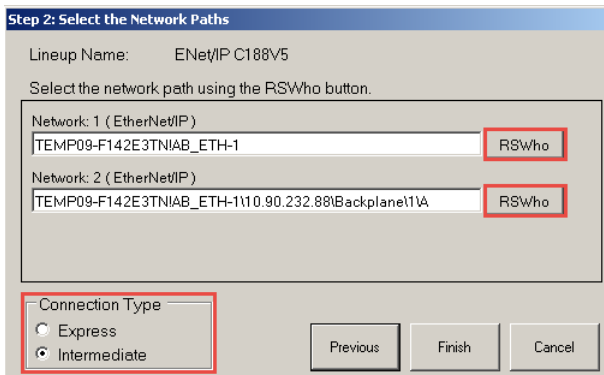

DeviceNet Network path example

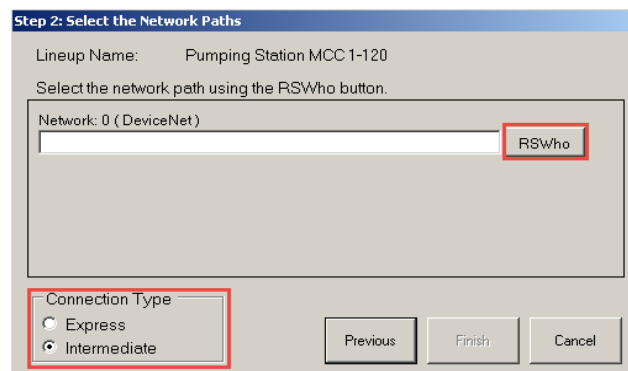

If the IntelliCENTER MCC lineup has multiple networks included in it, then there are multiple RSWHo network paths listed. Each network must be configured individually the first time they are monitored.

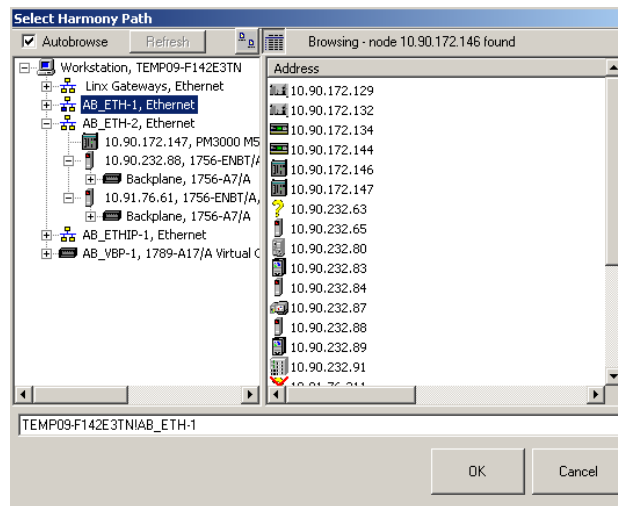

8. Click the Connection Types by using the option boxes provided.
 - Intermediate: This type of connection checks the units as they appear in the computer database against what is found in the network. The database check is used to resolve the differences between hardware and software database. To resolve the differences is critical when connecting to a lineup for the first time or after changes have taken place (such as replaced devices, new devices added to the lineup).
 - Express: This type of connection assumes that no changes have taken place in the lineup since the last time the computer was connected. Express is the fastest connection.

IMPORTANT By selecting the connection type, you can replace the Default connection type for the IntelliCENTER software startup. To change the default connection type, see [Communication Set Up on page 76](#).

9. After selecting the network paths and connection type, click Finish.
The IntelliCENTER software starts up and launches its default screen (Elevation view).



If both RSWho network paths are configured to the same network path, then the 'Duplicate network paths selected' dialog box appears. Click yes and continue.

Notes:


Exploring IntelliCENTER Software

This chapter describes the features of the graphical user interface of the IntelliCENTER® MCC lineup represented in the IntelliCENTER software.

IntelliCENTER Software User Interface

The IntelliCENTER software application opens up and the Elevation view (default view) of the selected MCC lineup appears automatically.

Figure 1 - IntelliCENTER Software Elevation View Example

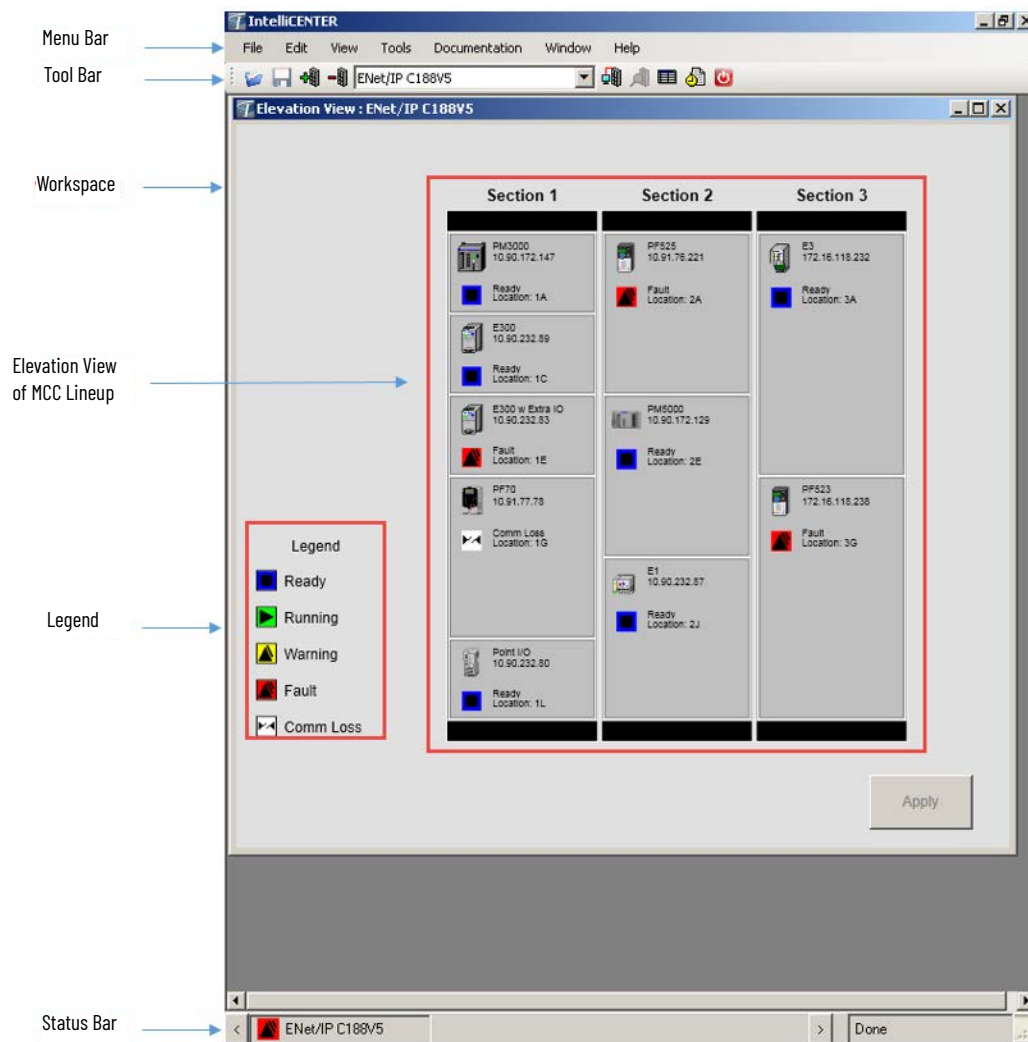

Menu Bar

The Menu Bar appears at the top of the IntelliCENTER software window, provides shortcuts to commonly used functions.

Figure 2 - IntelliCENTER Software Menu Bar




Table 3 - IntelliCENTER Software Menu Bar









Options	Description
File	Standard Workspace Option
Edit	Workspace Edit Options
View	MCC Lineup View Options
Tools	IntelliCENTER software Options
Documentation	MCC Documentation Options
Window	Elevation View Orientation Options
Help	IntelliCENTER software Help Options


Tool Bar

The Toolbar allows for easy access to IntelliCENTER software features. The following are the functions of the icons in the tool bar.


Figure 3 - IntelliCENTER Software Tool Bar



-  Workspace Open - Opens an existing workspace.
-  Workspace Save - Saves the current workspace that is in use.
-  Add Lineup to Workspace - Adds an existing lineup to the current workspace.
-  Delete Lineup from Workspace - Lets you delete lineups from the workspace, so it is no longer open within the workspace.
-  Elevation View - Displays the Elevation view of the active lineup in the workspace.
-  Spreadsheet View - Displays the Spreadsheet view of the active lineup in the workspace.
-  Monitor (Unit) View - Displays the Monitor view of the selected unit from the Elevation or Spreadsheet view.
-  Event Log - Displays the Events Log of the selected unit. If no unit is selected, then displays the Events Log of the entire lineup



Lineup Selection - Pull-down menu of all lineups that have been added to the workspace. When you click Elevation or Spreadsheet view, the selected lineup is the active lineup that is displayed.

-  Exit IntelliCENTER - Exits the IntelliCENTER software.

Workspace

The Workspace is defined as the IntelliCENTER software that is running with user-defined information being viewed. The Workspace lets you view multiple IntelliCENTER software views simultaneously. The views can be any combination of Elevation view, Monitor view, Spreadsheet view, Events Log view, and Electronic Documentation view.

Figure 4 - IntelliCENTER Software Workspace Example

The screenshot displays the IntelliCENTER software interface. The main window is titled "IntelliCENTER" and shows a workspace with three sections (Section 1, Section 2, and Section 3) displaying device status. A legend on the left indicates status indicators: Ready (blue square), Running (green square), Warning (yellow triangle), Fault (red square), and Comm Loss (square with X). The Elevation View shows devices with their IP addresses and status. The Spreadsheet View shows a table of device types, addresses, and network IDs. The Events Log view shows a table of device serial numbers, dates, and device IDs.

Device Type	Device Address	Net
PM3000_v4+	10.90.172.147	1
E300	10.90.232.89	1
E300	10.90.232.83	1
PowerFlex70	10.91.77.73	1
Point I/O A/ENT	10.90.232.80	1
PowerFlex525	10.91.76.221	1
PM5000	10.90.172.129	1

Device Serial N...	Date	Device D
1076081248	05/27/2015 12:54:38	PF70 10:
1496863829	10/08/2013 15:51:51	PM5000 1
2532838432	05/03/2012 08:40:49	PM3000 1
4294967295	03/19/2015 11:18:49	PF523 17
4278255360	05/27/2015 10:58:27	PF525 10.
4294967295	03/19/2015 11:18:49	PF523 17
538979905	11/09/2011 14:27:05	E1 10.90.:
1063	11/09/2011 14:17:19	E300 10.9

Elevation View

The Elevation view displays all devices in the actual MCC lineup, complete with device description and the status indicators for each device. The Elevation view is also the default view of the IntelliCENTER software. For further details on the Elevation view, see [Elevation View on page 33](#).

Status Bar

The Status Bar appears at the bottom of the IntelliCENTER software window and provides the lineup identification, connectivity status, and user information.








Note the serial number from the CD and save it. For installation instructions, see [Installing IntelliCENTER Software Data Sets on page 14](#).

Figure 5 - IntelliCENTER Software Status Bar Example



Legend

The Legend appears on the left side of the Elevation view. The Legend provides reference for various status indicators, which show real-time status of the devices and lets you identify anomalies. The following are the status indicators:

-  Ready - Device is ready for operation, communication is normal.
-  Running - Device is running normally, communication is normal.
-  Warning - A predetermined warning condition, communication is normal.
-  Fault - A predetermined fault condition, communication is normal.
-  No Communication - Communication has been lost.



For further information about advanced Legend features, refer to [Legend Options on page 73](#).

Using IntelliCENTER Software


Workspace Options


With IntelliCENTER® software, you can open multiple lineups for real-time monitoring, predictive maintenance, and advanced diagnostics purposes.

Add a Lineup to the Workspace

To add a lineup to the existing workspace, follow these steps.

1. From the Edit menu, choose Add Lineup to Workspace.
See [Starting IntelliCENTER Software on page 23](#) for more information.

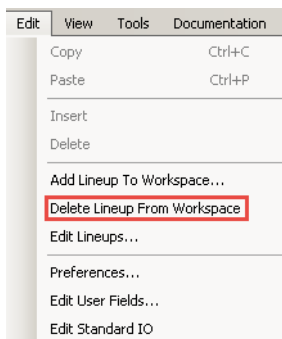

2. An alternate method to add a lineup to the Workspace is to click  from the tool bar.
See [Starting IntelliCENTER Software on page 23](#) for more information





To Toggle between multiple lineups, double-click the desired lineup that is displayed in the bottom Status bar.

Remove a Lineup from the Workspace

To remove a lineup from existing workspace, follow these steps.


1. From the Edit menu, choose Delete Lineup from Workspace.

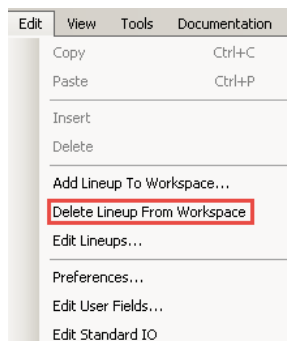

An alternate method to delete the lineup from Workspace is to click  on the tool bar.

After selecting the method to Delete MCC lineup from the workspace, the Delete Lineup from Workspace dialog box appears.


2. Select the lineup that you are removing from the list (multiple lineups can be selected) and click OK.

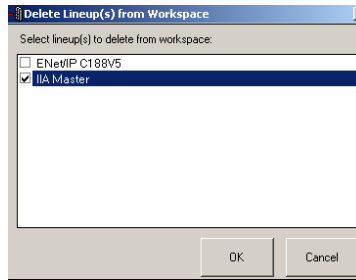

Saving the Customized Workspace

With IntelliCENTER software, you can configure the workspace as needed. You can arrange the views in a logical manner to view data. The customized workspace can be saved for future use. To save the customized workspace, follow these steps.

1. From the File menu, choose Workspace>Save As.

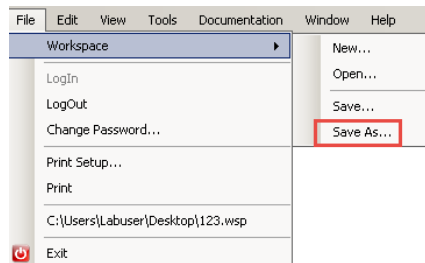

2. Name the file and save it as a .wsp extension and click Save.

Open a Workspace

To open a new Workspace, follow these steps.

1. From the File menu, choose Workspace>New.
See [Starting IntelliCENTER Software on page 23](#) for more information.
2. To reopen a customized saved Workspace, from the File menu, choose Workspace>Open.
3. Choose the saved file (.wsp) and click open.



To open a saved workspace directly, locate the saved workspace (.wsp) file on the computer/server and double-click the file. The IntelliCENTER software loads the saved workspace file with access to the security features of IntelliCENTER software.


IMPORTANT For more Workspace options, see [Advanced Workspace Options on page 83](#).


Real-Time Monitoring

The IntelliCENTER software uses a polling method that allows real-time monitoring information to be displayed in the various IntelliCENTER software views. The Elevation view and Monitor view of the IntelliCENTER software provide real-time information of the IntelliCENTER MCC to the user.

IMPORTANT The monitoring of the information takes second priority to control commands on the network. Hence, the IntelliCENTER software polling does not affect the response time for critical control commands.

Elevation View

The Elevation view is the default view of IntelliCENTER software. You can view multiple lineups simultaneously. To access the Elevation view of the desired lineup, select the IntelliCENTER MCC lineup from the pull-down menu in the Tool bar and click  to launch the Elevation view. You can also toggle between multiple Elevation views, by double-clicking the desired MCC lineup in the bottom Status Bar.

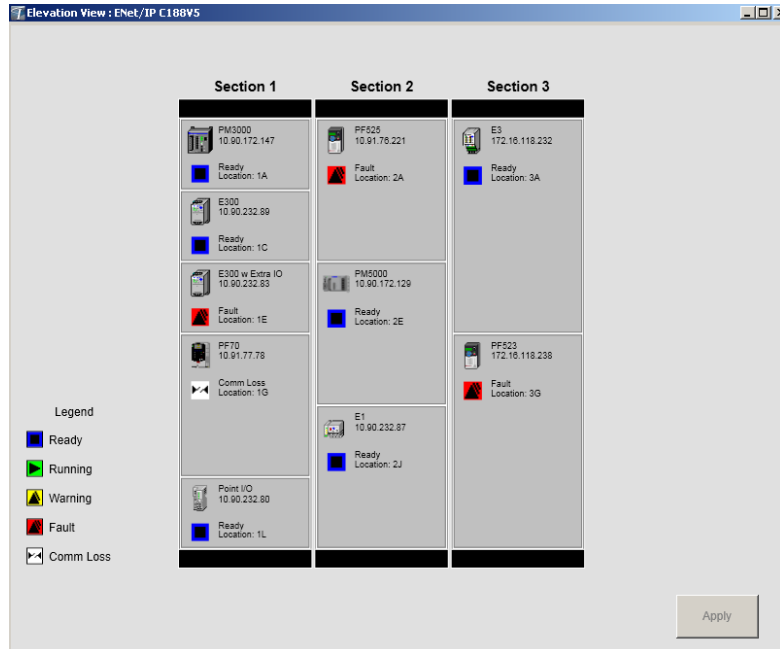


An alternate method to launch the Elevation view is to select the desired lineup from the Lineup Selection pull-down menu in the Tool bar. Then from the View menu, choose Elevation.

IMPORTANT

To view the device description, location, IP address, node number, and device status, place the mouse cursor over the device without clicking. The description and location text is editable. Place the mouse cursor over the device description or location and double-click to edit the information.


Elevation View Window Size

The size of the Elevation view window is resizable. To change the size of the Elevation view, drag the edge (top, bottom, sides, or corners) of the Elevation view window.

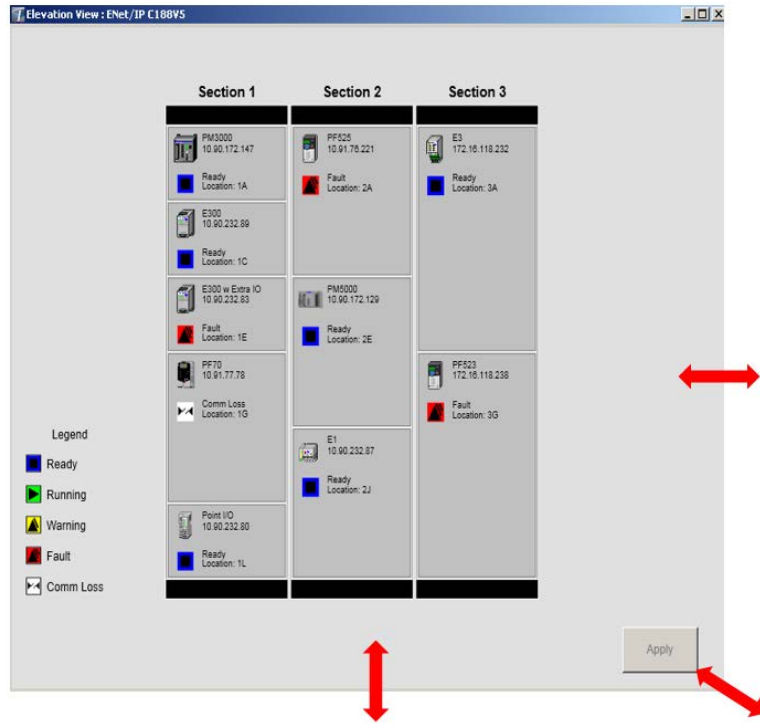

Elevation View Features

In the Elevation view of the IntelliCENTER software, you can access different views of IntelliCENTER software that contain information about the configured motor control devices. To obtain information about a specific device, right-click on the device and the following accessible menu items are available.

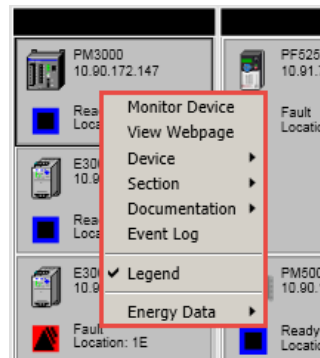

The Energy Data option is only available if you have IntelliCENTER Energy. For further details on Energy Data option, see [IntelliCENTER Energy Meter Data on page 63](#).

Monitor Device

This selection navigates the user to the Monitor view of the selected device. For more information on the Monitor view, see [Monitor \(Unit\) View on page 36](#).



The Monitor view for a device can also be launched by double-clicking the device in the Elevation view.

View Web Page

The web page link navigates you to the device web page. The device web page lets you view diagnostic information and configure the parameters. The accessible information and ability

to configure parameters varies for each device web page. See the device documentation for further information on the web page functionality and features.

IMPORTANT Only EtherNet/IP devices have a web page. Not all devices support web page functionality. For further information on device web pages, refer to the individual device documentation.



The device web page is only available if the device is directly on the network with your computer.

See [Table 5, Web Page Enabled Devices on page 110](#) for commonly used motor control devices that support the web page functionality.

Device_Name	M6_AOP_Test
Device_Location	PEMs_Lab
IP_Address	10.90.172.129
Ethernet_Address	00:00:BC:ES:C3:AA
Hardware_Revision	0x0000
Firmware_Revision	Revision 4.02
Catalog_Number	1426-M6E
Installed_Options	Not_Installed
Original_Catalog_Number	1426-M5E
Series_Letter	A

Copyright © 2014 Rockwell Automation, Inc. All Rights Reserved.

Device

The Device option lets you insert or remove a new or an auxiliary unit from the existing lineup. For further details, see [Advanced Elevation View Options on page 83](#).

Section

The Section option lets you Insert or Remove sections from lineup. For further details on the addition or removal of a section, see [Advanced Elevation View Options on page 83](#).

IMPORTANT For CENTERLINE® 2500 MCC, the section is referred to as a column.

Documentation

The Documentation option lets you view the drawings, manuals, and spare parts lists of the selected unit in the section. For further details, see [Electronic Documentation on page 46](#).

Event Log

The Event log option lets you view the history of events of the selected device. For further details, see [Events Log View on page 46](#).

Legend

The Legend appears in the Elevation view and provides reference for various status indicators, which show real-time status of the devices and lets you identify anomalies. The Legend option lets you turn the Elevation view Legend display on or off.

Monitor (Unit) View

The IntelliCENTER software includes an integrated Monitor view for each family of motor control devices. The Monitor view lets you access device-level data for real-time monitoring of the devices in the IntelliCENTER MCC lineup. The Monitor view also lets you configure parameters that are listed in the device EDS file. For device parameter information, see [Device EDS Files on page 77](#). IntelliCENTER software version 5.00.01 and later, supports two types of Monitor views:

- Monitor (Unit) View for Motor Protection devices, Power Monitors, and I/O Devices: All devices (except variable frequency drives and SMC™ Flex controllers) use the standard IntelliCENTER Monitor view. This Monitor view gives you access to the I/O mappings of the device, trending capabilities, and access to parameters.
- Monitor (Unit) View for Variable Frequency Drives and Soft Starter: All variable frequency drives and the SMC Flex controller use an enhanced Monitor view.

IMPORTANT To launch the Monitor view of the device, double-click the device in the Elevation view or right-click on the device and choose Monitor Device.

Monitor (Unit) View for Motor Protection Devices, Power Monitors, I/O Devices, and Ethernet Network Switches


The Monitor view is designed for each family of products so you can quickly see device information, real-time data/parameters, real-time data trend, I/O, switch port data, and parameters. Each device family has a pre-configured screen to show the default parameters of greatest interest, but you can change the parameters to be displayed according to your requirements. Trend graphs and analog dials are featured on all screens. You can also change the default parameters of trend graphs and analog dials to any available parameter on the device.

IMPORTANT Stratix® 5700 switch parameter configuration is limited to the switch web page or via the switch AOP in Logix. IntelliCENTER software cannot be used to change Stratix switch parameters.

See [Advanced Monitor View for Motor Protection Devices, Power Monitors, I/O Devices, and Ethernet Network Switches on page 90](#) for further information on how to change the default device I/O and Parameters.

IMPORTANT To launch the Monitor view of the device, double-click the device in the Elevation view or right-click on the device and choose Monitor Device.

Figure 6 - Intelligent Motor Control Device Monitor View Example

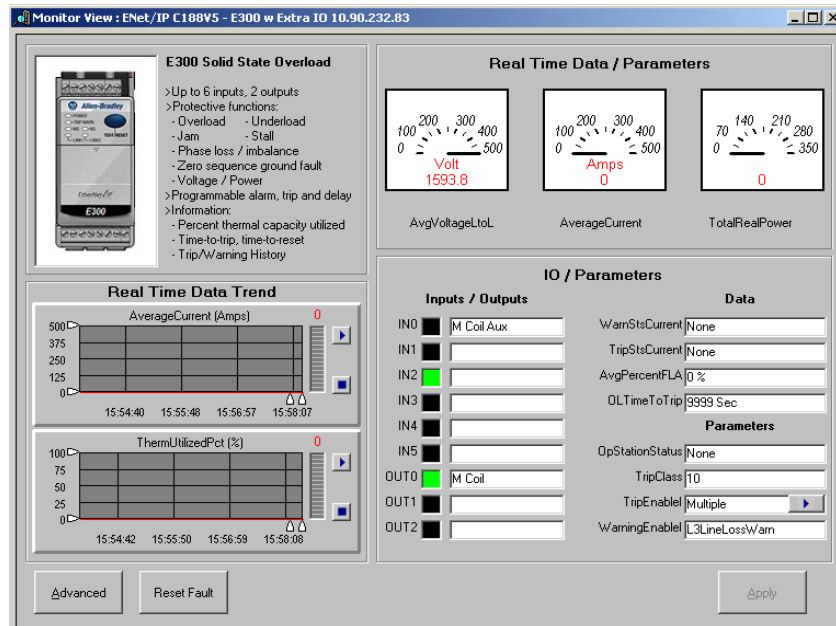


- Real-Time Data Trends - Trends are displayed on the Monitor view screen in a scrolling graph that is updated regularly. The scrolling graph shows a recent history of the parameter.

IMPORTANT The scrolling graph update depends on the Polling rate. See [Communication Set Up on page 76](#) for information on how to set the Polling rate.

To start the Data Trend, click . To stop the Data Trend, click .

Figure 7 - Real-time Trends example

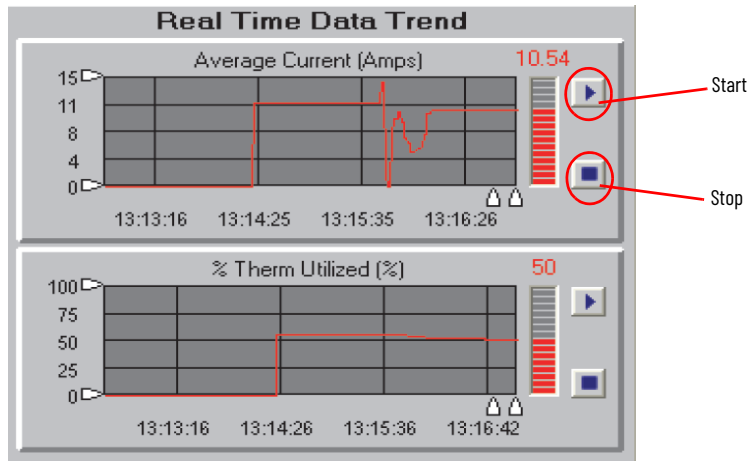


For details on how to change displayed default parameters and how to export the trends, see [Advanced Monitor View for Motor Protection Devices, Power Monitors, I/O Devices, and Ethernet Network Switches on page 90](#).

- I/O and Parameters - IntelliCENTER software lets you change the default I/O and parameters to any available I/O and parameters on the device. The software lets you configure I/O, select different parameters to monitor, and change the parameter values. For further details on how to change displayed parameters and configured I/O, see [Advanced Monitor View for Motor Protection Devices, Power Monitors, I/O Devices, and Ethernet Network Switches on page 90](#).


IMPORTANT If you change parameters in the Parameter view, it does not change the parameters in RSLogix 5000® or Studio 5000 environments.

Figure 8 - I/O Parameters Example

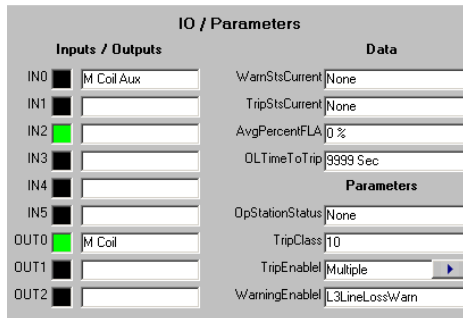


- Switch-port Data (Stratix Ethernet switch only) - When a port is selected, the data for that port is displayed. You can return to the switch-level data by clicking the port again.


Figure 9 - Ethernet Switch-port Data Example

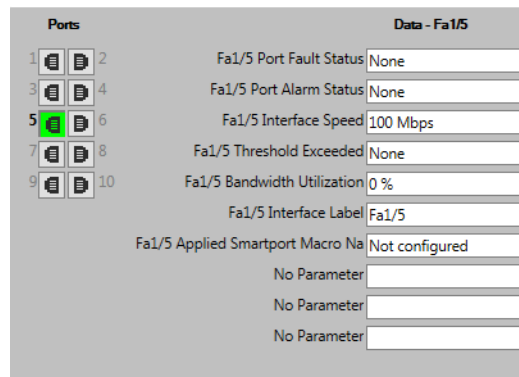


- Real-time Analog Meters - Analog meters display the real data and parameters on the screen. The data is updated at the polling rate. You can change the default parameters to any available parameter on the device. For further details on real-time analog meters and how to change displayed parameters, see [Advanced Monitor View for Motor Protection Devices, Power Monitors, I/O Devices, and Ethernet Network Switches on page 90](#).

Figure 10 - Real-time Analog Meter Example

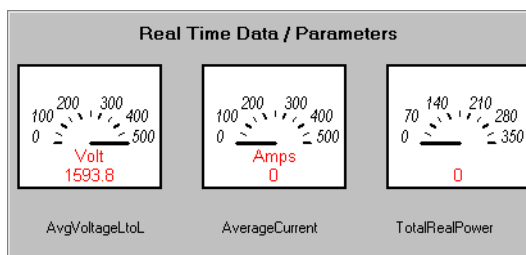

- Advanced - The Monitor view for Motor Protection devices, Power Monitors, I/O devices, and Ethernet Network Switches lets you launch an external application for the device from within the Monitor view. To launch the external application, open the Monitor view for the device and click  at the bottom left corner of the Monitor view.

IMPORTANT Configure the external application before you launch the application. See [Configure External Applications for Advanced Configuration on page 73](#) for further details.

- Reset Faults - You can reset the faults for the device within the Monitor view. To reset the faults for the device, open the Monitor view for the device and click  at the bottom left corner of the Monitor view.

IMPORTANT All devices do not support the Reset Faults feature. To enable the Reset Fault button within the Monitor view, from the Edit menu, choose Preferences>Security and check Enable Reset Fault.

See the [Monitor View Compatibility Table on page 111](#) for a list of devices that support Monitor view and let you configure parameters.

Monitor (Unit) View for Variable Frequency Drives and Soft Starters

The Monitor (Unit) view for variable frequency drives and soft starters is a feature for IntelliCENTER software version 5.00.00 and later. The view provides a common interface for PowerFlex® drives and SMC Flex soft starters that can include access to parameters, diagnostics, wizards, faults/alarms, and device level diagrams and manuals.


IMPORTANT The Monitor views for drives and soft starters use a common software component that gets installed with IntelliCENTER software. There can be interoperability issues, but the installation of each Data CD that contains a drive or soft starter helps keep the common software component up to date. If these Monitor views are not displaying properly, contact IntelliCENTER Software Technical Support.











This view is launched inside IntelliCENTER software, not as a separate application. To launch the Monitor view, double-click the device in the Elevation view or right-click on the device and choose Monitor Device.

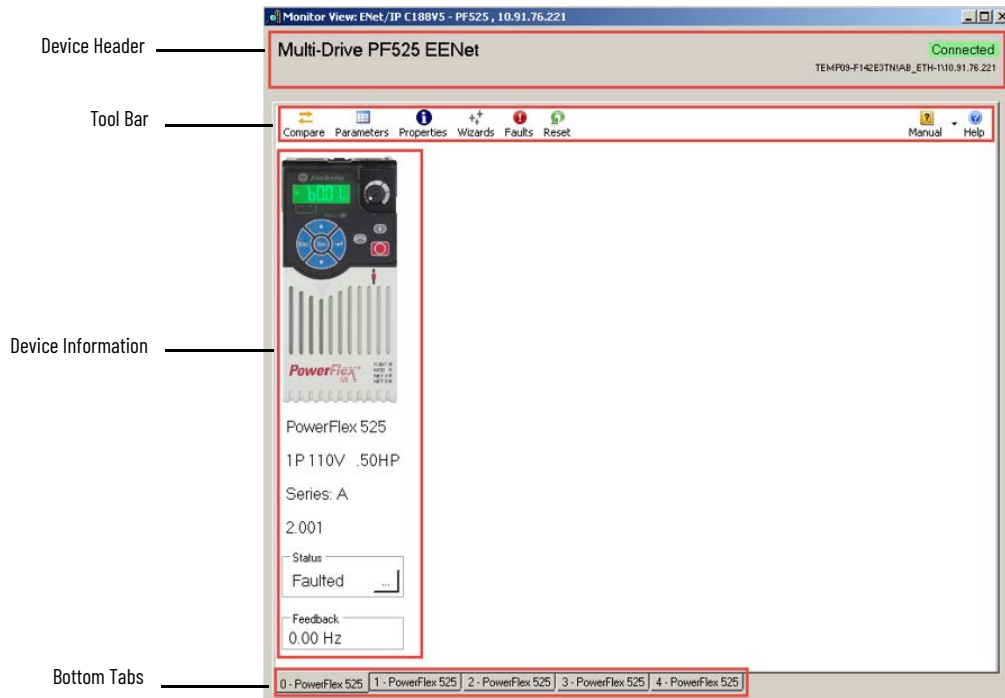




- Device Graphic View - The Graphic view lets you see an image of the primary or peripheral device, product configuration, and online status information. The Monitor view for variable frequency drives and soft starters contains a device header, device information, tool bar, bottom tab, and connectivity status. If multiple peripheral devices are associated with a primary device, then the Monitor view includes tabs (at the bottom) to toggle between the peripheral devices.

Figure 11 - Monitor View for Variable Frequency Drives and Soft Starters Example



- The Device Header - The device header is the tab at the top of the Monitor view for variable frequency drives and soft starters. The primary device product name, connection information, and network path information are displayed in the device header tab.
- Tool Bar - The tool bar displays the various functional buttons that are available. The visibility of the buttons on the toolbar varies depending upon the actions that the device supports and whether the device is online or offline. The following are the toolbar buttons:

Button	Description
	Opens the 'Select Compare options' dialog box to compare configuration, parameter attributes process displays (if supported), input/output configuration (if supported), and DeviceLogix™ data (if supported) of a device or peripheral device to the default values, or another online device, or an offline file.
	Opens the Parameter List window where you can view and configure device or peripheral device parameters.
	Opens the Diagrams window where you can configure or troubleshoot parameters via block diagrams (if supported by the device).
	Opens the Properties window where you can view and configure a device or peripheral rating, firmware revision, assigned port, user-defined text description, language, network communications configuration, and system time clock settings (if supported), USB import/export (if supported), create a database for a device, non-volatile storage options (if supported), and reset a device to the default settings.
	Opens the Wizards window where you can select a Wizard to run for the selected device (if available).
	Opens the Process Display window where you can monitor or change user-defined process displays (if supported by the device).
	Opens the Fault Details window where you can view and troubleshoot faults and alarms for a device. TIP: The Fault/Alarms option is available only when the device is online.
	Opens the Event Details window where you can view and troubleshoot event details (if supported by the device) for a device and access additional help information for a specific event, clear the trip event, or clear the event queue TIP: The Events option is available only when the device is online.

Button	Description
	Opens the Diagnostic List window where you can view diagnostic items (if supported by the device) for a primary or peripheral device. TIP: The Diagnostics option is available only when the device is online.
	Opens the DeviceLogix Editor (if supported by the device).
	Resets the online device (if supported by the device). Resetting a device stops, de-energizes, and re-energizes the device. You are prompted to confirm the reset of the device before the action is taken. This button is only available when connected to a device that supports resets TIP: The Reset option is available only when the device is online.
	Opens the user manual (in PDF format) for the device
	Opens Help options. TIP: Click Help while in a Parameter properties window to open Help for a specific parameter. Click Help while in the Fault/Event Detail window to open Help for a specific fault/event.

- Bottom tab - The bottom tab lets you toggle between primary device and connected peripheral devices. Depending on the device, the add+ tab is also provided so you can add a peripheral device to the primary device or configure a multi-drive application. For details on how to add a peripheral device, see [Advanced Monitor View for Variable Frequency Drives and Soft Starters Options on page 95](#).




- Online Device Status - The Online Device Status lets you view Device Status, for example, enable running, not ready, accelerating, and decelerating. Click  and the extended status window appears.

Figure 12 - Online Device Status Example



PowerFlex 525
 1P 110V .50HP
 Series: A
 2.001
 Status
 Faulted 
 Feedback
 0.00 Hz



The online device status is available only when the device is online.

- Process Display - The Process display lets you monitor real-time values for specific parameters. You can change a parameter and the scale for a selected parameter minimum, maximum, and actual value. You can also change the text that is shown for the selected process display via the Process Display window.


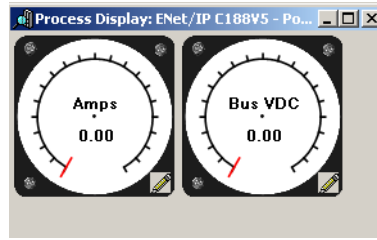

Click  from the tool bar and Process display windows launch.

Figure 13 - Process Display Example



IMPORTANT Not all devices support the process display ability. For details on how to change process display parameters, see [Advanced Monitor View for Variable Frequency Drives and Soft Starters Options on page 95](#).

- Parameter View - The Parameter view lets you view and modify the parameters of the devices that are configured in the lineup. Click  from the tool bar. The Parameter window appears with the list of all parameters for the selected device.

IMPORTANT If you change parameters in the Parameter view, it does not change the parameters in RSLogix 5000 or Studio 5000 environments.

Figure 14 - Monitor View for Variable Frequency Drives and Soft Starters Parameter Display Example

#	Name	Value	Units	Internal Value	Default	Min	Max
1	Output Freq	0.0	Hz	0	0.0	-500.0	500.0
2	Commanded Freq	0.0	Hz	0	0.0	-500.0	500.0
3	Output Current	0.00	Amps	0	0.00	0.00	32767.00
4	Torque Current	0.00	Amps	0	0.00	-32767.00	32767.00
5	Flux Current	0.00	Amps	0	0.00	-32767.00	32767.00
6	Output Voltage	0.0	VAC	0	0.0	0.0	690.0
7	Output Power	0.00	kW	0	0.00	0.00	2400.00
8	Output Powr Fctr	0.00		0	0.00	0.00	1.00
9	Elapsed MWh	0.0	MWh	0	0.0	0.0	429496729.5
10	Elapsed Run Time	0.0	Hrs	0	0.0	0.0	429496729.5
11	MOP Frequency	0.0	Hz	0	0.0	-500.0	500.0
12	DC Bus Voltage	0.0	VDC	0	0.0	0.0	1500.0
13	DC Bus Memory	0.0	VDC	0	0.0	0.0	1500.0
14	Elapsed kWh	0.0	kWh	0	0.0	0.0	429496729.5
15	Torque Estimate	0.0	%	0	0.0	-800.0	800.0
16	Analog In1 Value	0.000		0	0.000	-10.000	20.000



See the device EDS sheets for device parameter information.

You can also filter the parameters based on preference instead of seeing all parameters. Click the pull-down menu on the top-left corner of the parameter window. Select and click the desired group. The list is filtered and displays the parameters in that group.

Figure 15 - Parameter View Example

#	Name	Value	Units	Internal Value	Default	Min	Max
9	Elapsed MWh	0.0	MWh	0	0.0	0.0	429496729.5
10	Elapsed Run Time	0.0	Hrs	0	0.0	0.0	429496729.5
11	MOP Frequency	0.0	Hz	0	0.0	-500.0	500.0
12	DC Bus Voltage	0.0	VDC	0	0.0	0.0	1500.0
13	DC Bus Memory	0.0	VDC	0	0.0	0.0	1500.0
14	Elapsed kWh	0.0	kWh	0	0.0	0.0	429496729.5
15	Torque Estimate	0.0	%	0	0.0	-800.0	800.0
16	Analog In1 Value	0.000		0	0.000	-10.000	20.000

You can also search for a specific parameter by typing the desired parameter in the Filter Value box in parameter display window. IntelliCENTER displays the desired parameters.

Figure 16 - Parameter View Filter Value Example

#	Name	Value	Units	Internal Value	Default	Min	Max
1	Output Freq	0.0	Hz	0	0.0	-500.0	500.0
2	Commanded Freq	0.0	Hz	0	0.0	-500.0	500.0


IMPORTANT For details on how to change the Parameter values, see [Advanced Monitor View for Variable Frequency Drives and Soft Starters Options on page 95](#).

See the [Monitor View Compatibility Table on page 111](#) for a list of devices that support the Monitor view and allow you to configure parameters.

IntelliCENTER MCC - Lineup Information

The IntelliCENTER software can display and edit complete information about the MCC lineup. You can access important device information by using the Spreadsheet view. The Events Log view lets you access history of events.

Spreadsheet View

The Spreadsheet view displays maximum information about the lineup on one screen. The viewed data can be sorted and displayed according to your preference. To access the Spreadsheet view, click  from the tool bar. The Spreadsheet view is used to view device data like device address, description, location, and catalog number.



An alternate method to launch the Spreadsheet view of the lineup is from the View menu, choose Spreadsheet.

Figure 17 - IntelliCENTER Software Spreadsheet View Example

Device Type	Device Address	Network Number	Network Type	Description	Location
PM3000_v4+	10.90.172.147	1	EtherNet/IP	PM3000 10.90.172.147	Location: 1A
E300	10.90.232.89	1	EtherNet/IP	E300 10.90.232.89	Location: 1C
E300	10.90.232.83	1	EtherNet/IP	E300 w Extra ID 10.90.2...	Location: 1E
PowerFlex70	10.91.77.73	1	EtherNet/IP	PF70 10.91.77.78	Location: 1G
Point I/O AENT	10.90.232.80	1	EtherNet/IP	Point I/O 10.90.232.80	Location: 1L
PowerFlex525	10.91.76.221	1	EtherNet/IP	PF525 10.91.76.221	Location: 2A
PM5000	10.90.172.129	1	EtherNet/IP	PM5000 10.90.172.129	Location: 2E
E1	10.90.232.87	1	EtherNet/IP	E1 10.90.232.87	Location: 2J
E3	172.16.118.232	2	EtherNet/IP	E3 172.16.118.232	Location: 3A
PowerFlex523	172.16.118.238	2	EtherNet/IP	PF523 172.16.118.238	Location: 3G

IMPORTANT A change of information inside the Spreadsheet view can potentially have a negative impact on the performance and functionality of the IntelliCENTER software.

The Spreadsheet view lets you access information of the configured devices. To obtain information about a specific device, right-click on the device in the Spreadsheet view and the following menu items are available:

Figure 18 - Spreadsheet View Options Example

Device Type	Device Address	Network Number	Network Type	Description	Location
PM3000_v4+	10.90.172.147	1	EtherNet/IP	PM3000 10.90.172.147	Location: 1A
E300	10.90.232.89	1	EtherNet/IP	E300 10.90.232.89	Location: 1C
E300	10.90.232.83	1	EtherNet/IP	E300 w Extra ID 10.90.2...	Location: 1E
PowerFlex70	10.91.77.73	1	EtherNet/IP	PF70 10.91.77.78	Location: 1G
Point I/O AENT	10.90.232.80	1	EtherNet/IP	Point I/O 10.90.232.80	Location: 1L
PowerFlex525	10.91.76.221	1	EtherNet/IP	PF525 10.91.76.221	Location: 2A
PM5000	10.90.172.129	1	EtherNet/IP	PM5000 10.90.172.129	Location: 2E
E1	10.90.232.87	1	EtherNet/IP	E1 10.90.232.87	Location: 2J
E3	172.16.118.232	2	EtherNet/IP	E3 172.16.118.232	Location: 3A
PowerFlex523	172.16.118.238	2	EtherNet/IP	PF523 172.16.118.238	Location: 3G

Spreadsheet View Options


- Edit I/O - This option lets you add or modify the device I/O. For further details, see [Advanced Spreadsheet View Options on page 96](#).




You can click Edit I/O at the bottom of Spreadsheet view to modify or add I/O. Select the desired device and click Edit I/O. See [Advanced Spreadsheet View Options on page 96](#) for information on how to modify or add I/O.

- View - This option lets you access the Monitor view, Events Log view, and sort the displayed column for the lineup. For further details, see [Monitor \(Unit\) View on page 36](#) and [Events Log View on page 46](#).

Figure 19 - Spreadsheet View Options

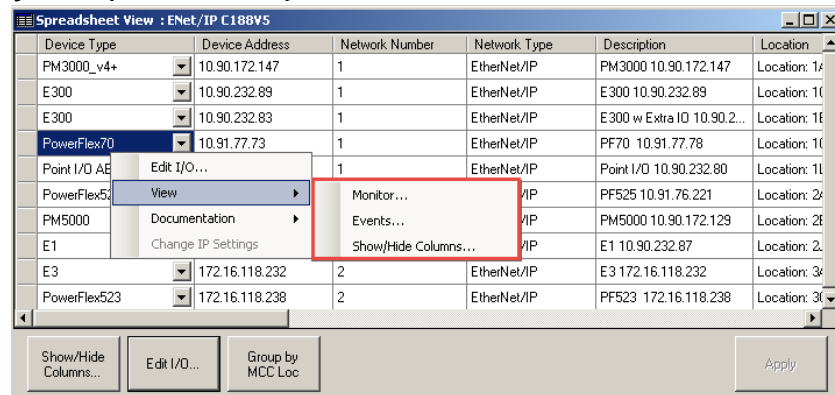


- Show/Hide Columns - You can view customized information on the Spreadsheet view. See [Customize the Spreadsheet View on page 45](#) for information about how to change the Spreadsheet view.
- Documentation - This option lets you view the drawings, manuals, and spare parts lists of the units in the lineup. For further details, see [Electronic Documentation on page 46](#).
- Change the IP settings - This option lets you change IP address for listed devices on the MCC Lineup. To change the IP address, you must connect to the lineup in the IntelliCENTER software in OFFLINE mode, but be physically connected to the device in the lineup. See [Setting Device IP Address on page 78](#) for further details.
- Group by MCC Loc - This option lets you sort units in ascending order by Sections and unit locations. Click  at the bottom of the Spreadsheet view.

Customize the Spreadsheet View


To customize the Spreadsheet view, follow these steps.


1. Right-click on the device and choose View>Show/Hide Columns.
The Show/Hide Columns dialog box that lists the features appears.



You can also click  at the bottom of Spreadsheet view.

2. Check or clear the checkboxes for the features to be viewed or hidden respectively and click OK.

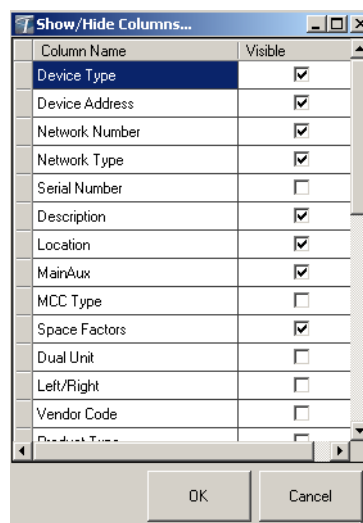

3. To save the new configuration, click  at the bottom of the Spreadsheet view.


Events Log View

The Events Log view displays the history of changes, parameter events, equipment changes, or any other changes you like to document.

Figure 20 - Event Log View Example



Device Serial N.	Date	Device Description	Device Location	Event Description
1076081248	05/27/2015 12:54:38	PF70 10.91.77.78	Location: 1G	Serial number changed on device
1496863829	10/08/2013 15:51:51	PM5000 10.90.172.129	Location: 2E	Device Attribute changed. Device Address=
2532838432	05/03/2012 08:40:49	PM3000 10.90.172.147	Location: 1A	Serial number changed on device
4294967295	03/19/2015 11:18:49	PF523 172.16.118.238	Location: 3G	Device Attribute changed. Device Address=
4278255360	05/27/2015 10:58:27	PF525 10.91.76.221	Location: 2A	Fault: 114
4294967295	03/19/2015 11:18:49	PF523 172.16.118.238	Location: 3G	Device Attribute changed. Device Type= Nor
538979905	11/09/2011 14:27:05	E1 10.90.232.87	Location: 2J	Warning: I/O-Power Supply OK = 0
1063	11/09/2011 14:17:19	E300 10.90.232.89	Location: 1C	Device Attribute changed. Device Type= E3
1611006295	03/19/2015 11:22:39	E300 10.90.232.89	Location: 1C	Serial number changed on device
538776500	11/09/2011 14:09:07	PF70 10.91.77.78	Location: 1G	Device Attribute changed. Network Number=
1078574823	11/09/2011 14:14:12	Point I/O 10.90.232.80	Location: 1L	Serial number changed on device
539873534	10/08/2013 12:33:22	PF70 10.91.77.78	Location: 1G	No Communication
1278364999	12/01/2011 16:23:12	PM5000 10.90.172.129	Location: 2E	Device Attribute changed. Device Address=
1278364999	11/09/2011 14:09:06	PM5000 10.90.172.129	Location: 2E	Device Attribute changed. Network Number=
4294967295	03/31/2015 13:09:23	PF523 172.16.118.238	Location: 3G	Device Attribute changed. Device Address=
2151400886	03/19/2015 11:18:49	E3 172.16.118.232	Location: 3A	Device Attribute changed. Device Type= Nor



To change the columns that are displayed, click  at the bottom left corner of the Event Log view. The Show/Hide Columns dialog box that lists the features appears. You can check or clear the checkboxes for the features to be viewed or hidden respectively.

Auto Logging

The software Auto Logging function records the states changes to the IntelliCENTER MCC. These changes can occur through the software or through the network while the software is monitoring the MCC.

To view auto logged items, launch the Event Log view by clicking  from the tool bar. To launch the Event Log of a particular device, select the device in the Elevation view and then click  from the tool bar.



The Event Log view can also be launched from the View menu, choose Events.

You can configure Auto Logging or Manual Logging of the events. See [Advanced Event Log View Options on page 99](#) for further details.

Electronic Documentation

IntelliCENTER software provides efficient document organization. In the software, you can view the spare parts list, user manuals, and AutoCAD drawings of the configured devices. The documentation is specific for your IntelliCENTER MCC, which was included on the Documentation/Data Disk.

User Manuals

User manuals for the IntelliCENTER MCC are provided on the IntelliCENTER Software Data Disk in a .pdf format or other desired formats. The data disks are installed on the local hard disk drive or on a server. The user manuals can be viewed at any time through the IntelliCENTER software, regardless of the location of IntelliCENTER software data. User manuals are specific to IntelliCENTER MCC being monitored.

To view the user manual for the device, right-click on the device in Elevation view, then choose Documentation>Manual.



To launch the user manual, click the device in the Elevation view. From the Documentation menu, choose Manuals.



To see the list of the user manuals, don't click any device. From the Documentation menu, choose Manuals.

The user manual selection-dialog box appears. To view the selected user manual, double-click the manual. The requested user manual launches.



You can also launch the user manual by selecting the user manual and then by clicking View File at the bottom of the Manual Selection Window.

Figure 21 - User Manual Selection Window Example

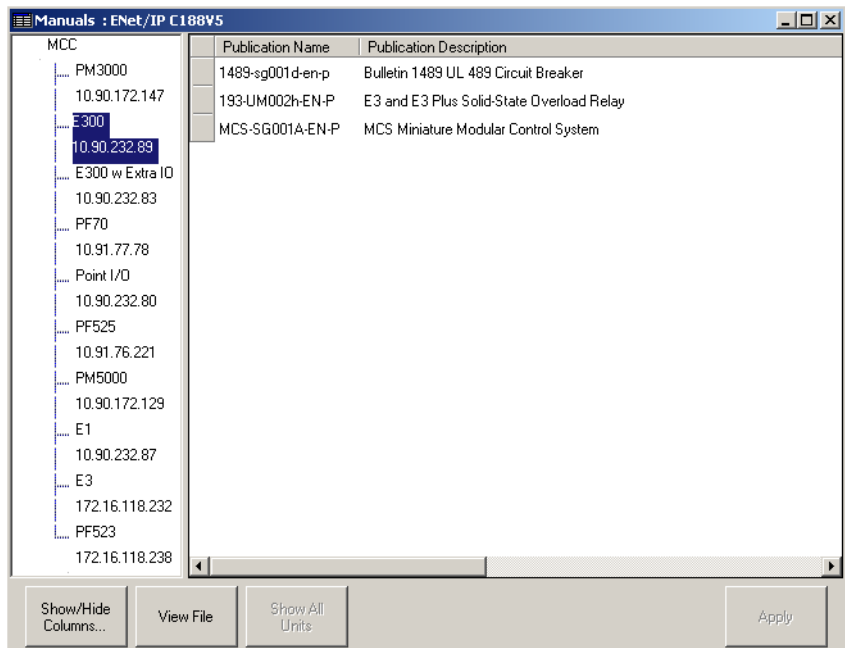


Figure 22 - User Manual Example



IMPORTANT To add a new or upload a revised user manual to the IntelliCENTER Software Database, see [Advanced Electronic Documentation Options on page 100](#).

Spare Parts List

The Spare Parts List is a compilation of the most critical electrical and mechanical components recommended to have on hand as replacements.

To view the Spare Parts list for the device, right-click on the device in Elevation view, then choose Documentation>Spare Parts. The requested spare parts list dialog box appears.



To launch the Spare Parts list, select the device in Elevation view. From the Documentation menu, choose Spare Parts.



You can see the list of the spare parts. Without selecting any device, from the Documentation menu, choose Spare Parts.

Figure 23 - Spare Parts List Example

Device Description	Device Location	Device Type	Quantity Required	Quantity Recommended on Hand	Category
E1 10.90.232.87	Location: 2J	E1	3	1	STARTER & CONT.
PF525 10.91.76.221	Location: 2A	PowerFlex525	3	1	STARTER & CONT.
PM3000 10.90.172.147	Location: 1A	PM3000_v4+	3	1	FUSE
PM5000 10.90.172.129	Location: 2E	PM5000	3	1	FUSE
PM5000 10.90.172.129	Location: 2E	PM5000	2	1	ENGINEERED PAF
E1 10.90.232.87	Location: 2J	E1	2	1	TERMINAL BLOCK
PF525 10.91.76.221	Location: 2A	PowerFlex525	2	1	TERMINAL BLOCK
Point I/O 10.90.232.80	Location: 1L	Point I/O AEMT	2	1	(n/a)
PM3000 10.90.172.147	Location: 1A	PM3000_v4+	2	1	ENGINEERED PAF
PF70 10.91.77.78	Location: 1G	PowerFlex70	2	1	FUSE
PF70 10.91.77.78	Location: 1G	PowerFlex70	2	1	TERMINAL BLOCK
PF525 10.91.76.221	Location: 2A	PowerFlex525	1	1	AUXILIARY CONTA
PM3000 10.90.172.147	Location: 1A	PM3000_v4+	1	1	COMMUNICATION.
E1 10.90.232.87	Location: 2J	E1	1	1	STAB ASSEMBLY
PF525 10.91.76.221	Location: 2A	PowerFlex525	1	1	ENGINEERED PAF
Point I/O 10.90.232.80	Location: 1L	Point I/O AEMT	1	1	(n/a)

IMPORTANT

To add a new Spare Parts list to the IntelliCENTER Software Database, see [Advanced Electronic Documentation Options on page 100](#).

CAD Drawings

The IntelliCENTER MCC CAD drawings are provided on the IntelliCENTER Software Data Disk in a .dwg format. The data disks are installed on the local hard disk drive or on a server. The CAD drawings can be viewed at any time through the software, regardless of the location of IntelliCENTER software data. The AutoCAD drawings are specific to the IntelliCENTER MCC being monitored.

To view the drawing, right-click on the device in Elevation view, then choose Documentation>Drawing. The requested CAD drawing launches.



To launch the CAD Drawings, click the device in Elevation view. From the Documentation menu, choose Drawing.



You can see the list of all drawings. Without selecting any device, from the Documentation menu, choose Drawing.

The CAD drawing selection window appears. To view the selected CAD drawing, double-click the drawing. The CAD drawing launches.



You can also launch the CAD drawing, by selecting the desired drawing and then clicking View File at the bottom of the Drawing Selection window.

Figure 24 - CAD Drawing selection example


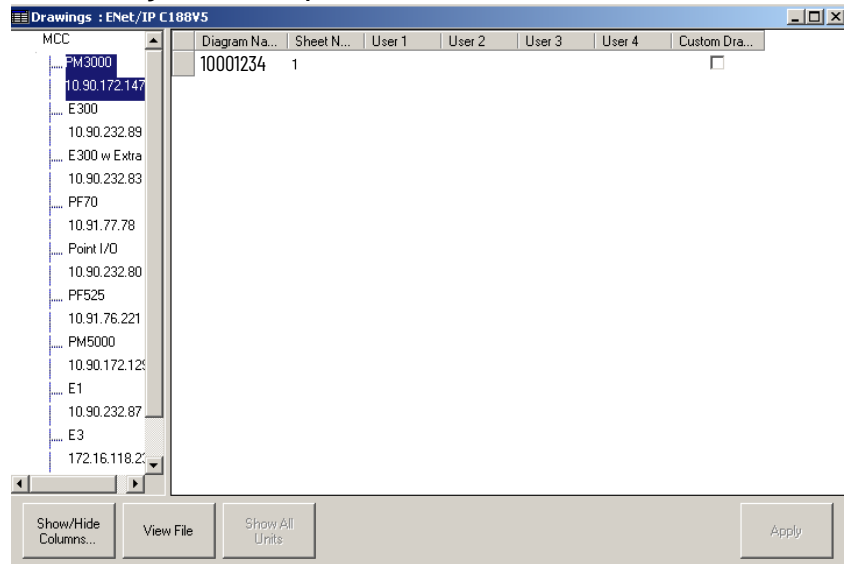


Figure 25 - CAD Drawing Example

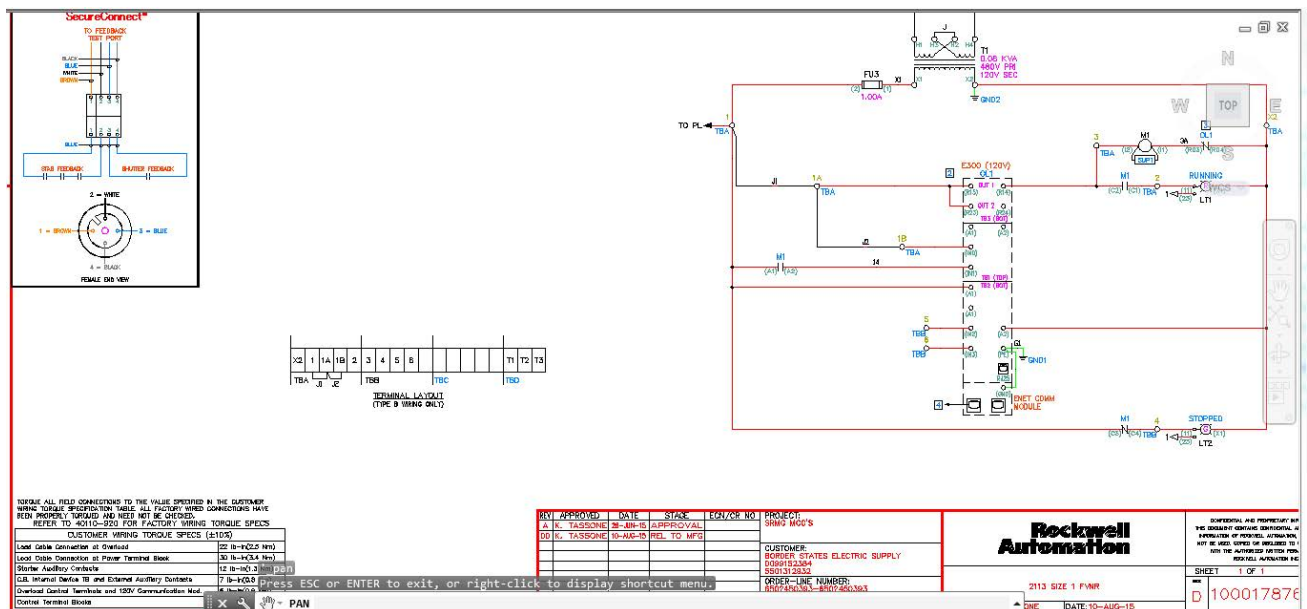

IMPORTANT To add new CAD drawings to the IntelliCENTER Software Database, see [Advanced Electronic Documentation Options on page 100](#).

Notes:

IntelliCENTER Software Integration Assistant

Integration Assistant, as part of IntelliCENTER® software, lets you update Logix Designer project files and FactoryTalk® EnergyMetrix™ database.


IMPORTANT Integration Assistant only works for MCCs with an EtherNet/IP network.



Integration Assistant For Logix5000 Software^(a)


IMPORTANT The Add-on Profiles (AOPs) for the devices must first be installed for the device before you run Integration Assistant.

IntelliCENTER software Integration Assistant adds the devices in your MCC lineup to the controller I/O tree and gets the controller tags ready for programming. The Integration Assistant tool minimizes the need to add each device manually to the I/O tree of the Logix5000™ or Studio 5000® application. To add your MCC lineup to the controller I/O tree, follow these steps.

1. From the Tools menu, choose Launch Integration Assistant>Logix 5000.

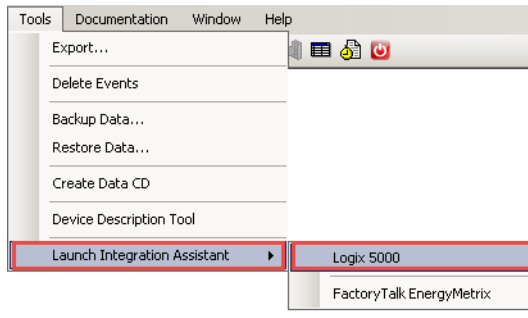


2. Click  and select the project file (*.ACD) you want to update and click  at the bottom of the IntelliCENTER Integration Assistant dialog box.

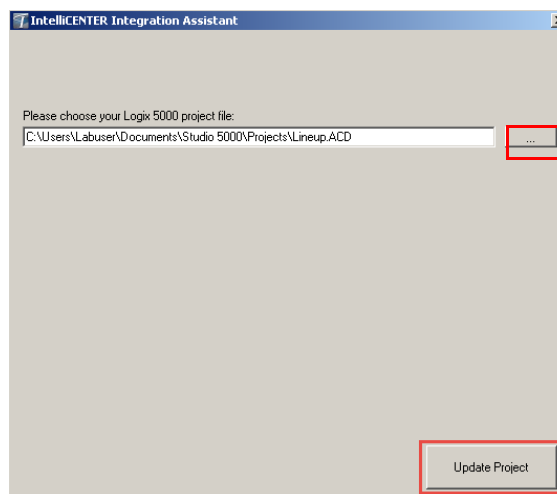

3. Select an MCC lineup and one of its Ethernet networks to begin the mapping. You must choose one of the device naming conventions:

(a) The IntelliCENTER Integration Assistant supports RSLogix 5000 version 20 and Studio 5000 version 21 and later.


- NameplateText_NetworkNumber_IPAddress - the unit nameplates are used to determine the device names in I/O tree
- DeviceType_NetworkNumber_IPAddress - the device type is used instead

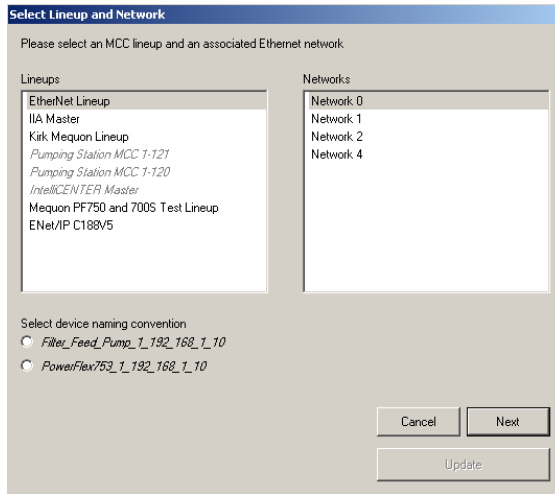

4. Click Next.


You are prompted to add devices to the controller I/O tree in your project:

- The Ethernet Cards pull-down menu contains the Ethernet cards in your project.
 - The Available Devices dialog box lists the devices for the lineup/network that can be mapped.
5. Add devices to the I/O tree.
- a. Select the appropriate Ethernet card to which you'd like to add devices.
 - b. Next select the devices you'd like to add to that card.
 - c. Click > to add those devices to the Ethernet card scanlist.
 - d. When done mapping, click Finish.

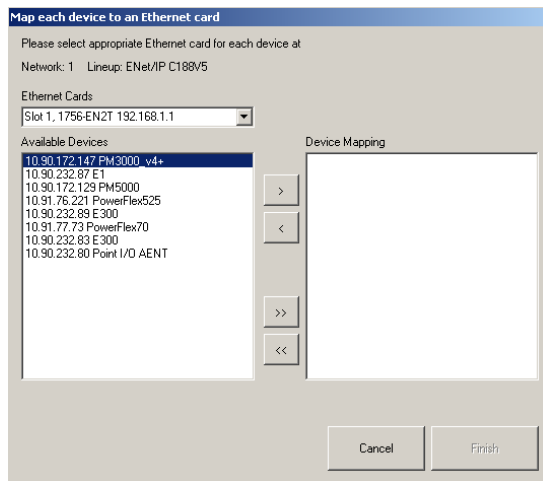


You can split the available devices to be mapped between different Ethernet cards. You can select other networks and other lineups/networks to do more mapping.

6. When you are done mapping, click Update.

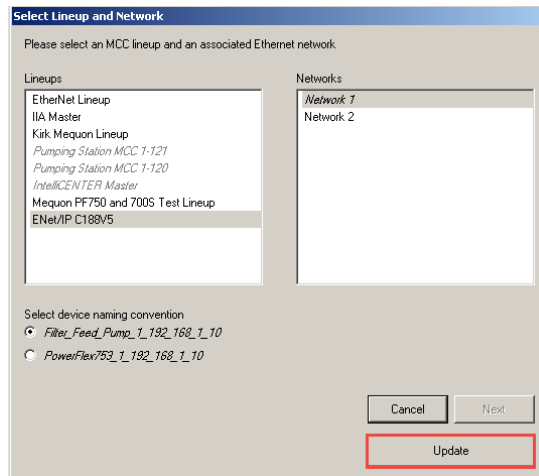

IMPORTANT When all devices under a network have been mapped, the network appears dimmed and the Next button is disabled. When all networks for a particular MCC Lineup have been mapped, the lineup is also dimmed.

When the update is successful, the tool launches the updated project, the devices have been added to the I/O tree, and the controller tags are in place.

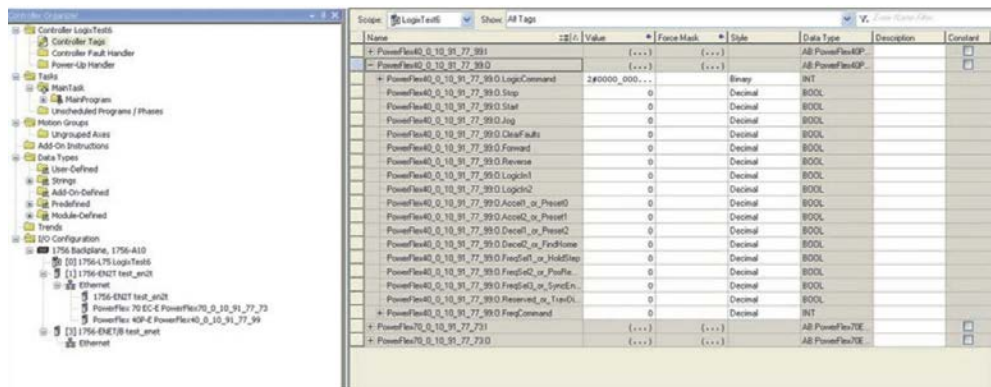

Integration Assistant for IntelliCENTER Energy

See [Integration Assistant for IntelliCENTER Energy on page 55](#).

Notes:

IntelliCENTER Energy

IntelliCENTER® Energy is a premier software package with the features of IntelliCENTER software plus additional Energy Management benefits powered by FactoryTalk® EnergyMetrix™. IntelliCENTER Energy software provides the following:

- Real-time energy consumption and historical trend data down to the device level
- Ability to monitor and manage energy usage for substantial cost savings
- Energy data can be exported for additional analysis

IntelliCENTER Energy Installation

Integration Assistant for IntelliCENTER Energy


See [Install IntelliCENTER Energy on page 16](#), for installation instructions.

IntelliCENTER software Integration Assistant is used to populate the FactoryTalk EnergyMetrix server with the device in the IntelliCENTER MCC. You can populate the FactoryTalk EnergyMetrix server from either the server or the client machine.

Run Integration Assistant from the Server

Follow these steps to run Integration Assistant to populate the FactoryTalk EnergyMetrix server from the server.


1. To launch the Integration Assistant from within IntelliCENTER Software, choose Tools > Launch Integration Assistant > FactoryTalk EnergyMetrix.

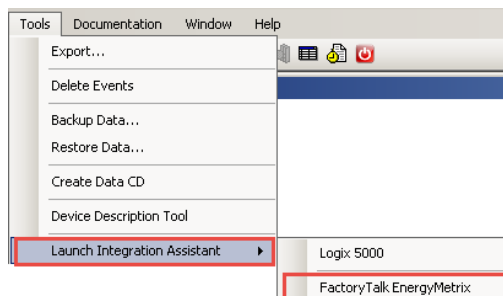


2. From the pull-down menu, select the MCC lineup that you are using to populate the FactoryTalk EnergyMetrix server.
3. Choose a naming convention and click Next.

You must choose one of the device naming conventions:


 - NameplateText_NetworkNumber_IPAddress - the unit nameplates are used to determine the device names in I/O tree
 - DeviceType_NetworkNumber_IPAddress - the device type is used instead

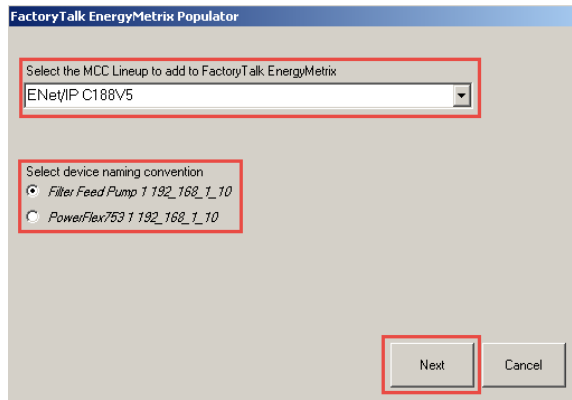


- 4. Select the path for each network within the MCC Lineup.
 - 5. Click RSWho.
- A new dialog box opens where the network can be selected.

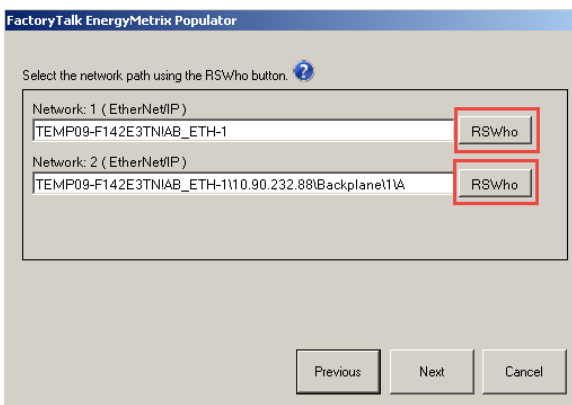

- 6. Verify that the correct path is set and click Next.

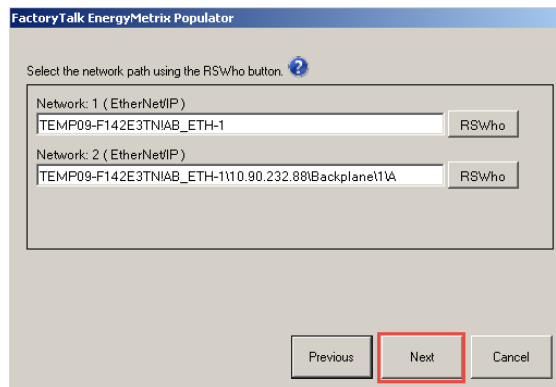


- You are prompted to provide the login information for the database.
- 7. Because we are running the populator from the server, select Windows Authentication from the Authentication Mode pull-down menu and click Finish.

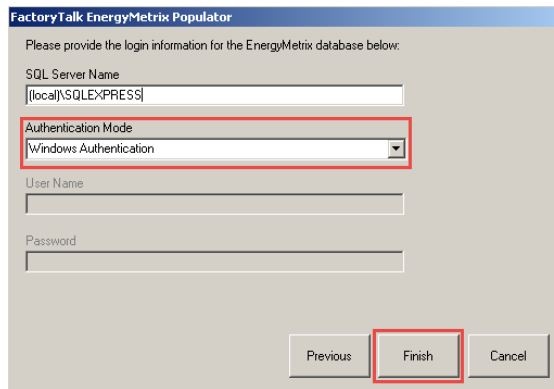

A dialog box opens, which indicates that the lineup was successfully added.

8. Click OK.

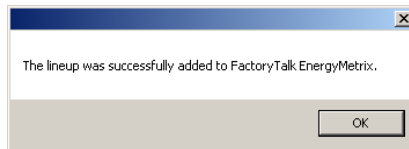

Run Integration Assistant from the Client

You have to select the path that the server uses to access the devices. The path can be selected in two ways:

- By using the RSLinx® Classic Backup Restore Utility
- By using the Network Path

Option 1: Use the RSLinx Classic Backup Restore Utility


Follow these steps to populate the server from the client by using the RSLinx Classic Backup Restore Utility.

1. On the server computer, choose Start > Programs > Rockwell Software > RSLinx > RSLinx Classic Backup Restore Utility.
2. Click Backup.


The RSLinx Classic Backup Restore Utility saves the current RSLinx® configuration of the server machine as an .rsx file.

IMPORTANT For the backup to work properly, the client computer needs access to the same devices on the same networks as the server.

3. Transfer the .rsx configuration file to the client computer.
4. Choose Start>Programs>Rockwell Software>RSLinx>RSLinx Classic Backup Restore Utility.
5. Click Restore.
6. After successfully running the RSLinx Classic Backup Restore utility, you must browse the networks by using RSWho in RSLinx software.
7. Start IntelliCENTER software.
8. From the Tools menu, choose Launch Integration Assistant>FactoryTalk EnergyMetric to launch the IntelliCENTER Integration Assistant.

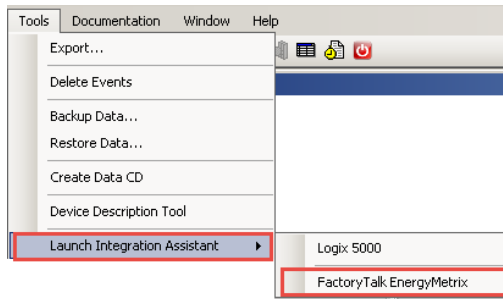


9. From the pull-down menu, select the MCC lineup that you are using to populate the FactoryTalk EnergyMetrix server.
10. Choose a naming convention and click Next.
 - You must choose one of the device naming conventions:
 - NameplateText_NetworkNumber_IPAddress - the unit nameplates are used to determine the device names in I/O tree
 - DeviceType_NetworkNumber_IPAddress - the device type is used instead

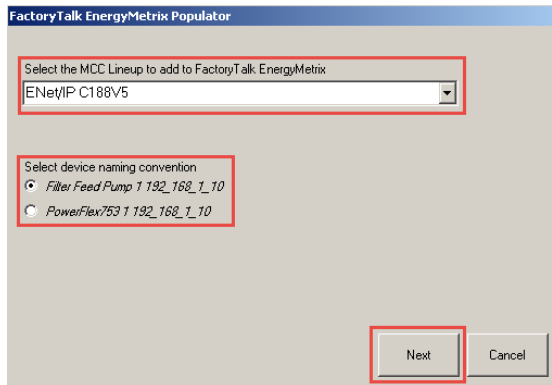

11. Select the appropriate network path by using the RSWho button in the IntelliCENTER Integration Assistant FactoryTalk EnergyMetrix wizard.

IMPORTANT The driver names and network paths must match the driver names and network paths on the FactoryTalk EnergyMetrix server for the integration to work correctly. Otherwise, see [Option 2: Use Network Path](#).

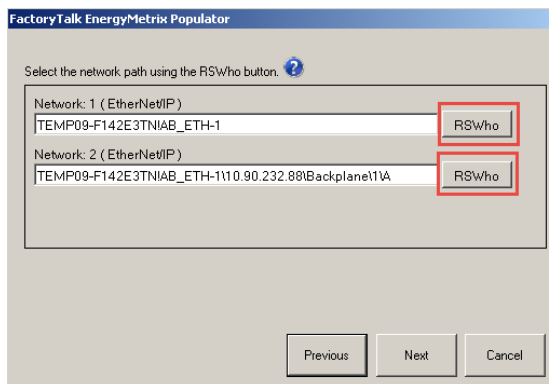

12. Click Next.

After entering the right network path, you are prompted to enter the login information for the EnergyMetrix Database.

13. Change the Authentication Mode to 'SQL Server Authentication' and make sure that the SQL Server Name matches the name of the FactoryTalk EnergyMetrix Database.
14. Enter the User Name and Password that is required to access the FactoryTalk EnergyMetrix database and click Finish to proceed.




If the wizard is being run from the client, it is important to verify that the server has been configured to allow the configuration:

- The firewall/virus protection program lets you connect to the database. In the case of Symantec protection, you would disable 'Network Threat Protection' and possibly 'Proactive Threat Protection'.
- The 'SQL Server Browser' service must be started on the server. The browser service can be enabled by going to Control Panel > Administrative Tools > Services and starting the service.

Option 2: Use Network Path


To populate the server from the client by using the network path, follow these steps.

1. From the Tools menu, choose Launch Integration Assistant>FactoryTalk EnergyMetrix to launch the IntelliCENTER Integration Assistant.

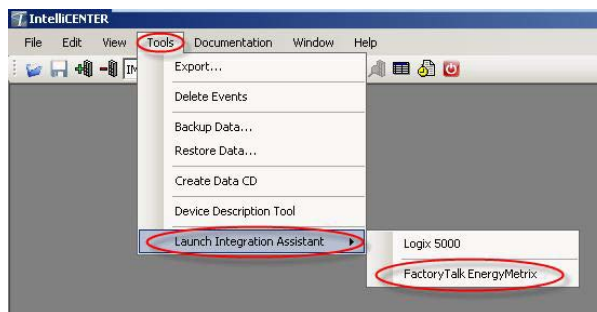

2. From the pull-down menu, select the MCC lineup that you are using to populate the FactoryTalk EnergyMetrix server.
3. Choose a naming convention and click Next.
You must choose one of the device naming conventions:
 - NameplateText_NetworkNumber_IPAddress - the unit nameplates are used to determine the device names in I/O tree

- DeviceType_NetworkNumber_IPAddress - the device type is used instead

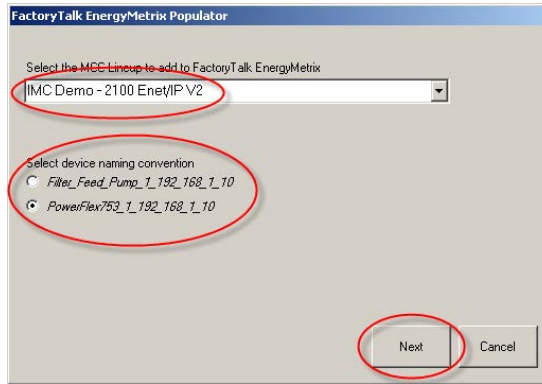


4. Identify the driver name and network path that is used on the server and type it into 'Network: 1' address instead of using RSWho.

This method lets you enter the network path directly.

For more information on Device Communication Setup and how to determine the network path, see the FactoryTalk EnergyMetrix User Manual, publication [FTEM-UM003](#).

5. Click Next.

After entering the right network path, you are prompted to enter the login information for the EnergyMetrix Database.

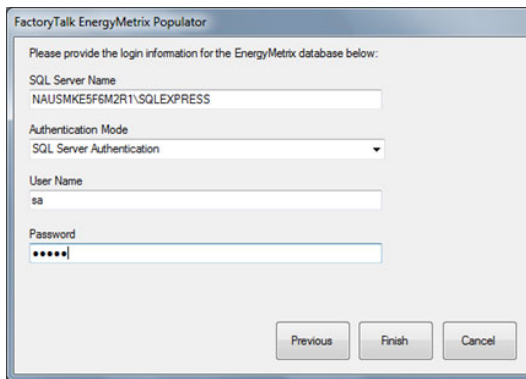

6. Change the Authentication Mode to 'SQL Server Authentication' and make sure that the SQL Server Name matches the name of the FactoryTalk EnergyMetrix Database.
7. Enter the User Name and Password that is required to access the FactoryTalk EnergyMetrix database and click Finish to proceed.



If the wizard is being run from the client, it is important to verify that the server has been configured to allow the configuration:

- The firewall/virus protection program lets you connect to the database. In the case of Symantec protection, you would disable 'Network Threat Protection' and possibly 'Proactive Threat Protection'.
- The 'SQL Server Browser' service must be started on the server. The browser service can be enabled by going to Control Panel>Administrative Tools>Services and starting the service.


IntelliCENTER Energy Views

The IntelliCENTER Energy software allows real-time monitoring information to be displayed in the various IntelliCENTER software dialog boxes. You can choose to view Calendar Trends, Trends, Meter Data, and Device Setup.

To launch the IntelliCENTER Energy views, from the Elevation view, right-click on an applicable device, then choose Energy Data. Then select the view from the menu (Calendar Trend, Trend, Meter Data, Device Setup).



See [Table 8 IntelliCENTER Energy Compatible Devices on page 112](#) for a list of IntelliCENTER Energy software supported devices.

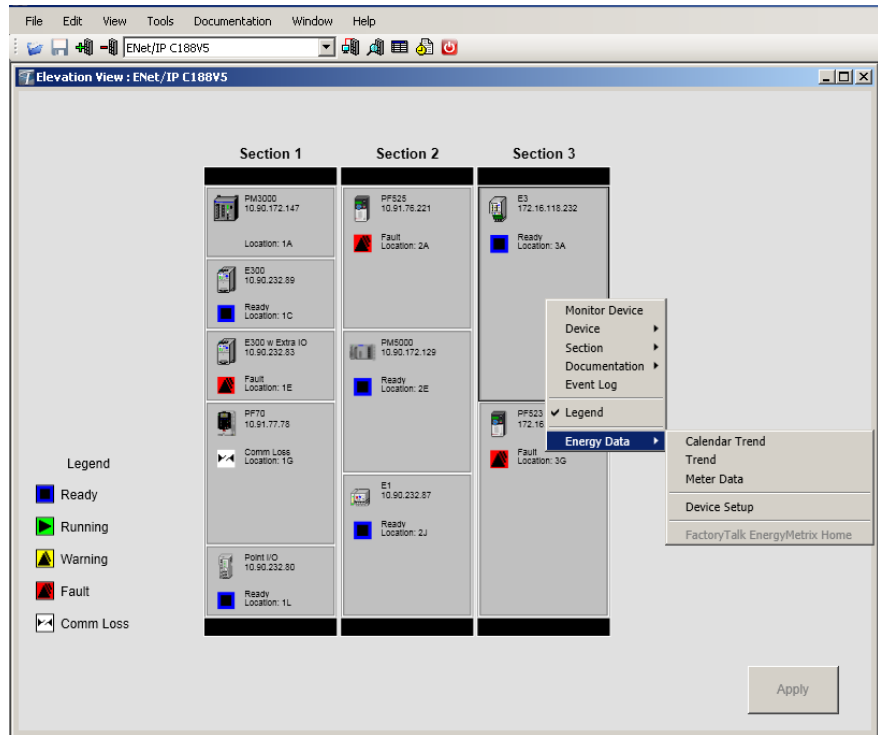

IntelliCENTER Energy Calendar Trend

The Calendar trend view displays how the value of a meter tag or value type varies over an entire month. You can select the meter tag to display from the pull-down menu.


To launch the Calendar Trend view, from the Elevation view, right-click on an applicable device, choose Energy Data>Calendar Trend.

The Calendar Trend view appears and displays a calendar for the current month.



The month and tag being viewed can be changed from the pull-down menu.

Figure 26 - IntelliCENTER Energy - Calendar Trend Example

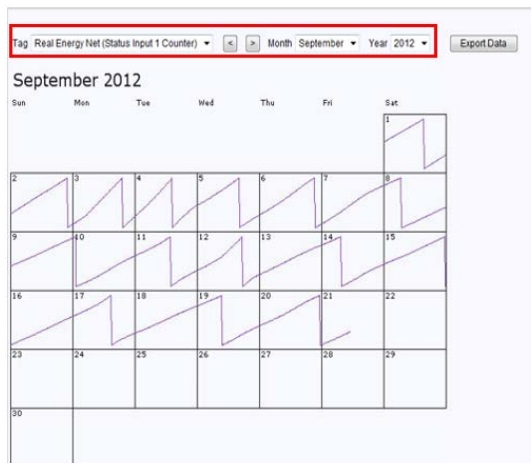


To zoom in to a day, click the day in the calendar. You can overlay days by selecting additional days from the small calendar under the zoomed display.



FactoryTalk EnergyMetrix logs data at 15 minute intervals.

Figure 27 - IntelliCENTER Energy - Calendar Trend Example

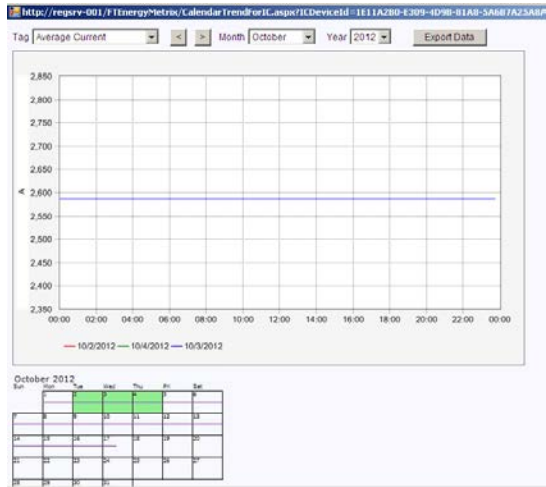

IntelliCENTER Energy Trend

The Energy Trend view lets you select and view tags as their values vary by time. You can select up to five tags to be displayed. Each pen can be individually selected to be displayed as a line chart or bar chart.

To launch the Trend view for the device, from the Elevation view, right-click on an applicable device, choose Energy Data>Trend.


Energy Trend view appears. Click date on calendars and then select the tag from the pull-down menu.

The user time zone is selected by default. You can select another time zone for the trend and the start and end dates from the calendars.




You can enter start and end dates into the date fields and click Go. One day is the minimum trend period. If you select an end date earlier than the start date, the system adjusts the start date, and vice versa.

Figure 28 - Energy Trend Example

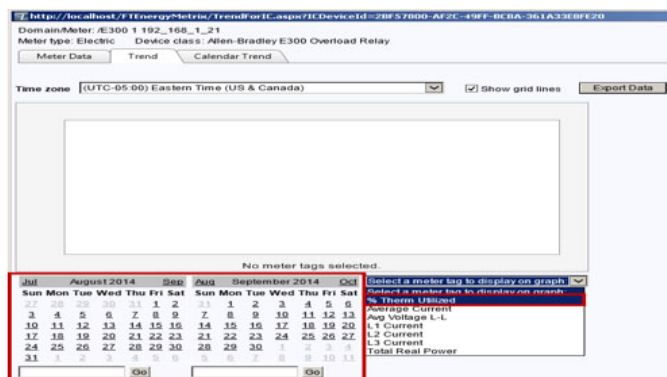

The chart completes with grid lines and legends.

Figure 29 – Energy Trend Example

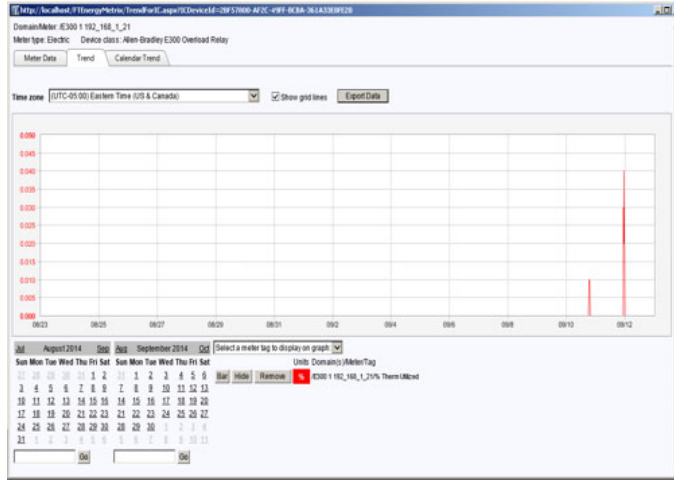

IntelliCENTER Energy Meter Data

The Energy Meter Data view lets you view the logged meter data for the device selected. The display is arranged by log rate. Controls let you select the desired date, scroll up and down through the data, and page backward and forward through the meter data.


To launch the Meter Data view, from the Elevation view, right-click on an applicable device, choose Energy Data>Meter Data.

A dialog box appears, which displays multiple tags for a device in a table format.



The user time zone is selected by default. You can use the Page arrows to scroll through the choices.

Figure 30 – Energy Meter Data

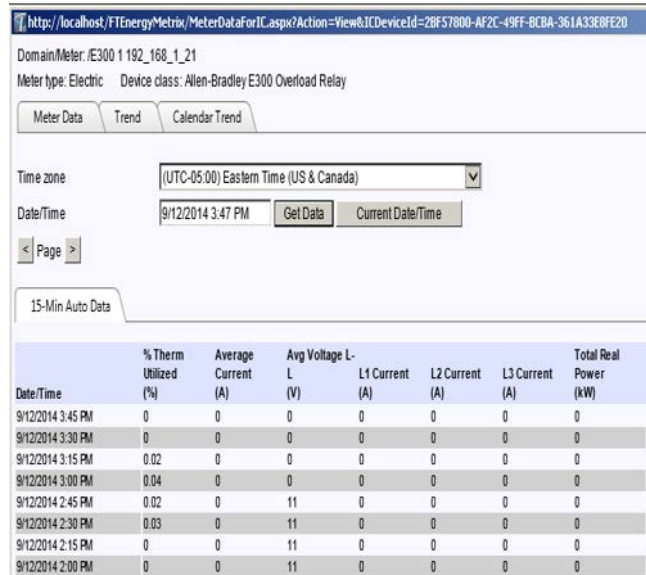

Click **Current Date/Time** to verify that you are reviewing the current data.

IntelliCENTER Energy Device Setup

The Device Setup view lets you modify the devices added into the FactoryTalk EnergyMetrix Server.

To launch the Device Setup view, from the Elevation view, right-click on an applicable device, choose Energy Data>Device Setup. A dialog box appears where you can modify devices.

Figure 31 - Device Setup Example

[Edit](#)

Device Information

[Device Configuration](#)
[Device Viewer](#)

Enable device
 Enable real-time logging
 Enable auto data repopulation
 Enable PQ events logging

Device class Powermonitor 3000 (M8) on EtherNet/IP

Name PM3000 1 10_90_172_85

Notes Inserted by IntelliCENTER Energy

Time zone (UTC-06:00) Central Time (US & Canada)

Time sync Weekly

Device password *****

Device Communications

Communications path AB_ETH-210.90.172.85

Comm. timeout (seconds) 5

Comm. retries 2

Max. messages 10

Enable comm. loss alarm

[Test Connection](#)

IntelliCENTER Software Additional Features

User Accounts and Security


The IntelliCENTER® software features a secure logon screen that appears when the software is started. The administrator (the person who installed the software and/or has complete access to all device settings) can change the password, and create user names and passwords for all other personnel that use the software. This section describes the methods to log in after the lineup opens, change username and passwords, and assign user security.




The default User Name is Administrator and the default Password is password. They are both case sensitive.

Login after Lineup Opens

1. If the login was skipped when you opened IntelliCENTER software, from the File menu, choose LogIn.

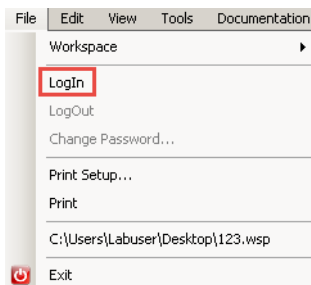

2. Enter the username and password in the Login window.

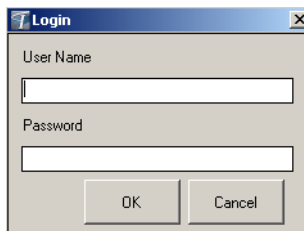


You can also log out without deleting the lineup from workspace. From the File menu, choose LogOut.

Add a New User

Follow these steps to add a new user to the IntelliCENTER software.

1. From the Edit menu, choose Preferences.
2. Click the Security tab.


IMPORTANT The administrator is the only one with access to the security features of the IntelliCENTER software.

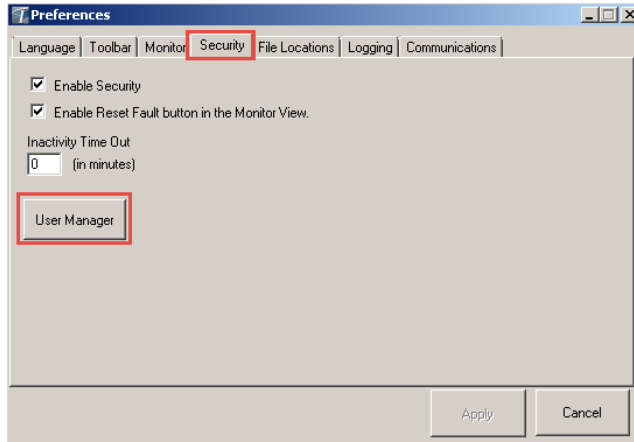

3. In the Security tab, click User Manager.
The User Manager dialog box appears.
4. From the IntelliCENTER software Edit menu, choose Insert.




You can also right-click the file and choose Insert.

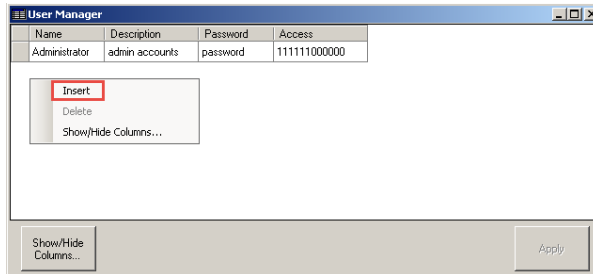


The Add a New User Wizard starts. Follow the directions in the dialog box.

5. To specify the level of security that is needed for the new user, click the Access Rights box.

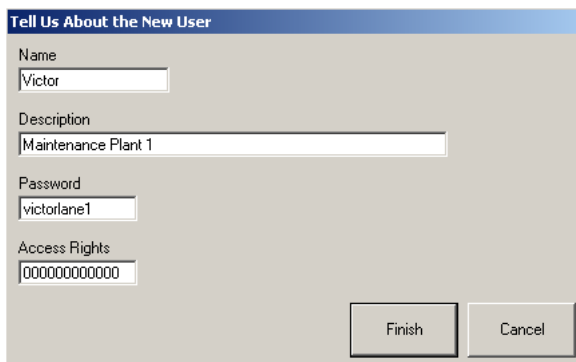


The security options available include the following:

- Add New Items—Ability to add and delete new users, units, sections, events, manuals, CAD diagrams, and user manuals.
- Write to Device—Allows modification to all device parameters, including FLA, and warning levels.
- Modify Device Configuration—Modify unit configuration through the IntelliCENTER software. Modification includes how to change input/output descriptions, location of units within the structure, and nameplate information.

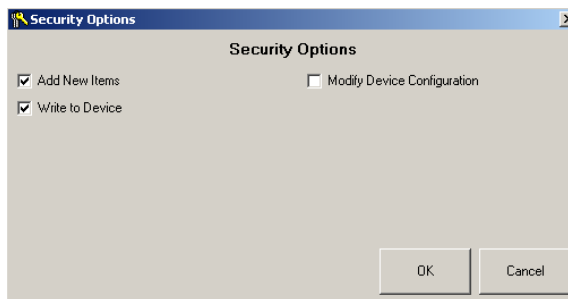

6. After completing the Security Options, click OK and then Finish to end the wizard. The User Manager dialog box appears. The new user is at the bottom of the list.
7. To save the new-user security profile, click Apply.

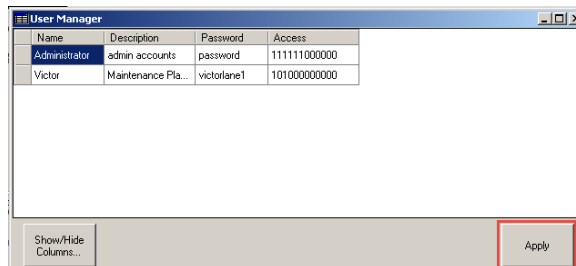

Change Password

To change a password, follow these steps.

1. From the File menu, choose Change Password.

IMPORTANT You must be logged in to the software before you can change passwords.

The Change Password dialog box appears.


2. Enter the current password, the new password, confirm the new password, and click OK.



Export Data

The Export function of the IntelliCENTER software converts the specified data to a .csv file that can be viewed in a spreadsheet application. The information that can be exported can include Device/Unit information, spare parts, or Event data. The exported data can be for an individual unit or for the entire lineup. This function is not applicable to data trend information. To export data, follow these steps.


1. From the Tools menu, choose Export.

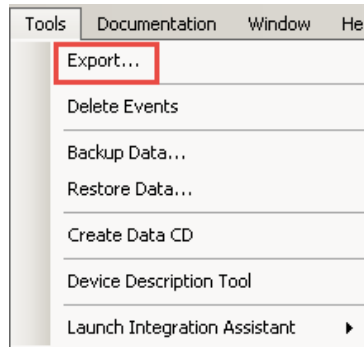


2. In the Export Data dialog box, select the data to be exported and then the lineup containing data.

If you are exporting Device/Unit data, then the entire lineup is exported. If you are using Event data or Spare Parts, then either the entire lineup or individual units can be selected to export.

3. After the selections Click OK.

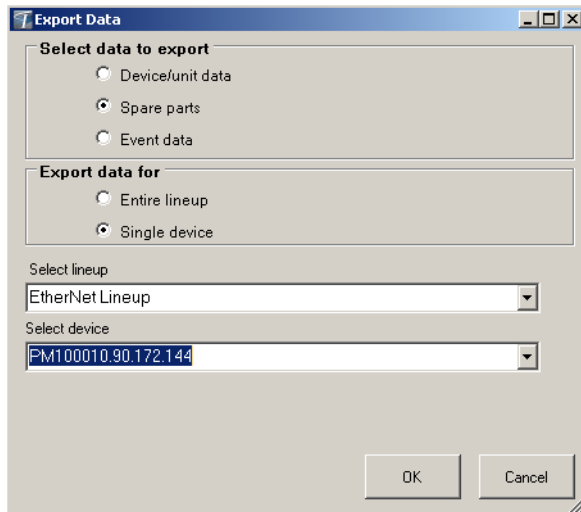


4. Enter the name for the file, select a location in the dialog box, and click Open. The .csv file is saved and can be viewed from the saved location.

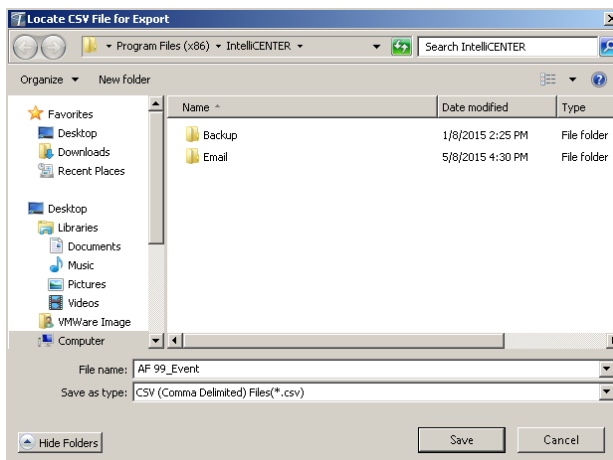

Event Deletion Tool


You can delete the Events of the Lineup from the IntelliCENTER software database by using the Event Deletion tool. To delete an event, follow these steps:

1. From the Tools menu, choose Delete Events.

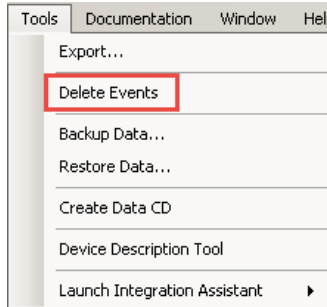

IMPORTANT You must be logged in with Administrator rights to delete events.

2. Select the desired IntelliCENTER MCC lineup and date from the calendar tool in the 'Event Deletion Tool' dialog box and click OK

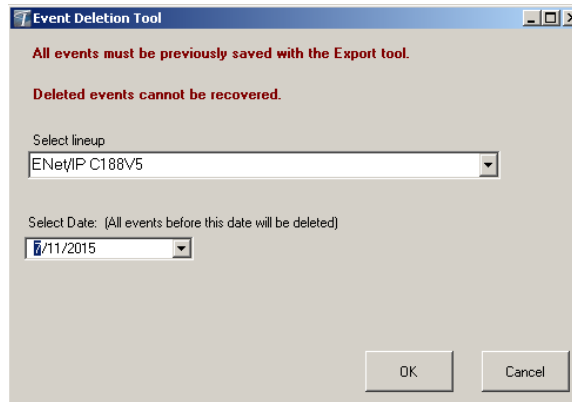

IMPORTANT Export/save all events before you use the Event Delete tool. All events before the date selected are permanently removed from the IntelliCENTER database and cannot be recovered.


Backup Data

The Backup Data option creates a .zip file of the database configuration on the computer. To facilitate this process, a compression tool is included in the installation of the IntelliCENTER software. The .zip file can be transferred to other personal computers and stored for archive purposes.



The Backup Data feature excludes MCC electronic documentation.

1. From the Tools menu, choose Backup Data.

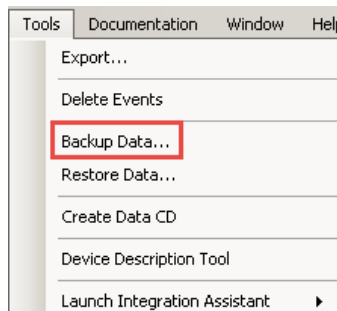


2. In the Backup Data dialog box, select the location for .zip file and click OK.



The Default location for backup is C:\...\[Database location]\Backup.



A status indicator at the bottom of the Backup Data dialog box indicates the backup procedure status.

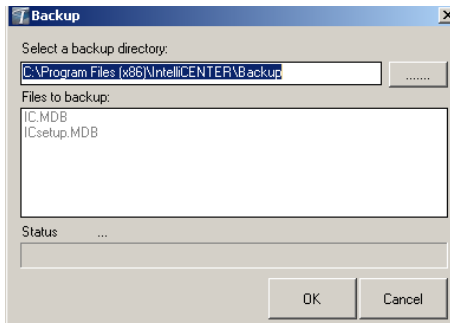

The Backup Data feature saves the database and configuration of the MCC to a subfolder named 'Backup'. The subfolder is located to wherever the databases are stored, typically
 C:\Program Files\ [Database location] \Backup


Restore Data

The Restore Data function allows the data that was backed up with the Backup Data function to be restored to a personal computer or network. If you are transferring the database from one personal computer or network to another, the Restore Data function is used to restore or 'unzip' the .zip file that was created by using the Backup Data function.




The Restore Data feature does not restore electronic documentation of the MCC.

1. From the Tools menu, choose Restore Data.

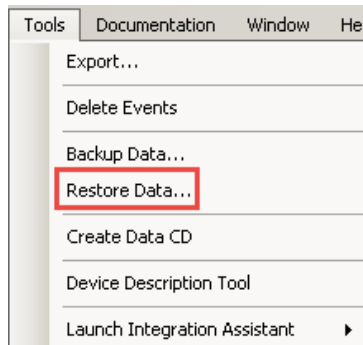

2. In the dialog box, browse to locate the backed up .zip file and click Open.

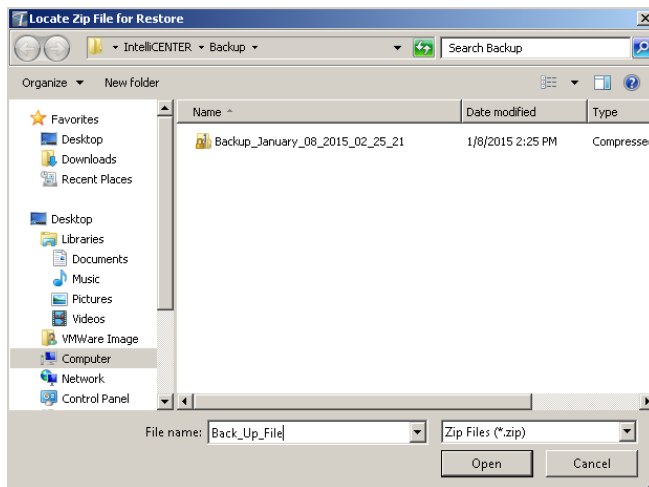


The status indicator at the bottom of the Restore Database dialog box indicates the progress of the restore procedure. This procedure can take a few moments. When the databases are restored, you must exit and restart the IntelliCENTER software to be able to use the restored databases.


Create a Data CD

It is a good practice to create a Data CD when the configuration of the original MCC lineup is changed. By doing so, you can get back to the starting point of the change if anything happens with the database, or if the data on the system becomes corrupt. This feature also includes any updates to the MCC electronic documentation.

1. From the Tools menu, choose Create Data CD.

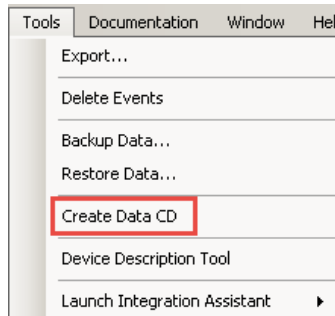

2. In the dialog box, select the lineup, name the data CD, and click OK.

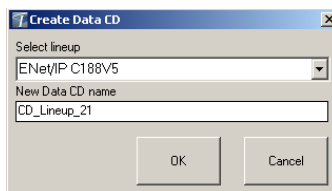


The contents of the Data CD are saved to a subfolder named 'Data CD'. The subfolder is located to wherever the databases are stored, typically C:\Program Files\ [Database location] \Data CD.

3. Insert a blank CD into the computer and copy the contents of the folder to the CD.
The new Data CD can be used to install IntelliCENTER databases and documentation to a new computer or server location.


Device Description Tool

The Device Description tool resets the device descriptions for all devices in the MCC lineup as shown in the Elevation view. To reset the device descriptions, follow these steps.

1. From the Tools menu, choose Device Description Tool.

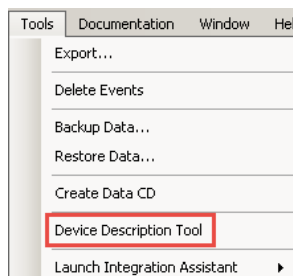

2. Select the desired Nameplate Line information from the pull-down menu in the dialog box and click OK.

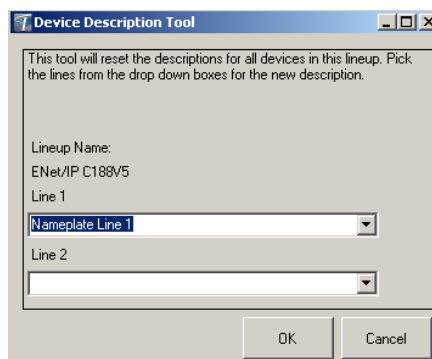




Select two nameplate lines in setting the device description. To view the changes, close the Elevation view for the lineup and reopen.


Language Options

You can select another language to be displayed in the IntelliCENTER software. To change the displayed language, follow these steps.

1. From the Edit menu, choose Preferences.

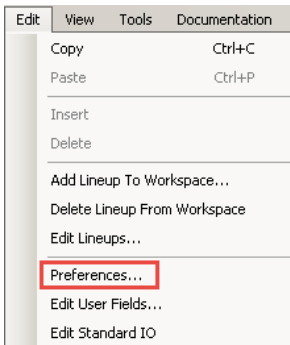

2. From the Preferences dialog box, click the Language tab.
3. Select the desired language from the pull-down menu and click Apply.

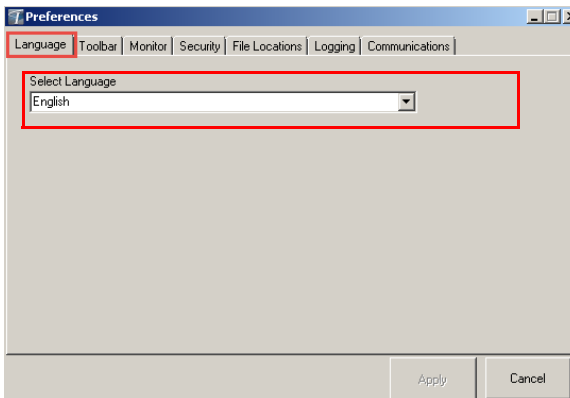

The Parameters in the Monitor view are always displayed in English and cannot be changed.




The device description and location text for each device in the Elevation view is not translated to the new selected language. If desired, the text can be edited manually and saved.

Toolbar


You can configure the IntelliCENTER software to display the Toolbar option description at the bottom of each icon. To display the description, follow these steps.

1. From the Edit Menu, choose Preference.

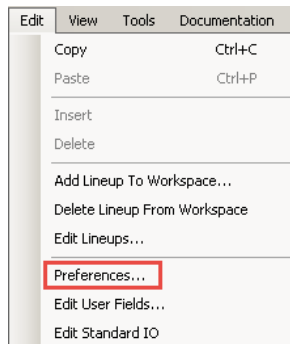

2. From the Preferences dialog box, click the Toolbar tab.

3. Check Toolbar Captions and click Apply.

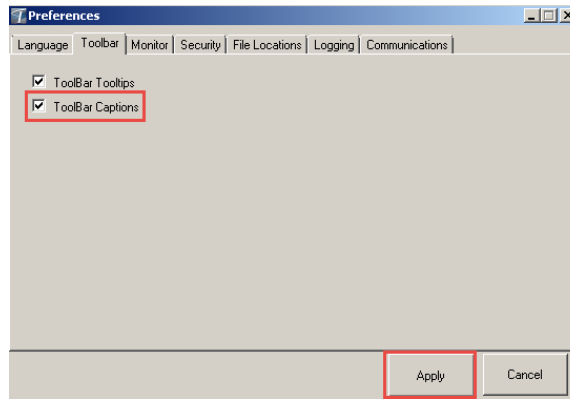


There are now descriptions under the Toolbar icons.




Legend Options

The colors of the status indicators in the Legend that appears in the Elevation view are changeable. To change the colors, follow these steps.

1. From the Edit menu, choose Preferences.

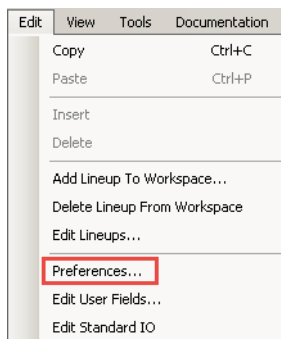

2. From the Preferences dialog box, click the Monitor tab.

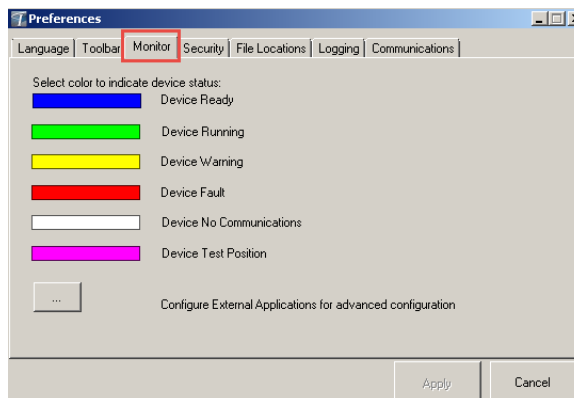


3. Click the color bar, choose another color from the selections that are offered, and click OK.


Configure External Applications for Advanced Configuration

The IntelliCENTER software has functionality to interface with external applications. These applications can be configuration tools for drives, power monitors, or networks. To configure these applications, follow these steps.


1. From the Edit menu, choose Preferences.

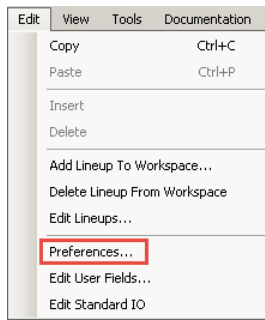

2. From the Preferences dialog box, click the Monitor tab.

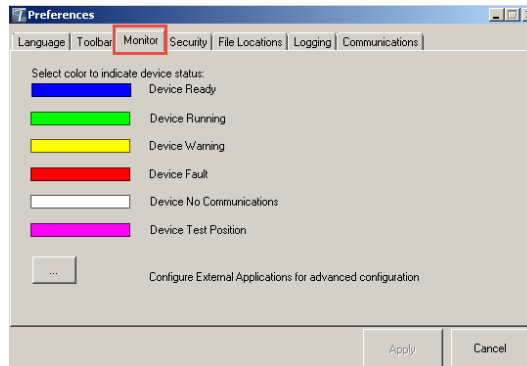

3. Click to configure External Applications. The External Applications dialog box appears.

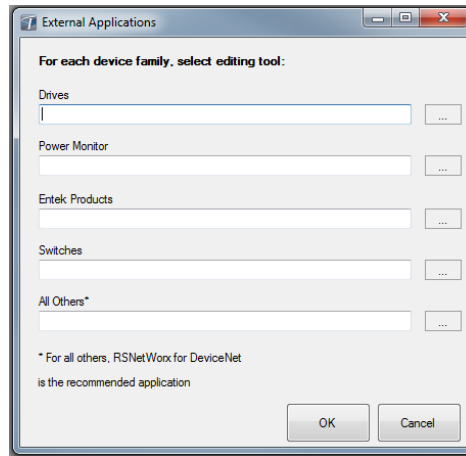


4. Click for required device type.
5. Specify the path to the executable file of the configuration tool and click OK.

Security - Log Out Settings

You can configure the IntelliCENTER software to log out the user automatically after specific time lapse. If you want to force out the log, follow these steps.

1. From the Edit menu, choose Preferences. The Preferences dialog box appears.
2. Click the Security Tab.

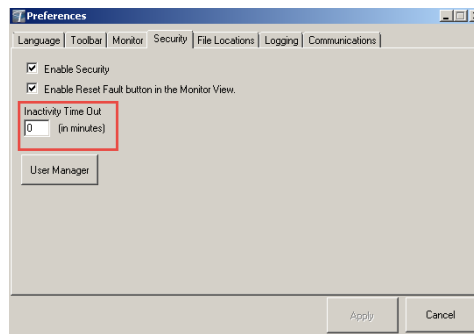

3. Enter the Inactivity Time Out value in the box and click Apply.
The software is set to log out the user automatically after the indicated time has passed.
4. To gain access again, enter the username and password.
5. To disable the feature, set the value zero.

Disable Security Option

The IntelliCENTER software also lets you disable the security feature. By default, the security feature is enabled for IntelliCENTER software.

1. From the Edit menu, choose Preferences>Security.
2. Uncheck Enable Security.




ATTENTION: Without security in place for the user of the IntelliCENTER software, unauthorized changes could be made to settings of the IntelliCENTER components that result in downtime or personal injury.


IntelliCENTER Software File Locations


The IntelliCENTER software database files and documentations are saved in the default file location. The default file location can be changed to any other location on a local computer or network. To change the file location, follow these steps.

1. From the Edit menu, choose Preferences.

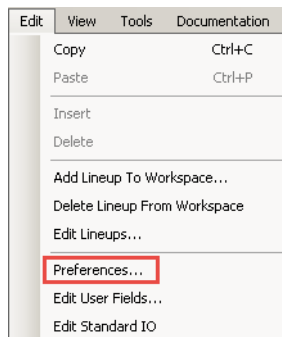

2. From the Preferences dialog box, click the File Locations tab.

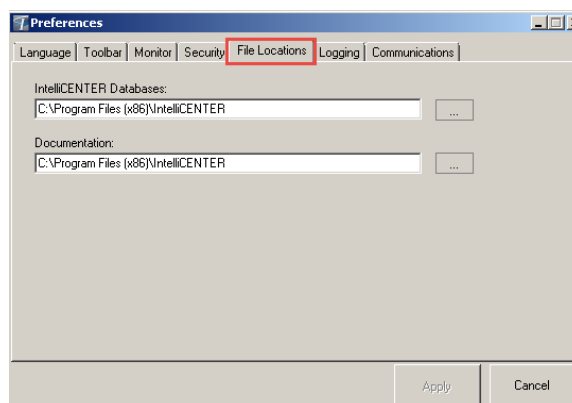

- To change the default IntelliCENTER Database and Documentation location, click  and choose the new location for the files.

IMPORTANT Any customer specified manuals and drawing (not included in the documentation disks) can be at any location in the local computer. They do not have to exist in the Documentation folder.


Event Logging Options

Communication Set Up


See [Advanced Event Log View Options on page 99](#).

The IntelliCENTER software lets you configure the frequency (polling rate) at which data gets collected. The polling rate for different views and configuration of Connection Style can be set within the software. To set up the polling rate, follow these steps.

- From Edit menu, choose Preferences

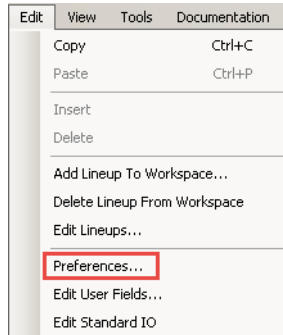

- From the Preferences dialog box, click the Communications tab.

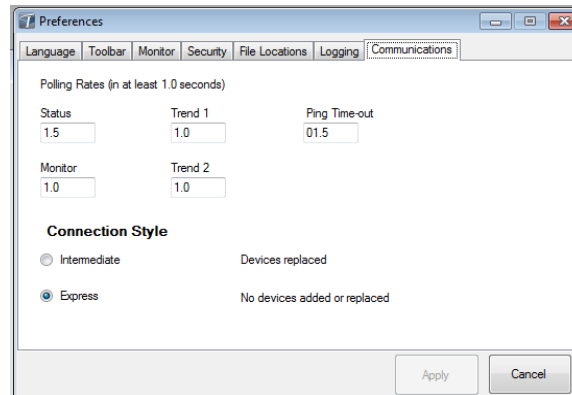

The IntelliCENTER software can be configured to control how fast it requests data for each device by changing the values in respective fields. Four different Polling rates can be configured (Status, Monitor, Trend 1 and Trend 2, and Ping Time-out).

- Status Polling rate is used for the IntelliCENTER Elevation view
- Monitor Polling rate is for the Data Parameters and Analog meters in the Monitor view
- Trend 1 and Trend 2 Polling rate is for the Data Trends in the Monitor view
- Ping Time-out rate is the time IntelliCENTER software waits to determine if an EtherNet/IP network device is offline.



A device status of 'No Communications', even when connected to the network and browsed in RSLinx® software, could be due to slow network speed. The Ping Time-out value can be modified to address the issue.

- Change the polling rate in respective fields and click Apply.

IMPORTANT The polling rate defaults to 1.0 seconds. The minimum polling rate is 1.0 second and the maximum polling rate is 9.9 seconds. The rate can be set anywhere between those values to the nearest tenth of a second.

4. Set the Connection Style.

- Intermediate: This method browses only known nodes and confirms configuration of equipment that is connected to those devices on the network. If the Intermediate connection finds any differences between the IntelliCENTER database and the device configuration, the software updates the database.
- Express Style: This method relies on the IntelliCENTER database (the configuration before the last shut-down of the software) for configuration.



If the IntelliCENTER Database is current, no new devices that are added or configured and all changes are saved from last configuration then Express Connection Style is the quickest method.

Device EDS Files

Electronic data sheet (EDS) files are simple text files that are used by network configuration tools, such as RSNetWorx™ software, and by IntelliCENTER software to help identify products and easily commission them on a network. EDS files describe the device type of a product, product revision, and configurable parameters on a network.

EDS files must be registered for each unique device in the MCC. All required EDS files are installed automatically and registered when the IntelliCENTER software data disk is installed. However, there can be an instance where an EDS file is installed and registered manually. To install the EDS file manually, follow the steps under [Manually Install EDS Files](#).

Manually Install EDS Files

The EDS files are installed with a program from Rockwell Software®. To install the EDS files, follow these steps.

1. From the Start menu, choose Programs>Rockwell Software>RSLinx>Tools>EDS Hardware Installation Tool.
2. Click Add.
3. Select Register an EDS File and click Next.
4. Choose Register a Directory of EDS Files.

The IntelliCENTER software data disk that is supplied with your IntelliCENTER MCC contains a directory (<CDROM>:\<Order>\<Item>\EDS) of all EDS files necessary for the devices in your IntelliCENTER MCC.

5. Browse to the EDS directory on the data CD and click Next.

The Installer displays the test results.

6. To continue, click Next.

The Installer lets you change the graphic image for each device.

7. To continue, click Next.

The Installer displays the final task summary.

8. To continue, click Next.
9. Click Finish when completed.

EDS Files for Other Devices

EDS files can also be obtained at <http://www.rockwellautomation.com/resources/eds/>.


Setting Device IP Address

The IntelliCENTER Software lets you change the IP Address for devices in the MCC lineup. The device IP address can be changed from the Spreadsheet view, web page, and New Monitor view.

Change the Device IP Address by Using the Spreadsheet View


See [Table 7 Device IP Address on page 112](#) for the device list. To change the IP address for the devices by using the Spreadsheet view, follow these steps.

1. Connect to the lineup that contains the device in IntelliCENTER software in offline mode.
You must be physically connected to the device.
2. From the View menu, choose Spreadsheet view.
3. From the Spreadsheet view, right-click on the device and choose Change IP Settings.

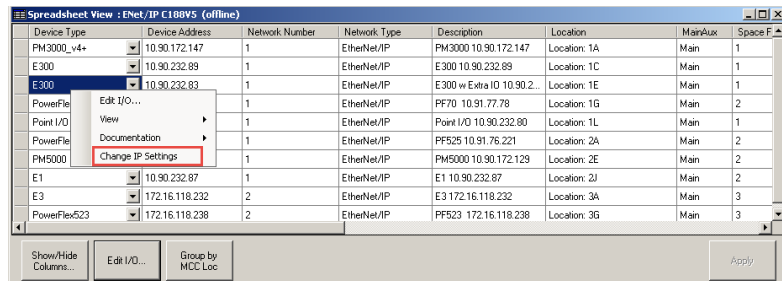

Device Type	Device Address	Network Number	Network Type	Description	Location	Main/Aux	Space F
PM3000_v4+	10.90.172.147	1	EtherNet/IP	PM3000 10.90.172.147	Location: 1A	Main	1
E300	10.90.232.89	1	EtherNet/IP	E300 10.90.232.89	Location: 1C	Main	1
E300	10.90.232.83	1	EtherNet/IP	E300 w Extra I/O 10.90.2...	Location: 1E	Main	1
PowerFlex		1	EtherNet/IP	PF70 10.91.77.78	Location: 1G	Main	2
Point I/O		1	EtherNet/IP	Point I/O 10.90.232.80	Location: 1L	Main	1
PowerFlex		1	EtherNet/IP	PF525 10.91.76.221	Location: 2A	Main	2
PM5000		1	EtherNet/IP	PM5000 10.90.172.129	Location: 2E	Main	2
E1	10.90.232.87	1	EtherNet/IP	E1 10.90.232.87	Location: 2J	Main	2
E3	172.16.118.232	2	EtherNet/IP	E3 172.16.118.232	Location: 3A	Main	3
PowerFlex523	172.16.118.238	2	EtherNet/IP	PF523 172.16.118.238	Location: 3G	Main	3

The IP Setting Configuration dialog box appears.

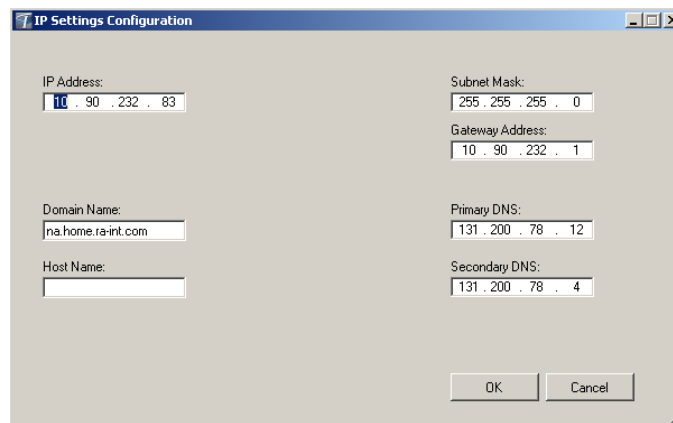

IP Settings Configuration

IP Address: 10 . 90 . 232 . 83

Subnet Mask: 255 . 255 . 255 . 0

Gateway Address: 10 . 90 . 232 . 1

Domain Name: na.home.ra-int.com

Primary DNS: 131 . 200 . 78 . 12

Host Name:

Secondary DNS: 131 . 200 . 78 . 4

OK Cancel


4. Enter the new IP address settings and click OK.

IMPORTANT Cycle power for the device for the changes to take effect.

5. After changing the IP address, update the device description.

The description can also be changed in the Elevation view or the Spreadsheet view:

- From the Elevation view, double-click the device, change the description, and click Apply.
- From the View menu, choose Spreadsheet, then change the description and click Apply

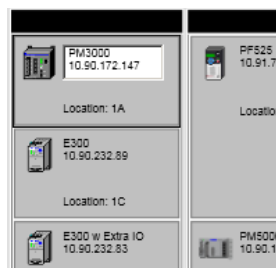

Validate the IP Address

After changing the IP address and description, follow these steps to validate the IP address for the device in the RSLinx® Classic software.



It is important to change the IP address in RSLinx Classic software for successful communication between IntelliCENTER Software and the device.

1. Close IntelliCENTER software.
2. From the Start menu, choose All Programs>Rockwell Software>RSLinx>RSLinx Classic.



If RSLinx Classic software does not launch, see the [RSLinx Classic Launch Control Panel on page 107](#).

3. From the RSLinx Classic software main screen, choose Communications>Configure Drivers
4. From the Configured Drivers list, choose the driver that contains the device whose IP address that was changed and double-click.
The 'Driver Station Mapping' window appears.
5. Double-click the IP address that you want changed, change the IP address, and click OK.
6. Click Close from the Configure Drivers dialog box.
7. From the RSLinx Classic software main screen, choose Communications>RSWho and rebrowse the network that contains the device whose IP address was changed.
8. Close the RSLinx Classic software and start the IntelliCENTER software.



If IntelliCENTER Software does not start, see the [RSLinx Classic Launch Control Panel on page 107](#).

Change the Device IP Address by Using the Device Web Page

IMPORTANT Stratix® Ethernet switch parameter configuration is limited to the switch web page or via the switch AOP in Logix. IntelliCENTER software cannot be used to change Stratix switch parameters.

You can change the IP address settings for the devices from the device web page. See [Table 7 Device IP Address on page 112](#) for device list. To change the IP address for the devices by using the device web page, follow these steps.

1. Connect to the lineup that contains the device in IntelliCENTER software in offline mode.
However, you must be physically connected to the device.
2. Right-click on the device in Elevation view and select View web page.
The device web page view appears.



See the device documentation for further details on how to change the IP address from the device web page.

3. Navigate to the device IP setting on the web page and change the IP address settings.
4. Change the description.
 - In the Elevation view, double-click the device, change the description, and Click Apply.
 - In the Spreadsheet view, choose View, then Spreadsheet, change the description, and click Apply.

IMPORTANT You must change the IP address in the Spreadsheet view as well. The IntelliCENTER software does not use the IP address that exists within the Description field. See [Change the Device IP Address by Using the Spreadsheet View on page 78](#) for further details.

5. Validate the IP address for the device in the RSLinx Classic software.
See [Validate the IP Address on page 79](#).

Change the Device IP Address by Using Monitor View for Variable Frequency Drives and Soft Starters

You can change the IP address setting for the devices from the Monitor view. See [Table 7 Device IP Address on page 112](#) for device list. To change the IP address for the devices by using the Monitor view, follow these steps.

1. Connect to the lineup that contains the device in IntelliCENTER software in online mode.
2. Right-click on the device in Elevation view and choose Monitor Device.

The Monitor view launches. To change the IP address from the parameters, see the individual device documentation.



See the device documentation for further details on how to change the IP address.


3. Change the description.
 - In the Elevation view, double-click the device, change the description, and Click Apply.
 - In the Spreadsheet view, choose View, then Spreadsheet, change the description, and click Apply.


IMPORTANT You must change the IP address in the Spreadsheet view as well. The IntelliCENTER software does not use the IP address that exists within the Description field. See [Change the Device IP Address by Using the Spreadsheet View on page 78](#) for further details.

4. Validate the IP address for the device in the RSLinx Classic software.
See [Validate the IP Address on page 79](#).


Edit User Field

In most of the views (Spreadsheet, Event Log, Spare Parts, Drawings, and Manuals) there are four user-defined fields. These fields can be used to define user-specific information such as, your own part numbers and labels. The fields are static and are only for documentation purposes.


1. To view user fields, open any view and click  or from the tool bar, click the View tab and choose Show/Hide Columns.
The Show/Hide Column dialog box appears.
2. Check the User fields and click OK.
The default headings for the User Fields are User 1, User 2, User 3, and User 4.

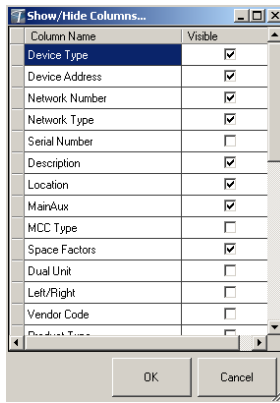

3. To edit the User Fields, open any of these views (lineup, spreadsheet, Event Log, spare parts, drawings, and manuals) and right-click the User Field column.
4. Choose Edit User Fields.

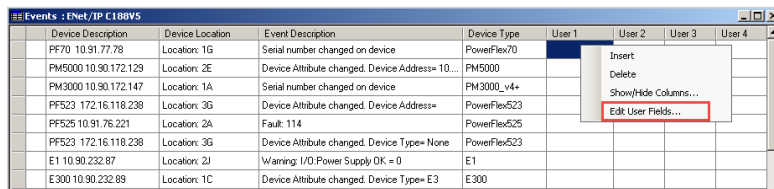

5. Click in the appropriate field, change the information in the field, and click OK.

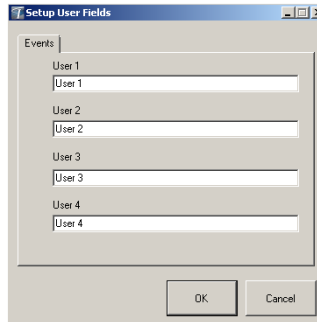

Notes:

Using IntelliCENTER Software - Advanced Features


Advanced Workspace Options

These sections describe the advanced workspace options.

Edit the Lineup

The lineup information in the IntelliCENTER® software like name, description, order number, and item number are editable. To make edits in the lineup information, follow these steps.

1. From the Edit menu, choose Edit Lineups.

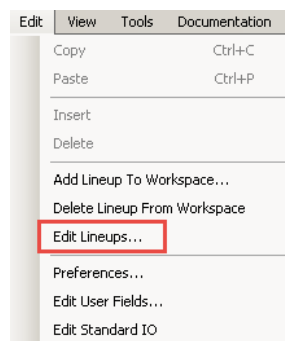

2. Change the desired information in the Edit Lineups dialog box and click Apply.

Name	Description	Order Number	Item Number	Namepla...	User 1	User 2
EtherNet Lineup	Lineup to test devices on EtherNet/IP	ABCD11	0005	n11	u1	u2
IIA Master	This lineup is a test bed for IIA	6500586849	00010			
Kirk Mequon Lineup	Mock MCC lineup for Kirk to do FTEM testing	FTEM01	0001			
Pumping Station MCC 1-1...	Building 120, Area 1 Pumping MCC	abc123	0001			
Pumping Station MCC 1-1...	Building 120, Area 1 Pumping MCC	abc123	0001			
IntelliCENTER Master	Master Database	ABC123	0001			
Mequon PF750 and 700S...	Thanks to Kevin Relfich	KEVR37	0001			
ENet/IP C188V5	Lineup to test devices on EtherNet/IP	6500549849	000100	n11	u1	u2

Advanced Elevation View Options

These sections describe the advanced Elevation view options.

Edit Position of Device or Section

The IntelliCENTER software lets you change the position of the device or section within the lineup. In the Elevation view, you can modify the location of devices or sections within the same or different lineups.

Edit Position of Device or Section Within the Lineup

To change the position for the device or section, follow these steps.

1. In the Elevation view, click the device or section you want to select and hold down the left mouse button.
2. Drag the device or section to the desired location and release the left mouse button.



If the device is moved to another section, then change the device description in the Elevation view or Spreadsheet view.

Edit Position of Device or Section Across Different Lineups

To change the position for the device or section, follow these steps.

1. In the Elevation view, click the device or section you want to select and hold down the left mouse button.
2. Drag the device or section to the desired location in another lineup and release the left mouse button.

The My User Control dialog box appears.

3. Select the Network Number, Node Number, and click OK.



If the device is moved to another section, then change the device description in the Elevation view and Spreadsheet view.

Duplicate Device or Section

The IntelliCENTER software lets you duplicate a device or section within the lineup.

1. Choose the device in the lineup.
2. From the Edit menu, choose Copy.
3. Click the desired location on the Elevation view.
4. From the Edit menu, choose Paste.

IMPORTANT Change the description and IP address for the duplicated device by using the Elevation view and Spreadsheet view if necessary. See [Setting Device IP Address on page 78](#) for details on how to change IP address.

Add a New or Auxiliary Device

The IntelliCENTER software lets you insert a primary networked or auxiliary device in the existing lineup.


Add a New Unit

To add a unit, follow these steps.




Unit-mounted Stratix® switches are added to the Elevation view by using the same procedure as adding a device to a unit.

1. On the Elevation view, right-click on the unit you want to insert a new device/unit. The newly added unit appears above the unit selected.
2. Choose Device, then Insert.

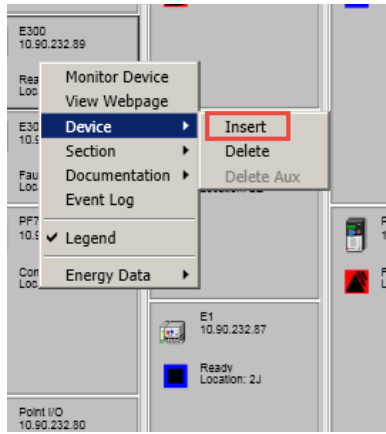


The 'Add a Unit' dialog box appears.

3. Click 'Add a new unit', select the MCC type for the unit from the pull-down menu, and click Next.

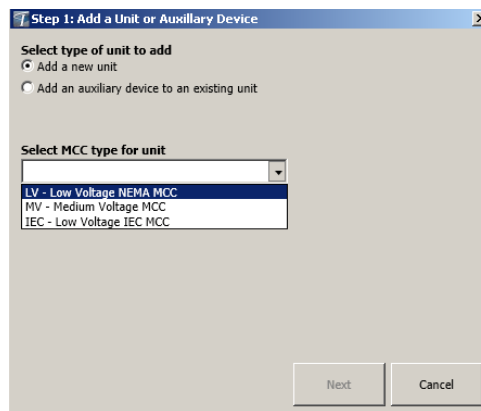


The 'What network' dialog box appears.

4. Click the Network type, then click Next.

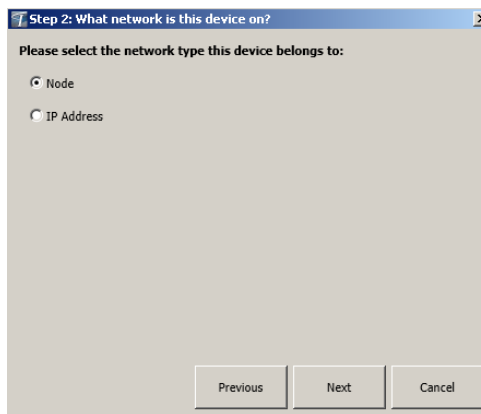

The device information dialog box appears.

5. Enter the required device information and click Next.

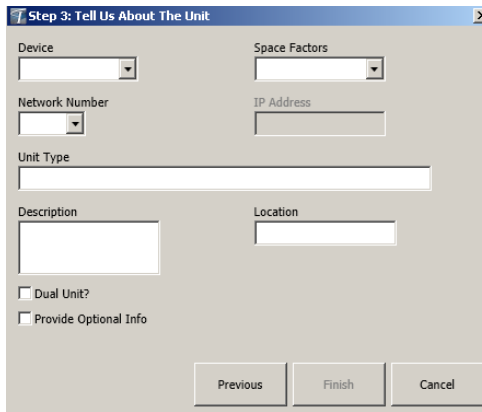


6. Configure the number of inputs and outputs in the dialog box and click OK.

IMPORTANT After adding the device, the I/O configuration, mapping, and network path dialog boxes appear. The dialog boxes appear for certain devices only.


Add an Auxiliary Device to an Existing Unit

To add an auxiliary device to an existing unit, follow these steps.


1. On the Elevation view, right-click on the section where you want to add the device.
2. Choose Device, then Insert.

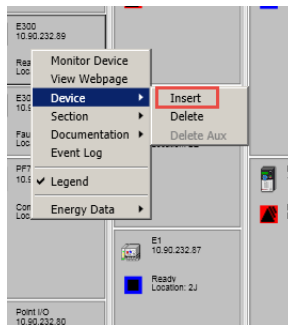

3. Click 'Add an auxiliary device to an existing unit' and click Next.

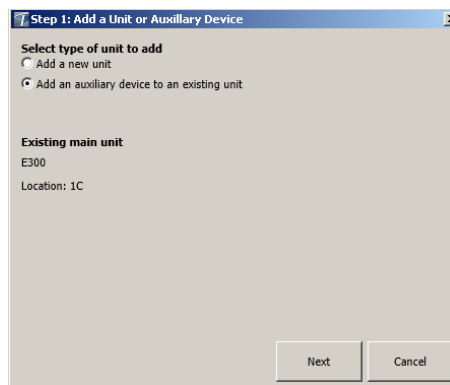

4. Enter the required device information and click Next.

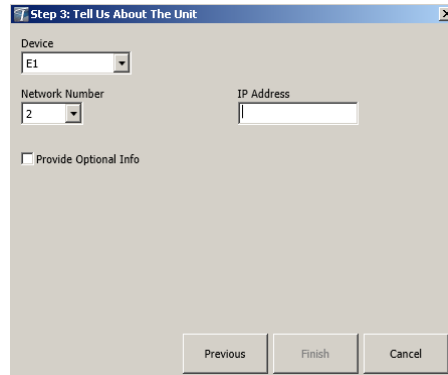


5. Enter the required device information and click Finish.
The Auxiliary device is added to the selected device.

IMPORTANT After adding an auxiliary device, the I/O configuration, mapping, and network path dialog boxes appear. The dialog boxes appear for certain devices only.


Add a Device to the Horizontal Wireway

In IntelliCENTER software, the horizontal wireway is the space at the top and bottom of a section that is shown with black bars. This space represents the physical location within the MCC that is left empty and through which motor wires are pulled through the MCC structure.

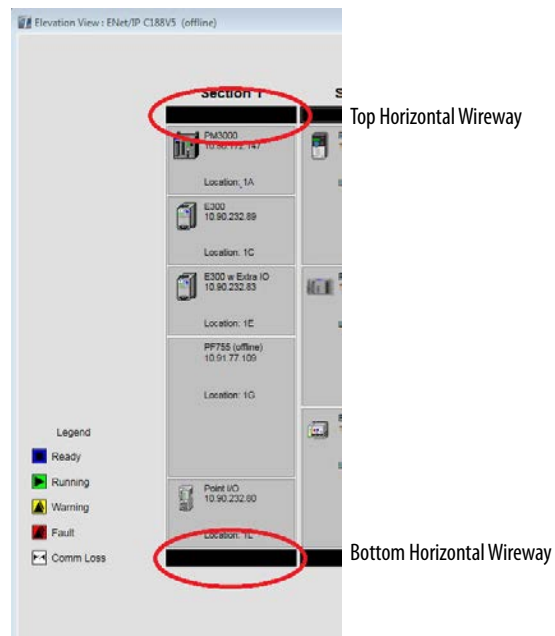


In IntelliCENTER software version 6.00.01 and later, you can add and remove Stratix Ethernet switches to the horizontal wireways. When you add a device to the IntelliCENTER software, there is an option that lets you add a device to the horizontal wireway instead of to a unit. To insert a device to the horizontal wireway, follow these steps.

1. On the Elevation view for an IntelliCENTER EtherNet/IP MCC, right-click on the horizontal wireway where you want to add the device.
2. Choose Device, then Insert.

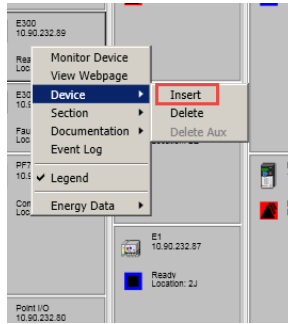


3. Click 'Add a new device to wireway' and click Next.

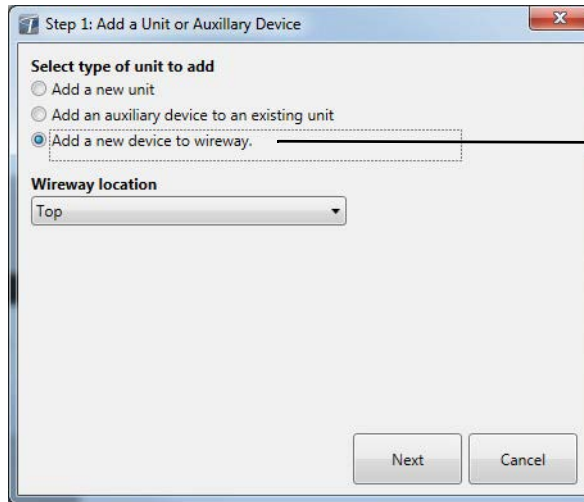

Option for Wireway Device

If you are trying to add a secondary/auxiliary device to the top or bottom wireway, the dialog box shows the existing unit. The second option explains that this device is an auxiliary device in the wireway (that there is already another device that exists in the wireway).

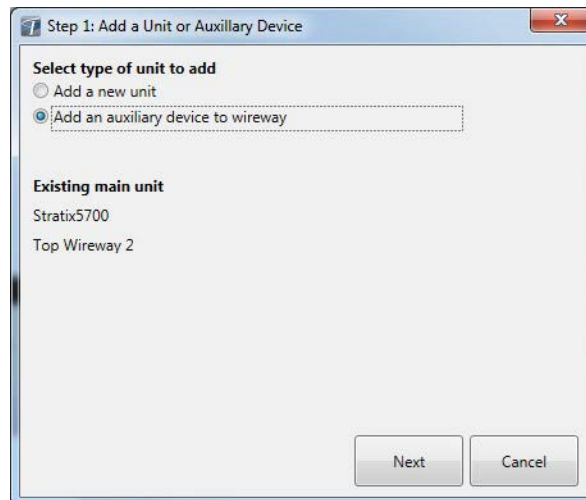

Drag and Drop Wireway Devices


In IntelliCENTER software version 6.00.01 or later, the devices in a top or bottom wireway can be dragged and dropped to another wireway location. For example, a device can be moved from the top wireway of Section 2 to the bottom wireway of Section 1.

There is a location field that is associated with the device in the wireway. The field is typically of the format:

{Top/Bottom} Wireway {Section Number}

However, the location field can also have other (customized) text. When a device has something other than the default in the Location field and it is dragged to a new location, you are prompted to update the location to match the new location.

Figure 32 - Change Location Field

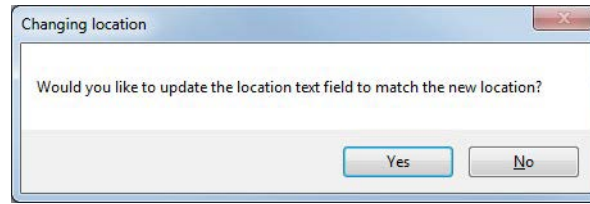

To update the Location field, follow these steps.


1. Open up a lineup with at least one device in wireway.
2. Go into the Spreadsheet view and clear the Location field for the wireway unit.
3. Save the Spreadsheet.
4. Reopen the Elevation view.
5. Drag and drop the device to a new location.

IMPORTANT You cannot drag a device in a wireway to another wireway where a device exists.


Delete a Device or Auxiliary Device

You can delete a device or auxiliary device from the lineup. To delete a device, follow these steps.

1. Right-click on the device from the Elevation view and choose Delete.

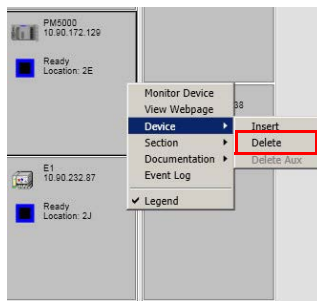

2. To delete an Auxiliary device from an existing unit, right-click on the unit from the Elevation view and choose Delete Aux.

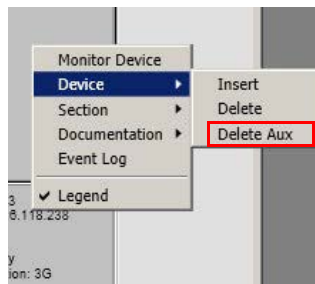


Add or Remove a Section

The IntelliCENTER software lets you add or delete sections within the lineup. To add or remove a section in the lineup, follow these steps.

1. Right-click on the Elevation view, choose Section, and Insert.

- Right-click on the section in Elevation view, choose Section, and Delete.

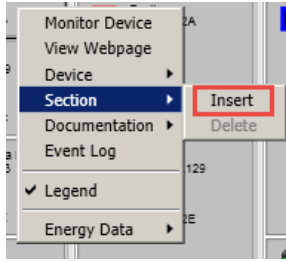

If you desire to add new or auxiliary devices in the new section, see the [Add a New or Auxiliary Device on page 84](#) for further details.


Advanced Monitor View for Motor Protection Devices, Power Monitors, I/O Devices, and Ethernet Network Switches

These sections describe the advanced Monitor view for motor protection devices, power monitors, and I/O devices options.

Changing Data Trending Parameters


You can change the default parameters to any parameter available on the device EDS file. To change the default Data Trending parameters, follow these steps.

- Right-click on the device in the Elevation view of the lineup and choose Monitor Device. The Monitor view for the device appears. See the [Monitor View Compatibility Table on page III](#) for a list of the devices that support Monitor view.
- Right-click on the trend graph and choose Change Parameters Monitored.

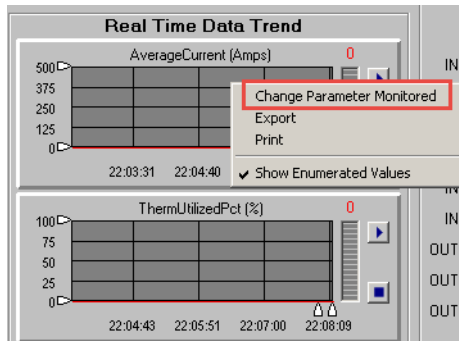

The available parameters are displayed in the pull-down menu that appears.

- Choose the parameter and click Apply.

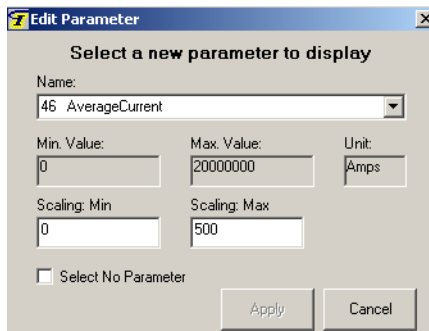

The parameters for the component are available in the Data Trend graphs. However, not all parameters lend themselves to display in the Data Trend graphs.




For a list of device parameters, refer to the device EDS file. For EDS file, see [Device EDS Files on page 77](#).

You can also change the X and Y-axis of the trend graphs.

- To change either axis, use the mouse to drag the top (Y-axis) or right (X-axis) axis arrow and move it toward the opposite end.

The axis automatically rescales itself based on the final arrow position.

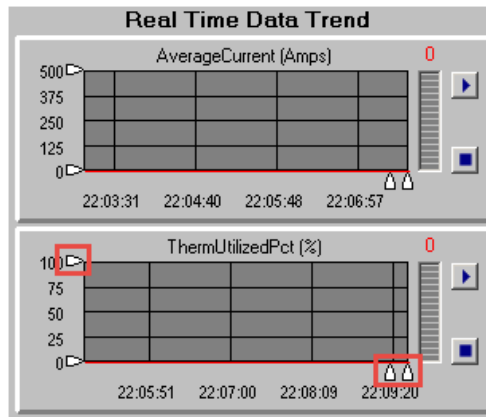

- To change just the Y-axis, right-click on the graph and choose Change Parameter Monitored.

The Edit Parameter dialog box appears.

- Enter the scaling information and click Apply.


Exporting Data Trend

The Data Trend information can be exported to a .csv file for viewing in a spreadsheet application.




Before exporting the data, allow the data to trend over some time.

- Right-click on the device in the Elevation view of the lineup and click Monitor Device. The Monitor view for the device appears. See the [Monitor View Compatibility Table on page 111](#) for a list of the devices that support Monitor view.
- Right-click on the Trend graph and click Export.

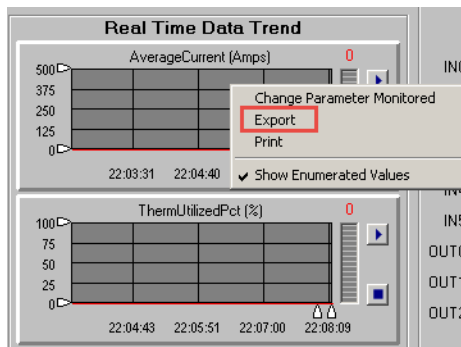

3. Enter a file name, choose a location, set the file type as a .csv file, then click Open.

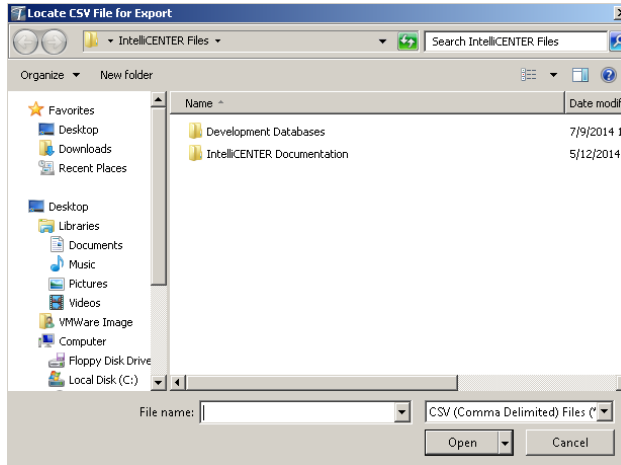

The saved .csv file can be accessed from saved location. When exiting the .csv file you are prompted to save the file in another format, usually the format of the spreadsheet application.


Change I/O

For further details on how to change the I/O, refer to [Edit Standard I/O Settings on page 98](#).


Change Parameters

You can change the displayed default parameters to any available parameter on the device in the legacy Monitor view.

1. Right-click on the device in the Elevation view of the lineup and click Monitor Device. The Monitor view for the device appears. See the [Monitor View Compatibility Table on page III](#) for a list of the devices that support Monitor view.
2. To view different parameters in the Monitor view, right-click on the parameter to change and choose 'Change Parameter Monitored'.

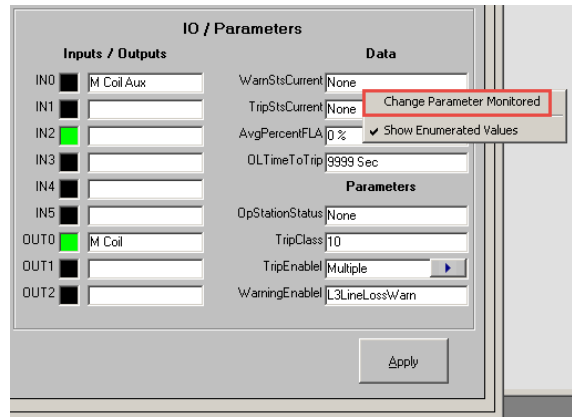

3. Select the new parameter from the pull-down menu and click Apply to save the changes.

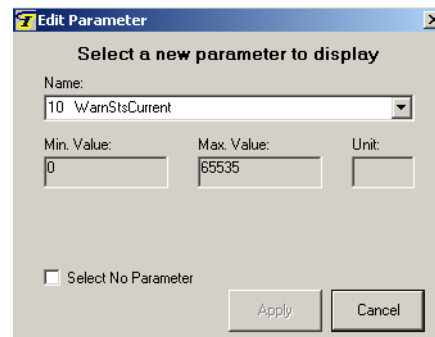

IMPORTANT After changing the parameters, you see the selected parameters. The changed parameter settings are not reset if you restart the IntelliCENTER software.


Change the Values of the Parameters

You can change the default values of the parameters. The new value that is entered must be within the minimum and maximum value that is displayed at the bottom of the Edit Parameters dialog box.

IMPORTANT If you change parameters in the Parameter view, it does not change the parameters in RSLogix™ 5000 or Studio 5000® environments.

IMPORTANT Stratix® Ethernet switch parameter configuration is limited to the switch web page or via the switch AOP in Logix. IntelliCENTER software cannot be used to change Stratix switch parameters.


1. Right-click on the device in the Elevation view of the lineup and choose Monitor Device. The Monitor view for the device appears. See the [Monitor View Compatibility Table on page 111](#) for a list of the devices that support Monitor view.
2. To change the value of monitored parameters in the Monitor view, click the parameter to change. The Edit Parameter dialog box appears.
3. Enter the desired values and click Apply.

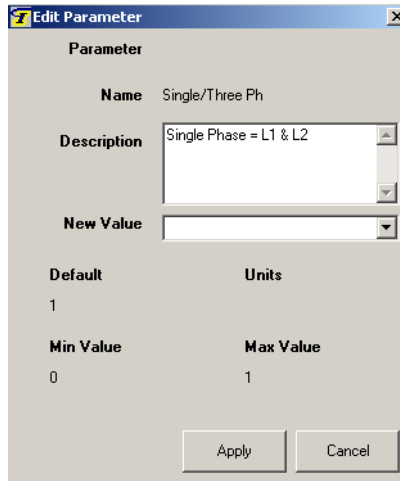


Change Real-time Analog Meter Data/Parameters

You can change the displayed default parameters to any available parameter on the device in the legacy Monitor view. You can also specify the analog meter range or scale.

1. Right-click on the device in the Elevation view of the lineup and choose Monitor Device. The Monitor view for the device appears. See the [Monitor View Compatibility Table on page 111](#) for a list of the devices that support Monitor view.
2. To view different parameters in the Monitor view, right-click on the analog meter to change and choose Change Parameter Monitored.

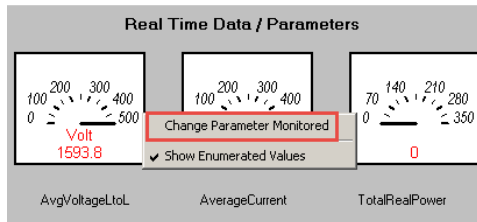

3. Select new parameter from the pull-down menu and click Apply.

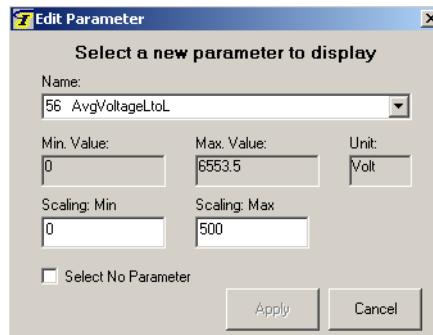


View Ethernet Network Port Status



Ethernet Network Port Status is only available via the Stratix 5700 and 5200 Monitor view, which is available with IntelliCENTER software version 6.00.01 or later.

The port icons in the 'Ports' section of the Monitor view can change color depending on the status of the port. Right-click on a port and choose to view 'Port Status Legend'. An explanation of the different colors and states appears.

Figure 33 - Port Status Legend

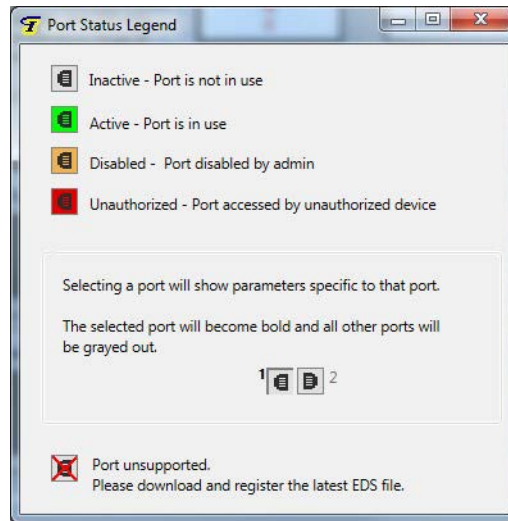




Advanced Monitor View for Variable Frequency Drives and Soft Starters Options

These sections describe the advanced Monitor view for variable frequency drives and soft starters options.

Change Process Display

You can change the parameters that are displayed in the process display.

1. Right-click on the device in the Elevation view of the lineup and choose Monitor Device. The Monitor view for the device appears. See the [Monitor View Compatibility Table on page 111](#) for list of devices that support new Monitor view.
2. Click  in the Device Configuration toolbar. The Process Display dialog box appears.
3. Click  on the lower right corner of the process that is displayed. The Process edit window appears.

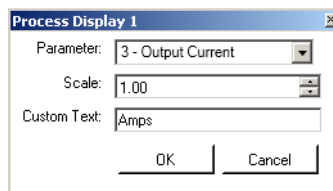


4. From the Parameter pull-down menu, select the desired process to be displayed.
5. Select the Scale value for the parameter minimum, maximum, and actual value.
6. In the Custom Text field, enter up to eight characters for the process display.
7. Click OK.

Add a Peripheral Device

To add a peripheral device, follow these steps.

IMPORTANT You must be offline to see the add+ tab.


1. Click the Add Peripheral tab  from the bottom tab. The Peripheral device-selection dialog box appears.



2. Select the device.
3. Select the Port to which the peripheral device is connected and click Add. The selected peripheral device appears in the bottom tab.

Change Parameters and Values

The IntelliCENTER software lets you change the parameter of the devices from within the software. To change the parameter value, follow these steps.

1. From the Elevation view, right-click on the device and choose Monitor view. The Monitor view for the device appears. See the [Monitor View Compatibility Table on page III](#) for a list of the devices that support Monitor view.
2. Click  from the new Monitor view. The parameter window opens.
3. Locate the parameter, click the Value tab, and changes the parameter. You can change the value, unit, enable or disable parameter, and link the parameter.


IMPORTANT If you change parameters in the Parameter view, it does not change the parameters in RSLogix 5000 or Studio 5000 environments.



Only the value cell that appears white are editable.



The new value that is entered must be within the minimum value and maximum value that is displayed in the corresponding columns. The minimum and maximum values are specific to the device and the parameter being changed. After entering the new value, the value is written to the device.

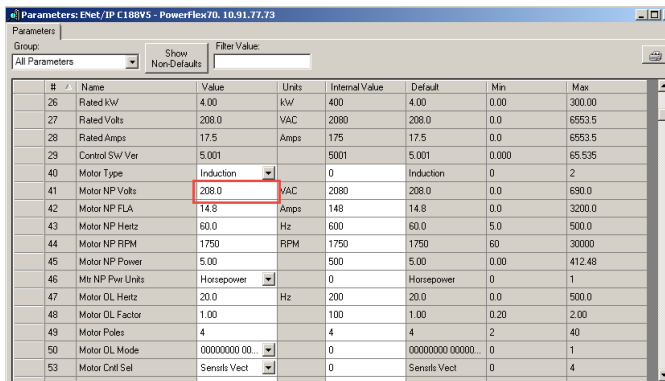

#	Name	Value	Units	Internal Value	Default	Min	Max
26	Rated kW	4.00	kW	400	4.00	0.00	300.00
27	Rated Volts	208.0	VAC	2080	208.0	0.0	6553.5
28	Rated Amps	17.5	Amps	175	17.5	0.0	6553.5
29	Control SW Ver	5.001		5001	5.001	0.000	65.535
40	Motor Type	Induction		0	Induction	0	2
41	Motor NP Volts	208.0	VAC	2080	208.0	0.0	690.0
42	Motor NP FLA	14.8	Amps	148	14.8	0.0	3200.0
43	Motor NP Hertz	60.0	Hz	600	60.0	5.0	590.0
44	Motor NP RPM	1750	RPM	1750	1750	60	30000
45	Motor NP Power	5.00		500	5.00	0.00	412.48
46	Mt NP Pwr Units	Horsepower		0	Horsepower	0	1
47	Motor DL Hertz	20.0	Hz	200	20.0	0.0	500.0
48	Motor DL Factor	1.00		100	1.00	0.20	2.00
49	Motor Poles	4		4	4	2	40
50	Motor DL Mode	00000000.00.		0	00000000.00000.	0	1
53	Motor Ctrl Sel	Sensits Vect		0	Sensits Vect	0	4


4. After changing the parameter, Press Enter on your keyboard or click outside of the selected column to save the changed values.

Advanced Spreadsheet View Options


These sections describe the advanced Spreadsheet view options.

Edit or Add I/O

The IntelliCENTER software lets you add new I/O points to a device, which wasn't previously used. You can also change the configuration of existing I/O points.

1. To launch the Spreadsheet view, click .
2. Select a device on the Spreadsheet view and right-click and click Edit I/O.


You can also click  at bottom of Spreadsheet view after selecting the device.

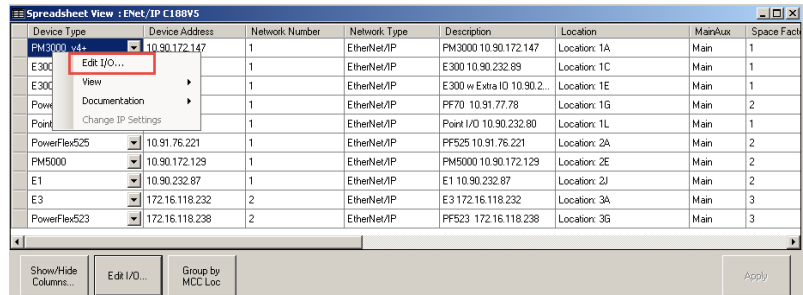

Device Type	Device Address	Network Number	Network Type	Description	Location	Main/Aux	Space Fact
PM3000 v1	10.90.172.147	1	EtherNet/IP	PM3000 10.90.172.147	Location: 1A	Main	1
E300		1	EtherNet/IP	E300 10.90.232.89	Location: 1C	Main	1
E300		1	EtherNet/IP	E300 w Extra ID 10.90.2...	Location: 1E	Main	1
PowerFlex525		1	EtherNet/IP	PF70 10.91.77.78	Location: 1G	Main	2
Point		1	EtherNet/IP	Point I/O 10.90.232.80	Location: 1L	Main	1
PowerFlex525	10.91.76.221	1	EtherNet/IP	PF525 10.91.76.221	Location: 2A	Main	2
PM5000	10.90.172.129	1	EtherNet/IP	PM5000 10.90.172.129	Location: 2E	Main	2
E1	10.90.232.87	1	EtherNet/IP	E1 10.90.232.87	Location: 2J	Main	2
E3	172.16.118.232	2	EtherNet/IP	E3 172.16.118.232	Location: 3A	Main	3
PowerFlex523	172.16.118.238	2	EtherNet/IP	PF523 172.16.118.238	Location: 3G	Main	3

The Add an I/O Point Wizard dialog box that appears lists the I/O points for that particular device.

3. To change the configuration of existing I/O points, use the pull-down menu, and choose another configuration.

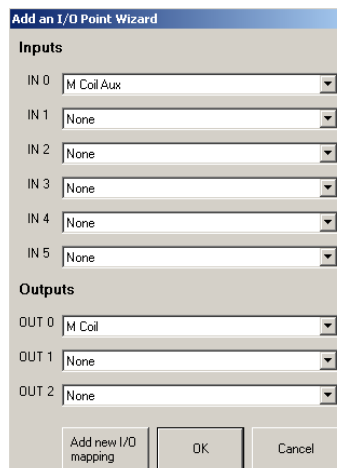

Add an I/O Point Wizard

Inputs

IN 0: M Coil Aux

IN 1: None

IN 2: None

IN 3: None

IN 4: None

IN 5: None


Outputs

OUT 0: M Coil

OUT 1: None

OUT 2: None

Buttons: Add new I/O mapping, OK, Cancel

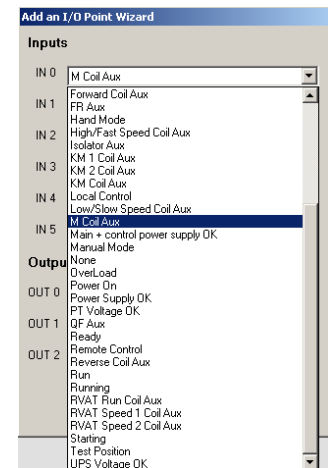

Add an I/O Point Wizard

Inputs

IN 0: M Coil Aux

IN 1: Forward Coil Aux

IN 2: FR Aux

IN 3: Hand Mode

IN 4: High/Fast Speed Coil Aux

IN 5: Isolator Aux

IN 6: KM 1 Coil Aux

IN 7: KM 2 Coil Aux

IN 8: KM Coil Aux

IN 9: Local Control

IN 10: Low/Slow Speed Coil Aux

IN 11: M Coil Aux

IN 12: Main + control power supply OK

IN 13: Manual Mode

Outputs

OUT 0: None

OUT 1: OverLoad

OUT 2: Power On

OUT 3: Power Supply OK

OUT 4: PT Voltage OK

OUT 5: QF Aux

OUT 6: Ready

OUT 7: Remote Control

OUT 8: Reverse Coil Aux

OUT 9: Run

OUT 10: Running

OUT 11: RVAT Run Coil Aux


OUT 12: RVAT Speed 1 Coil Aux


OUT 13: RVAT Speed 2 Coil Aux

OUT 14: Starting

OUT 15: Test Position

OUT 16: UPS Voltage OK

4. Click OK to save the modification.
5. To Add a new I/O device mapping, click  at the bottom of Add an I/O Point Wizard dialog box.
6. The Add a New I/O Device dialog box appears.

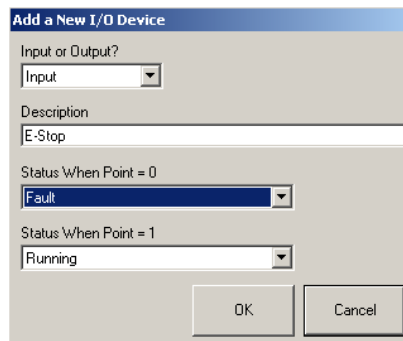

Add a New I/O Device

Input or Output?: Input

Description: E-Stop

Status When Point = 0: Fault

Status When Point = 1: Running

Buttons: OK, Cancel


After customizing the new I/O device, the new I/O point appears in the pull-down menus of the Add an I/O Point Wizard dialog box.

Edit Standard I/O Settings


To change the default Standard I/O settings, follow these steps.

IMPORTANT You must have Administrator rights to edit Standard I/O settings.

- From the Edit menu, choose Edit Standard I/O.

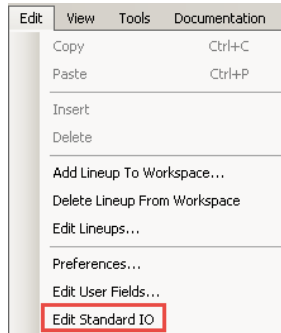


The Standard I/O dialog box appears.

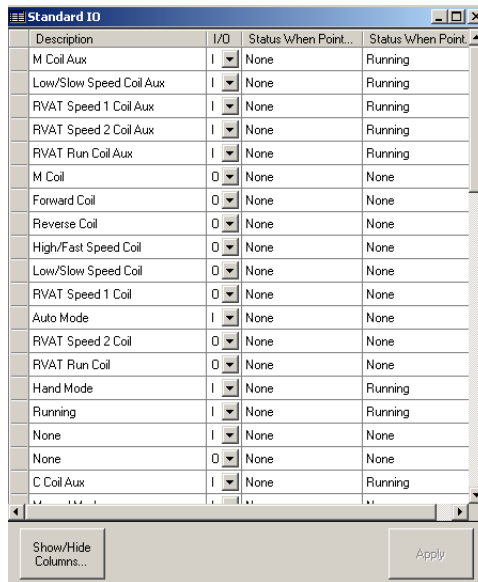

You can change the description or the choice of Input or Output.

- From the I/O field pull-down menu, change the value. You can also change the interpreted status for a device when the I/O is on or off.
- Click 'Status When Point = 0' or 'Status When Point = 1'.

The Please Select a Status Dialog box appears.

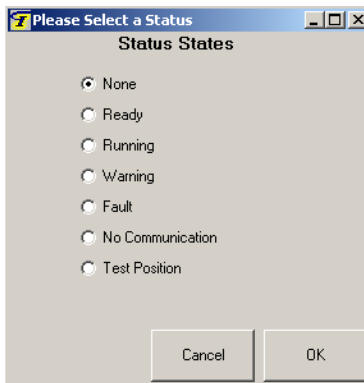

- Select the Status value and click OK.



The lineup must be closed and then reopened in the IntelliCENTER software for the new I/O configuration to be active.


Advanced Event Log View Options

These sections describe the advanced Event Log view options.

Configure Auto Logging

You can determine what is logged automatically in the Event log.

1. From the Edit menu, choose Preferences.
Preferences dialog box appears.
2. Click the Logging tab in the dialog box.

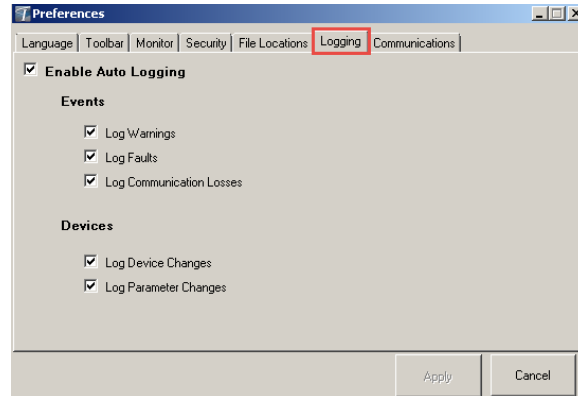


3. To enable Auto logging function, check Enable Auto Logging.

The devices and events that are listed are events or device changes that IntelliCENTER software logs automatically. You can check/uncheck the Events and Devices and choose the data that gets logged for the MCC lineup.

Manual LogginMCC-UM002C-EN-Pg

The software also lets you log events manually. To log the event manually, follow these steps.

1. Click  from the tool bar.
The Event log appears.




The Event Log view can also be launched from Menu Bar. Click View Tab > Events.


The Event view dialog box appears.

2. Right-click on the Event Log view and choose Insert.

Device Serial N.	Date	Device Description	Device Location	Event Description	Device Type	User1
1076081248	05/27/2015 12:54:38	PF70 10.91.77.78	Location: 1G	Serial number changed on device	PowerFlex70	
1496863829	10/08/2013 14:51:51	PM5000.10.90.172.129	Location: 2E	Device Attribute changed. Device Address= 10...	FM5000	
2532838432	05/03/2012		Location: 1A	Serial number changed on device	PM3000_v4+	
4294967295	03/19/2015		Location: 3G	Device Attribute changed. Device Address=	PowerFlex523	
4278255380	05/27/2015		Location: 2A	Fault: 114	PowerFlex525	
4294967295	03/19/2015 11:18:49	PFS23 172.16.118.238	Location: 3G	Device Attribute changed. Device Type= None	PowerFlex523	
538979905	11/09/2011 14:27:05	E1 10.90.232.87	Location: 2J	Warning: I/O Power Supply OK = 0	E1	
1063	11/09/2011 14:17:19	E300 10.90.232.89	Location: 1C	Device Attribute changed. Device Type= E3	E300	
1611006295	03/19/2015 11:22:39	E300 10.90.232.89	Location: 1C	Serial number changed on device	E300	
538778500	11/09/2011 14:09:07	PF70 10.91.77.78	Location: 1G	Device Attribute changed. Network Number= 1	PowerFlex70	
1078574823	11/09/2011 14:14:12	Point I/O 10.90.232.80	Location: 1L	Serial number changed on device	Point I/O AENT	
538973534	10/06/2013 12:23:22	PF70 10.91.77.78	Location: 1G	No Communication	PowerFlex70	
4294967295	07/11/2015 08:45:59	PM3000.10.90.172.147	Location: 1A	Serial number changed on device	PM3000_v4+	
1278364999	12/01/2011 16:23:12	PM5000.10.90.172.129	Location: 2E	Device Attribute changed. Device Address= 10...	FM5000	
1278364999	11/09/2011 14:09:06	PM5000.10.90.172.129	Location: 2E	Device Attribute changed. Network Number= 1	FM5000	
4294967295	03/31/2015 13:09:23	PFS23 172.16.118.238	Location: 3G	Device Attribute changed. Device Type= 17...	PowerFlex523	
2151400886	03/19/2015 11:18:49	E3 172.16.118.232	Location: 3A	Device Attribute changed. Device Type= None	E3	
538973534	05/27/2015 12:53:24	PF70 10.91.77.78	Location: 1G	Device Attribute changed. Device Address= 10...	PowerFlex70	
4294967295	03/31/2015 13:09:23	PFS23 172.16.118.238	Location: 3G	Device Attribute changed. Network Number= 2	PowerFlex523	

The Add an Event, Step 1 dialog box appears.

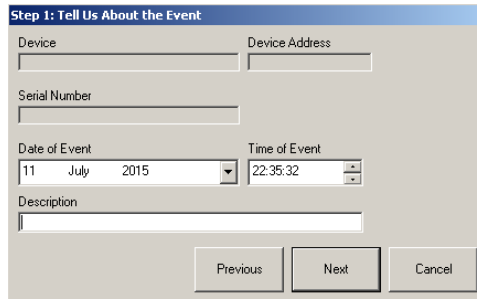

3. Enter the description and click Next.
The User Field dialog box appears.
4. Enter the necessary user field information and click Finish.
The Event Log view appears.
5. Click  to Save the Manual Event to the Event log.
The event is now recorded and can be viewed by anyone logging in to the software. The User Fields at the top of the dialog box are editable for a more accurate description

Advanced Electronic Documentation Options

IntelliCENTER software lets you add new documents (drawings, manuals, and spare parts list) associated with the lineup.

Adding Additional User Manual


To view the user manual for the device, follow these steps,

1. Click the device in the Elevation view.




To see the list of the user manuals, do not click any device, click outside of the Elevation view.

2. From the Documentation menu, choose Manuals.

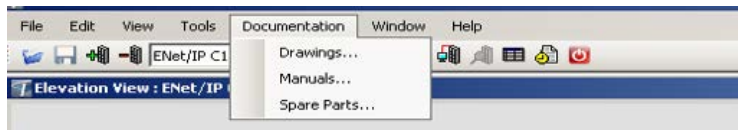

The user manual selection dialog box appears.

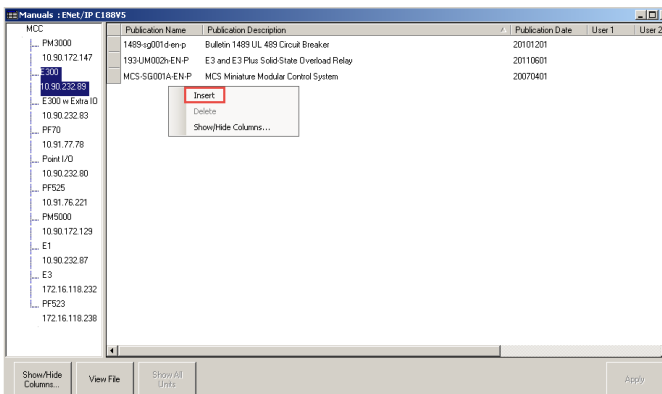

3. Right-click on the user manual selection dialog box and choose Insert.
The software can associate a manual with an IntelliCENTER MCC or a unit so that the manual can be viewed when the unit is selected.
4. When the user manual view dialog box appears, select the item to which the manual applies in the directory tree on the left.
The Add a Manual wizard appears.

- Complete all required fields and click Next.

You can edit the User Fields at the top of the dialog box for a more accurate description. See [Edit User Field on page 80](#) for more details.

- To save the new manual configuration, click Apply.
The manual is referenced and accessible in the software at the level that is highlighted at the beginning of this procedure.

Adding Additional Spare Parts

To view the spare parts list for the device, follow these steps.

- Click the device in the Elevation view.



To see the list of the spare parts, do not click any device, click outside of the Elevation view.

- From the Documentation menu, choose Spare Parts.
The spare parts dialog box appears.
- Right-click on the spare parts selection dialog box and choose Insert.


Device Description	Device Location	Device Type	Quantity Required
E1 10.90.232.87	Location: 2	E1	3
PF52		PowerFlex525	3
PM3		PM3000_v4+	3
PM5		PM5000	3
PM5000 10.90.172.129	Location: 2	PM5000	2
E1 10.90.232.87	Location: 2	E1	2
PF525 10.91.76.211	Location: 2	PowerFlex525	2

The Add a Spare Part dialog box appears.


- Add all required information and click Next.

The Quantity dialog box appears.

- Add the information and click Next.

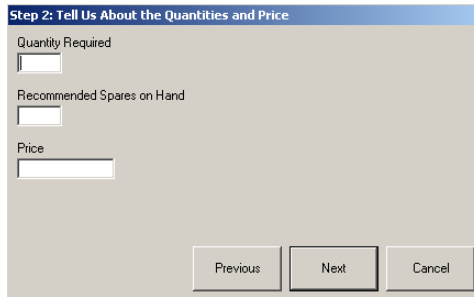

6. The Edit User Field dialog box appears.
7. Enter the information and click Finish.
The new spare part is added to the list.

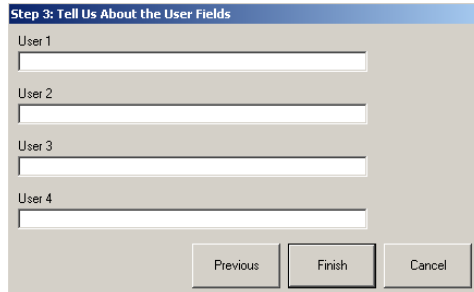

Adding Additional CAD Drawings

To view the CAD drawings for the device, follow these steps.

1. Click the device in Elevation view.




To see the list of the drawings, do not click any device, click outside of the Elevation view.

2. From the Documentation menu, choose Drawings.
The Drawing view dialog box appears.
3. Right-click and choose Insert.

The software can associate a custom CAD drawing with an IntelliCENTER MCC or unit so that the drawing can be viewed when that item is selected.

4. To configure a drawing to a specific unit, select the item to which the drawing applies in the directory tree on the left.

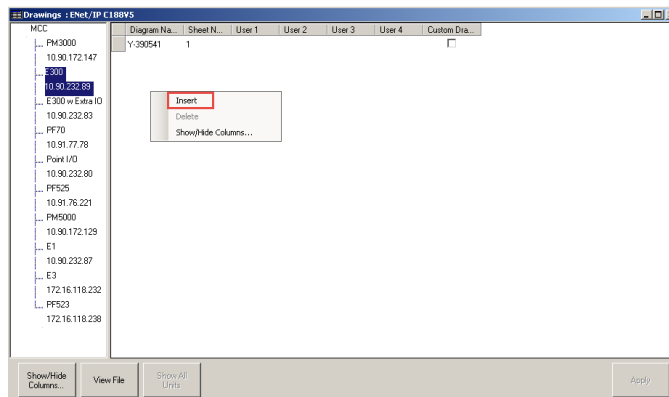

The Add a drawing dialog box appears.

5. Enter all necessary information and click Next.

Step 1: Tell Us About the Drawing

PM5000 10.90.172.129

Diagram Name

Sheet Number
1

Filename



The filename can be any file that is on the same network or computer as the IntelliCENTER software.

The User Edit Field dialog box appears.

6. Enter details and Click Finish.

Step 2: Tell Us About the User Fields

User 1

User 2

User 3

User 4

7. The Drawing view dialog box appears.
8. To save the new configuration, click Apply.

Notes:

ActiveX Controls

ActiveX controls are available in the IntelliCENTER® software to interface the Elevation, Spreadsheet, Documents, and Monitor views into HMI applications, such as FactoryTalk® View SE and RSView®32. ActiveX objects use the same configuration database as IntelliCENTER software uses. The ActiveX objects also require a NetLinX connection to the device being viewed. The ActiveX objects do not require any entries into the FactoryTalk® View tag database. All connections to the end device are through RSLinx® just as IntelliCENTER software uses.

From the Start menu, choose Programs>IntelliCENTER>IntelliCENTER Help for the programming information on individual controls.

Elevation ActiveX Control

This control provides a means to show the Elevation view to monitor the status of a lineup.

Spreadsheet ActiveX Control

This control provides a way to view data for one device or an entire lineup.

Documents ActiveX Controls

This control provides a way to view drawings, manuals, spare parts, and events for a specific lineup or device.

Monitor ActiveX Control

This control provides the features of the standard Monitor view in the IntelliCENTER software. You can use it to view, trend, and change parameters.

IMPORTANT ActiveX Controls are used for monitoring purposes only. To change the configuration of the MCC lineup, a complete installation of the IntelliCENTER software is needed.

For information on configuring ActiveX controls for IntelliCENTER software, see the IntelliCENTER ActiveX Application Note, publication [MCC-AT002](#).

Notes:

RSLinx Classic Launch Control Panel

This section has information about how to use the RSLinx® Classic Launch Control Panel.

IntelliCENTER Software Not Starting



If IntelliCENTER software is not starting, follow these steps.

1. From the Start Menu, choose All Programs>Rockwell Software>RSLinx Classic>RSLinx Classic Launch Control Panel.
2. Click Stop and check Always Run As a Service.
3. To run RSLinx Classic software as a service, click Start.
4. Start IntelliCENTER software.

RSLinx Classic Software Not Starting

If RSLinx Classic software is not starting, follow these steps.

1. From the Start Menu, choose All Programs>Rockwell Software>RSLinx Classic>RSLinx Classic Launch Control Panel.
2. Click Stop and uncheck Always Run As a Service.
3. Start RSLinx Classic software.

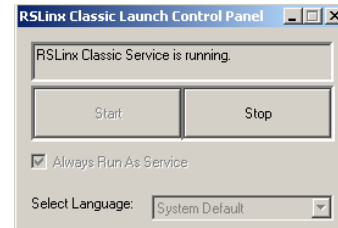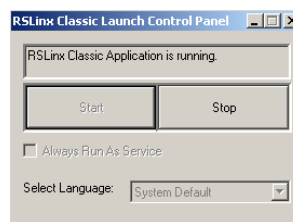

Notes:

Compatible Device List

There are various supported devices in IntelliCENTER software.

Table 4 - IntelliCENTER Software Compatible Device List

	Device	Network Supported	
		EtherNet/IP	DeviceNet
	825P	Yes	Yes
	857	Yes	No
	DSA	No	Yes
	E1	Yes	Yes
	E3	Yes	Yes
	E300	Yes	No
	IntelliVAC™ Plus	No	Yes
	Point I/O™ ADN	No	Yes
	Point I/O AENT	Yes	No
	PowerFlex® 523	Yes	Yes
	PowerFlex 525	Yes	Yes
	PowerFlex 753	Yes	Yes
	PowerFlex 755	Yes	Yes
	PowerFlex 755T	Yes	Yes
	PowerMonitor™ 1000	Yes	No
	PowerMonitor 5000	Yes	Yes
	SMC™ Flex	Yes	Yes
	Stratix Managed Ethernet Switch	Yes	No
	Stratix 5200	Yes	No
	Startix 5400	Yes	No
	Emax2 with Ethernet	Yes	No
	Verisafe ATV with Ethernet	Yes	No

Table 4 - IntelliCENTER Software Compatible Device List

	Device	Network Supported	
		EtherNet/IP	DeviceNet
Legacy Devices	160	No	Yes
	825	No	Yes
	1305	No	Yes
	1336 FORCE™	No	Yes
	1336 IMPACT™	No	Yes
	1336 PLUS™	No	Yes
	1336 PLUS™ II	No	Yes
	1790D-T8A0	No	Yes
	PowerFlex 40	Yes	Yes
	PowerFlex 400	Yes	Yes
	PowerFlex 70	Yes	Yes
	PowerFlex 700	Yes	Yes
	PowerFlex 700H	Yes	Yes
	PowerFlex 700S	Yes	Yes
	PowerFlex 700V	Yes	Yes
	PowerMonitor™ II	No	Yes
	PowerMonitor 3000	Yes	Yes
	SMC™	No	Yes
	SMP3	No	Yes
	XM-120	No	Yes

Web page functionality for each device varies and for detailed information see individual device documentation.

Table 5 - Web Page Enabled Devices

Device	Web Page Enabled Support
825P	No
857	No
E1	Yes
E3 via 2100-ENET	No
E300	Yes
PowerMonitor 1000	Yes
PowerMonitor 3000	Yes
PowerMonitor 5000	Yes
Point I/O AENT	Yes
PowerFlex 40/400	Yes
PowerFlex 525	No
PowerFlex 70/700	Yes
PowerFlex 753/755	Yes
SMC Flex	Yes
Stratix 5700	Yes
Stratix 5200	No
Emax 2	No
Verisafe ATV with Ethernet	Yes

The parameters that are displayed in the Monitor view varies for each device. For detailed parameter information, see individual device documentation and EDS files.

Table 6 - Monitor View Compatibility Table

Device	Monitor View Support	Type of Monitor View	Ability to Configure Parameters Via Monitor View
825P	Yes	Monitor view for Motor Protection Devices, Power Monitors, and I/O Devices	Yes
857	Yes	Monitor view for Motor Protection Devices, Power Monitors, and I/O Devices	Yes
E1	Yes	Monitor view for Motor Protection Devices, Power Monitors, and I/O Devices	Yes
E3 via 2100-ENET	Yes	Monitor view for Motor Protection Devices, Power Monitors, and I/O Devices	Yes
E300	Yes	Monitor view for Motor Protection Devices, Power Monitors, and I/O Devices	Yes
PowerMonitor 1000	No	No	No
PowerMonitor 3000	Yes	Monitor view for Motor Protection Devices, Power Monitors, and I/O Devices	No
PowerMonitor 5000	Yes	Monitor view for Motor Protection Devices, Power Monitors, and I/O Devices	Yes
Point I/O AENT	Yes	Monitor view for Motor Protection Devices, Power Monitors, and I/O Devices	Yes
PowerFlex 40/400	Yes	Monitor view for Variable Frequency Drives and Soft Starters	Yes
PowerFlex 525	Yes	Monitor view for Variable Frequency Drives and Soft Starters	Yes
PowerFlex 70/700	Yes	Monitor view for Variable Frequency Drives and Soft Starters	Yes
PowerFlex 753/755	Yes	Monitor view for Variable Frequency Drives and Soft Starters	Yes
SMC-Flex	Yes	Monitor view for Variable Frequency Drives and Soft Starters	Yes
Stratix 5700	Yes	Monitor view for Motor Protection Devices, Power Monitors, and I/O Devices	No
PowerFlex 755T	No	No	No
Emax 2	No	No	No
Verisafe AVT	No	No	No
Stratix 5200	Yes	Monitor view for Motor Protection Devices, Power Monitors and I/O Device	No
Stratix 5400	No	No	No

The device IP address settings can be changed from the following views in the IntelliCENTER software. For further details, see individual device documentation.

Table 7 - Device IP Address

Device	Device IP Address Setting		
	Spreadsheet View	Web Page	New Monitor View
825P	Yes	No	No
857	No	No	No
E1	Yes	Yes	No
E3 via 2100-ENET	Yes	No	No
E300	Yes	Yes	No
PowerMonitor 1000	No	Yes	No
PowerMonitor 3000	No	No	No
PowerMonitor 5000	No	Yes	No
Point I/O AENT	Yes	No	No
PowerFlex 40/400	No	Yes	Yes
PowerFlex 525	No	No	Yes
PowerFlex 70/700	No	Yes	Yes
PowerFlex 753/755	No	Yes	Yes
SMC-Flex	No	Yes	Yes
Stratix 5700	No	Yes	No
PowerFlex 755T	Yes	No	No
Emax 2	No	No	No
Verisafe AVT	No	Yes	No
Stratix 5200	No	Yes	No
Stratix 5400	No	Yes	No

The following devices are supported with the IntelliCENTER Energy application.

Table 8 - IntelliCENTER Energy Compatible Devices

Device	Parameter Logging	
	Power, Voltage, Current Parameters	Only Current Parameter
E1	No	Yes
E3	No	Yes
E3 EC5	Yes	No
E300	Yes	No
PowerMonitor 1000	Yes	No
PowerMonitor 3000	Yes	No
PowerMonitor 5000 (M5 and M6)	Yes	No
Point I/O AENT	Yes	No
PowerFlex 40/400	Yes	No
PowerFlex 525	Yes	No
PowerFlex 70/700	Yes	No
PowerFlex 753/755	Yes	No

Your Support Plan

Change of Registration

If you transfer the software to another party, you are required to complete the form at <https://activate.rockwellautomation.com/TransferRegistration>. Select Transfer Software Registration on the left to view the form.

The products that you transferred are re-registered to the new owner for support updates and other services.

Product Updates

IntelliCENTER software updates are provided at no charge to users of registered software under a support contract. You can verify that you have the most recent major version release of your software product by visiting <https://compatibility.rockwellautomation.com/Pages/home.aspx>, then by choosing Get Downloads > Find Product Downloads. Otherwise, support upgrades or any software downloads are handled by customer care/software team. See https://rockwellautomation.custhelp.com/app/answers/answer_view/a_id/166754. You are entitled to available updates as long as you remain in a TechConnect? contract.

If the update you need is not available on the web or if you do not have web access, contact IntelliCENTER Support Services to request a product update.

IntelliCENTER Support Services

Phone: (440) 646-5800

FAX: (414) 382-0505

Email: raictechsupport@ra.rockwell.com

Notes:

A

ActiveX 9, 14, 105
 documentation 105
 elevation 105
 monitor 105
 spreadsheet 105

add
 a lineup 31
 a peripheral device 96
 auxiliary device 86
 CAD drawings 102
 I/O 97
 manuals 100
 new items 66
 new unit 84
 new user 65
 spare parts 101

add a new Ethernet switch unit 84
add device to horizontal wireway 87
add or remove section 89
additional features
 add new user 65
 backup data 69
 change password 67
 create cd 71
 disable security 75
 event deletion tool 68
 external applications 73
 file location 75
 inactivity timeout 74
 legend options 73
 login 65
 polling rate 76
 restore data 70
 security 65
 user accounts 65

additional software 12
advanced features
 device description tool 71
 language options
 language options 72

allowed programs 11

B

backup data 69
benefits 9

C

CAD drawings 48
change
 analog meter data 94
 data trend parameters 90
 default parameters 92
 parameter values 93
 parameters and vaules 96
 password 67
 process display 95
 registration 113

compatible devices 109
 device IP addresss 112
 IntelliCENTER Energy 112
 monitor view 111

computer connections
 ControlNet 12
 DeviceNet 12
 Ethernet 12

configure auto log 99
controller I/O tree 51
create cd 71
csv file 67

D

data backup 69
data disk 14, 15
data disks 19
data restore 70
default file location 75
delete
 auxiliary device 89
 device 89
 event 68

device description tool 71
device/unit information 67
DeviceNet driver 22
disable security 75
documentation 46
 CAD drawings 48
 spare parts 48
 user manuals 46

documentation view 9
 add CAD drawings 102
 add manuals 100
 add spare parts 101

drag and drop 88
duplicate device or section 84

E

edit
 I/O 97
 I/O parameters 98
 lineup 83
 position of device or section 83

EDS files 19, 77

elevation view 9, 27, 29

- add auxiliary device 86
- add new device to horizontal wireway 87
- add new Ethernet switch unit 84
- add new unit 84
- add or remove section 89
- delete auxiliary device 89
- delete device 89
- device 35
- documentation 35
- duplicate device or section 84
- edit position of device or section 83
- event log 35
- features 34
- legend 36
- monitor device 34
- real-time monitoring 33
- section 35
- view web page 34
- window size 33
- wireway devices 88

Ethernet

- driver 20

Ethernet switch add to elevation view 84, 87**EtherNet/IP** 51

- driver 21
- view web page 34

event data 67**event deletion tool** 68**event log**

- configure auto log 99
- manual log 99

events log view 46

- auto log 46

export data

- device/unit information 67
- event data 67
- spare parts 67

export data trend 91**external applications** 73**F****features** 9**file extensions** 11**file location** 75**firewall** 11**folders** 11**H****horizontal wireway devices** 87**I****inactivity timeout** 74**integration assistant** 9, 51

- IntelliCENTER Energy 55

IntelliCENTER

- benefits 9
- features 9
- file extensions 11
- folders 11
- not starting 107

IntelliCENTER Energy 9, 24, 55

- calendar trend 61
- compatible devices 112
- device setup 63
- energy meter data 63
- energy trend 62
- install 16
- required software 16
- run integration assistant from client 57
- run integration assistant from server 55
- system requirements 16
- views 60

IP address 112

- setup by using device web page 79
- setup by using monitor view for drives and starters 80
- setup by using spreadsheet view 78
- validate 79

L**launch the software** 23**legend** 30

- options 73

login 65**Logix 5000** 51**M****manual log** 99**menu bar** 28**modify device configuration** 66**monitor polling rate**

- polling rate
- monitor 76

monitor view 9

- advanced 38
- analog meters 38
- drives and starters 36, 39
 - device graphic view 39
 - device header 40
 - online device status 41
 - parameter view 42
 - process display 41
 - tool bar 40
- drives and startersbottom tab 41
- motor protection, power monitors, and I/O 36
- real-time data 37
- real-time monitoring 36
- reset faults 39

monitor view compatible 111**monitor view for drives and starters**

- add a peripheral device 96
- change data trend parameters 90
- change parameters 96
- change process display 95
- IP address change 80

monitor view for motor protection devices, power monitors, and I/O

- change analog meter 94
- change default parameters 92
- change parameter values 93
- export data trend 91

O

open 32
overview 9

P

ping time out rate 76
polling rate 76
 ping time out 76
 status 76
 trend 76
product updates 113

R

remove a lineup 31
restore data 70
RSLinx
 DeviceNet driver 22
 drivers 19
 Ethernet driver 20
 EtherNet/IP driver 21
 launch control panel 107
 not starting 107
 set up 19

S

save a workspace 32
security 65
 disable 75
 enable 75
 inactivity timeout 74
software not starting 107
spare parts 48, 67
spreadsheet view 43
 add I/O 97
 change I/O settings 45
 customize 45
 documentation 45
 edit I/O 44, 97
 edit I/O parameters 98
 group by MCC location 45
 IP address change 78
 show/hide columns 45
 validate IP address 79
 view 44
status bar 29
status polling rate 76
Studio 5000 51
support plan
 product updates 113
 registration 113
system requirements
 cd rom drive 11
 hard disk space 11
 mouse 11
 operating system 11
 processor 11
 RAM 11
 resolution 11

T

tool bar 28
trend polling rate 76

U

user accounts 65
user interface 27
 elevation view 29
 legend 30
 menu bar 28
 status bar 29
 toolbar 28
 workspace 29
user-defined fields 80

V

view
 documentation 9
 elevation 9
 monitor 9

W

web page
 IP address change 79
web page enabled devices
 compatible devices
 web page enabled 110
wireway devices
 add 87
workspace 29
 add a lineup 31
 customized 32
 open 32
 remove a lineup 31
write to device 66

Rockwell Automation Support

Use these resources to access support information.

Technical Support Center	Find help with how-to videos, FAQs, chat, user forums, Knowledgebase, and product notification updates.	rok.auto/support
Local Technical Support Phone Numbers	Locate the telephone number for your country.	rok.auto/phonesupport
Technical Documentation Center	Quickly access and download technical specifications, installation instructions, and user manuals.	rok.auto/techdocs
Literature Library	Find installation instructions, manuals, brochures, and technical data publications.	rok.auto/literature
Product Compatibility and Download Center (PCDC)	Download firmware, associated files (such as AOP, EDS, and DTM), and access product release notes.	rok.auto/pcdc

Documentation Feedback

Your comments help us serve your documentation needs better. If you have any suggestions on how to improve our content, complete the form at rok.auto/docfeedback.

Waste Electrical and Electronic Equipment (WEEE)




At the end of life, this equipment should be collected separately from any unsorted municipal waste.

Rockwell Automation maintains current product environmental compliance information on its website at rok.auto/pec.

1336 FORCE, 1336 IMPACT, 1336 PLUS, Allen-Bradley, FactoryTalk, EnergyMetrix, IntelliCENTER, IntelliVAC, POINT I/O, PowerFlex, PowerMonitor, Rockwell Automation, Rockwell Software, RSLogix 500, RSNetWorx, RSLinx, RSView, SMC, Stratix, and Studio 5000 are trademarks of Rockwell Automation, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies

Rockwell Otomasyon Ticaret A.Ş. Kar Plaza İş Merkezi E Blok Kat:6 34752, İçerenköy, İstanbul, Tel: +90 (216) 5698400 EEE Yönetmeliğine Uygundur

Connect with us.    

rockwellautomation.com ————— **expanding human possibility®**

AMERICAS: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000

EUROPE/MIDDLE EAST/AFRICA: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2663 0600

ASIA PACIFIC: Rockwell Automation SEA Pte Ltd, 2 Corporation Road, #04-05, Main Lobby, Corporation Place, Singapore 618494, Tel: (65) 6510 6608

UNITED KINGDOM: Rockwell Automation Ltd., Pitfield, Kiln Farm, Milton Keynes, MK11 3DR, United Kingdom, Tel: (44)(1908) 838-800

Publication MCC-UM002C-EN-P - April 2024

Supersedes Publication MCC-UM002B-EN-P - August 2016

Copyright © 2024 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.