Bulletin 1609 Surge Protective Device
(Cat 1609-SPD)
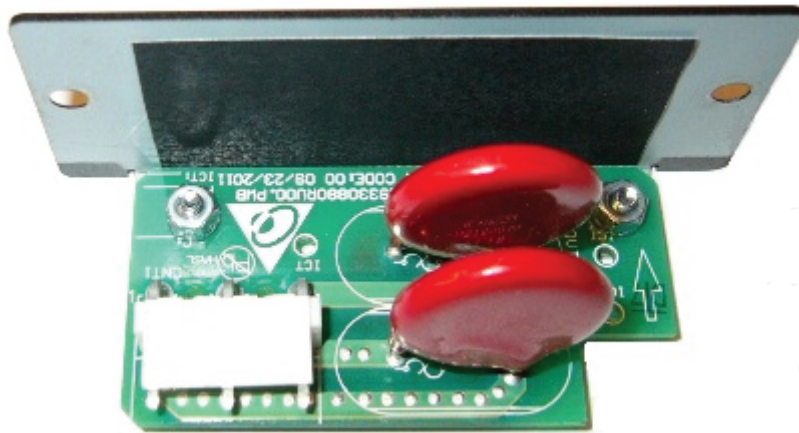
⚠ **Warning:** Do not service the 1609-SPD without disconnecting the power sources due to electric shock harzard for risk of severe injury or death.

⚠ **ATTENTION:** Please read and save these instructions. This manual contains important instructions for Bulletin 1609 Uninterruptible Power Supply. The installation and maintenance of the UPS must be entrusted only to authorized service engineers.

Contents for 1609-SPD Include:
- 1609-SPD Surge Protective Device
- 1609-SPD Installation Instruction
- 2 Screws

Installation

1. Remove AC Line power to the UPS.
2. Loosen the two screws that mount the 1609-SPD on to the UPS.
3. Take the 1609-SPD off the UPS and unplug the cable connection from the connector.
4. Plug the cable to the new replacement 1609-SPD card and place it back into the UPS.
5. Tighten the two screws to mount the 1609-SPD (torque of 8.7+/- 1.7 lb-in).

Additional Resources

1. Go to **http://www.rockwellautomation.com/literature**
2. Go to **Search**, select **Publication Number**.
3. Type the **Publication Number** in the search box and press enter.

1609-IN012 (1609-D UPS Installation Instructions)

1609-IN013 (1609-B UPS Installation Instructions)

1609-UM007 (1609 UPS Management Software User Manual)

1609-UM008 (1609 Network Management Card User Manual)

1609-UM009 (1609 UPS User Manual)